

Washer

User manual

WA21J7700G*

SSEC SEC

**SAMSUNG**

Contents

Safety information	4
What you need to know about the safety instructions	4
Important safety symbols	4
Important safety precautions	5
Installation	11
Unpacking your washer	11
Overview of your washer	12
Basic location requirements	14
Important note to installer	18
Step-by-step installation	18
Operating instructions	26
Loading your washer	26
Getting started	27
Washing a load of laundry	28
Control panel	28
Cycle overview	29
Options	30
Washing clothes using the cycle selector	33
ATC (Auto Temperature Control)	34
The basics	35
Detergent use	37
Features	38
Maintaining your washer	41
Cleaning the exterior	41
Cleaning the interior	41
Storing your washer	41
Preserving the top cover and the front frame	42
Cleaning the built-in sink and lint filter	42
Cleaning the dispensers	43
Eco Tub clean	45
Troubleshooting	46
Checkpoints	46
Information codes	50

Specifications	53
Fabric care chart	53
Helping the environment	55
Specification sheet	56
Cycle chart	57

Safety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washer's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine. Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

WARNING

Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage**.

CAUTION

Hazards or unsafe practices that may result in **personal injury and/or property damage**.

NOTE

Indicates that a risk of personal injury or material damage exists.

These warning signs are here to prevent injury to yourself and others.

Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Important safety precautions

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine.

The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Safety information

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

CAUTION

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

CAUTION

Do not use the water to exceed 50 °C when using the hot water in your washing machine.

Plastic parts may be deformed or damaged, and this may result in electric shock or fire.

Critical installation warnings

WARNING

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Plug the power cord into an AC 220 V / 50 Hz wall socket or higher and use the socket for this appliance only. Never use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.
- Plug the power plug into the wall socket so that the cord is running towards the floor. If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.

Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

Do not use an electric transformer.

- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, Insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Safety information

Installation cautions

CAUTION

This appliance should be positioned in such a way that the power plug is easily accessible.

- Failure to do so may result in electric shock or fire due to electric leakage.

Critical usage warnings

WARNING

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest Samsung Customer Service.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the lid.

- If trapped inside the product, children may suffocate to death.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.

- This may result in electric shock, fire, or an explosion.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not insert your hand or a metal object under the washing machine while an operation is in progress.

- This may result in injury.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.
- In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from doing it.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.

- Failure to do so may result in electric shock or fire.

Do not put your hand into the spinning tub during the spin cycle.

- This may result in injury. If the tub does not stop spinning within 15 seconds after you open the lid, contact your nearest Samsung Customer Service.

Usage cautions

CAUTION

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washing machine using a damp, soft cloth.

- Failure to do so may result in discolouration, deformation, damage, or rust.

The product you have purchased is designed for domestic use only.

Using the product for business purposes qualifies as a product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.

- This may result in electric shock or injury.

Safety information

Critical cleaning warnings

WARNING

Do not clean the appliance by spraying water directly onto it.

Do not use the strong acid cleaning agent.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

Installation

Follow these instructions carefully to ensure proper installation of the washer and to prevent accidents when using it.


Unpacking your washer

Unpack your washer and inspect it for shipping damage. Make sure you have received all the items shown below. If your washer was damaged during shipping, or you do not have all of the items, contact 0-2689-3232, 1800-29-3232.

To prevent personal injury or strain, wear protective gloves whenever lifting or carrying the unit.

WARNING

Packing materials can be dangerous to children; Keep all packing material (plastic bags, polystyrene, etc.) well out of children's reach.

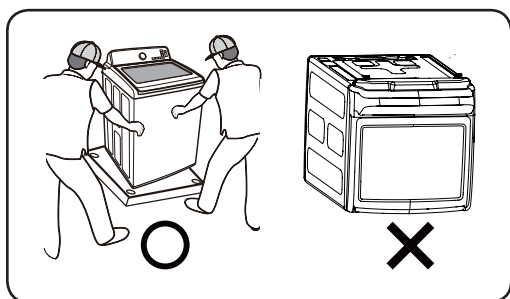

CAUTION


When unpacking the washer, 2 person collaboration is needed. To remove the cushion bottom of the packing materials, forward dumping is strictly prohibited.

Installation

Overview of your washer


Make sure all the parts are included in the product package. If you have a problem with the washer or the parts, contact a local Samsung customer center or the retailer.

Installation

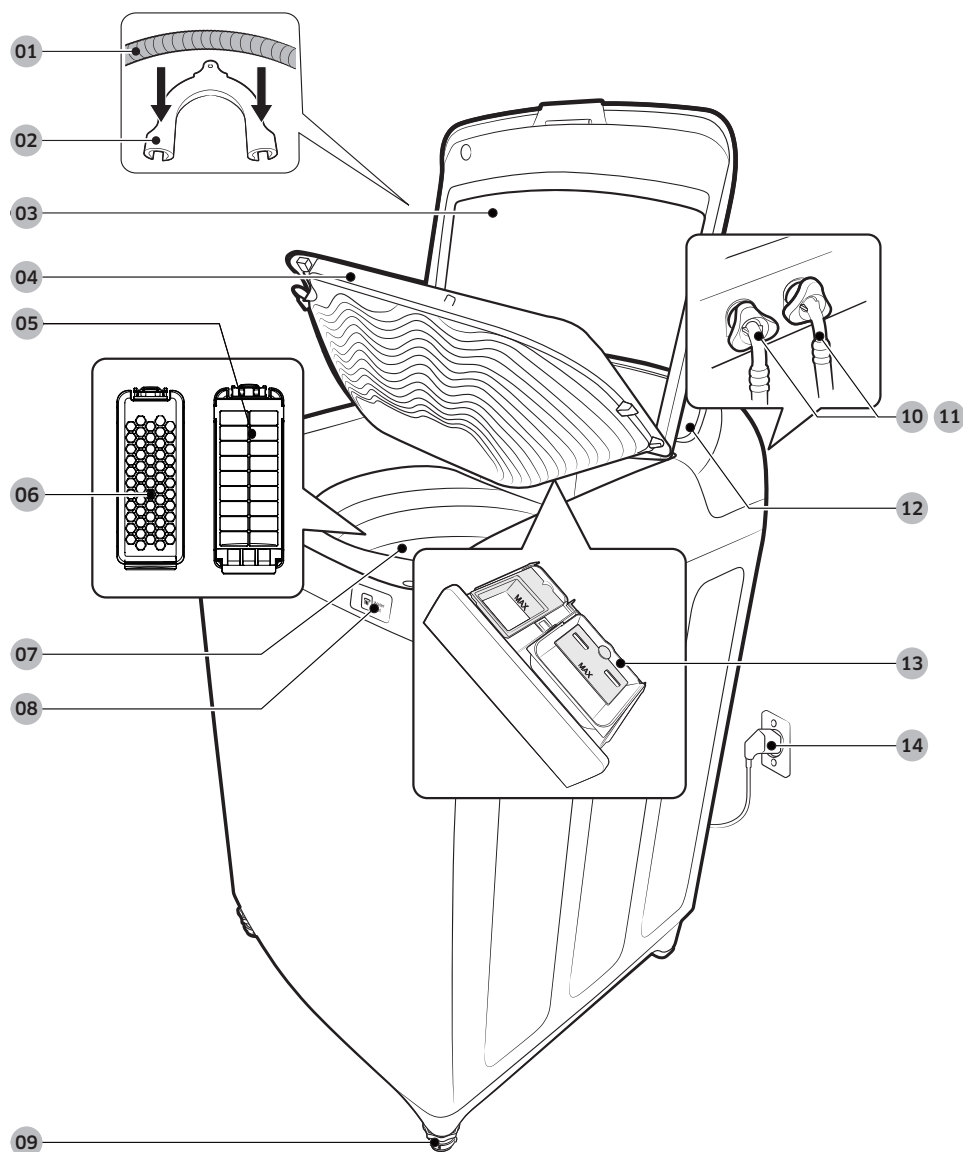


- | | | |
|-----------------------------|----------------------------|-------------------------|
| 01 Drain hose | 02 Hose guide | 03 Lid |
| 04 Built-in sink | 05 Filter-rear | 06 Filter-front |
| 07 Tub | 08 Water Jet | 09 Leveling feet |
| 10 Water hose (Cold) | 11 Water hose (Hot) | 12 Control panel |
| 13 Detergent drawer | 14 Power cord | |

 
Parts supplied




Hose guide

 


User manual

 


Plastic zip hose tie

 

Water intake cap

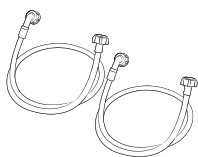

Water supply hoses

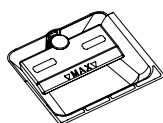

Assy drawer liquid

 
Tools needed for installation



Wrench



Flat screwdriver



Leveller

NOTE

- If you lose an accessory and want to purchase a replacement, contact the Samsung service center 0-2689-3232, 1800-29-3232.
- The design of the parts and accessories may differ from the pictures above. Their design is subject to change without notice for product improvement.
- Do not reuse old hoses. Only use new water supply hoses when you install the washer. Old water supply hoses can leak or burst causing flooding and property damage.
- Confirm that there are rubber washers inside each coupling of the water supply hoses.

Installation

Basic location requirements

Electrical

- 220 Volt 50 Hz fuse or circuit breaker.
- Individual branch circuit serving only your Washer is recommended.
- Your washer is equipped with a power cord.



CAUTION

Never use an extension cord.

Grounding

Electrical grounding is required for this appliance.

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.

This appliance is equipped with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.



WARNING

An improperly connected equipment-grounding conductor can increase the risk of electrical shock. Check with a qualified electrician or serviceman if you are not sure whether the appliance is properly grounded. Do not modify the plug provided with the appliance – if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Important safety precautions

To prevent unnecessary risk of fire, electrical shock or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No.70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.



CAUTION

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Water

To correctly fill your Washer in the proper amount of time, water pressure of 20 to 116psi (137 to 800kPa) is required.

Water pressure less than 20 psi may cause water valve failure, or may not allow the water valve to shut off completely, or may extend the fill time beyond what your Washer controls allow, causing your Washer to turn off. A time limit is built into the controls to prevent flooding in your home if a hose becomes loose.

The water faucets must be within 4 feet (122 cm) to the back of your Washer to match the inlet hoses provided with your Washer.



NOTE

Accessory inlet hoses are available in various lengths up to 10 feet (275 cm) for faucets that are further away from the back of your washer.

To avoid the possibility of water damage:

- Have water faucets easily accessible.
- Turn off faucets when the washer is not in use.
- Periodically check that there is no leakage from the water inlet hose fittings.

⚠ WARNING

Check all connections at the water valve and faucet for leaks

Drain facility

The recommended height of the standpipe is 39 in (99 cm). The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached to the washer at the factory.

Flooring

For best performance, you must install your washer on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced load situations. Carpeting and soft tile surfaces are contributing factors to vibration which can cause your washer to move slightly during the spin cycle. Never install your washer on a platform or weakly supported structure.

Location considerations

Do not install your washer in areas where water may freeze, since your washer will always retain some water in its water valve, pump, and hose areas. Frozen water can damage the belts, the pump, hoses, and other components.


Alcove or closet installation

Minimum clearances for closet and alcove installations:

Sides	1 in / 25 mm	Closet front	2 in / 51 mm
Rear	6 in / 152 mm	Top	21 in / 533 mm

If the washer and dryer are installed together, the closet front must have at least a 72 in² (465 cm²) unobstructed air opening. Your washer alone does not require a specific air opening.


Recessed area

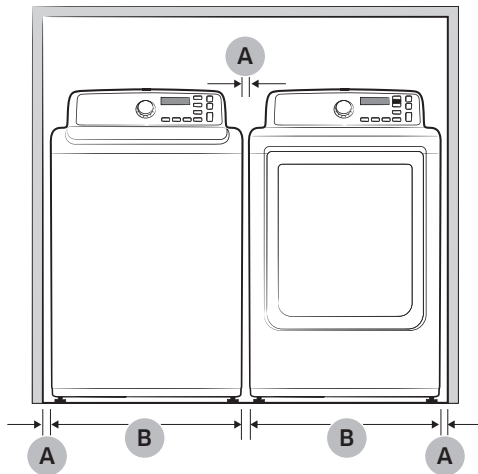

A	1 in (2.5 cm)
B	27.0 in (68.6 cm)


Installation

Side view - closet or confined area

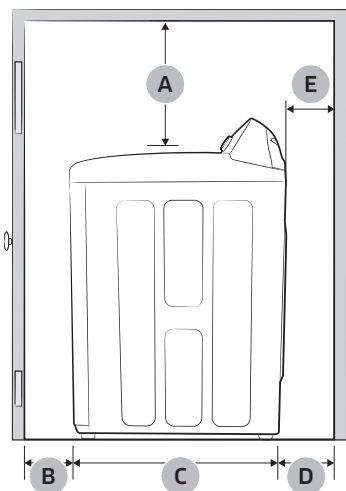


A	21 in (53.3 cm)
B	2 in (5.1 cm)
C	29.3 in (74.4 cm)
D	6 in (15.2 cm)
E	<p>Gap between end of water valve and the wall</p> <ul style="list-style-type: none"> Case 1. Assemble supply hose after installing : Over 3.9 in (10 cm). Case 2. Assemble supply hose before installing : Over 2.8 in (7 cm).


Required dimensions for Installation

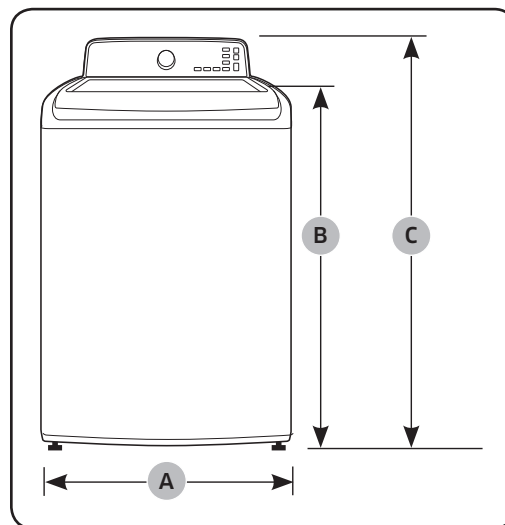


A	27.0 in (68.6 cm)
B	39.2 in (99.5 cm)
C	45.1 in (114.5 cm)

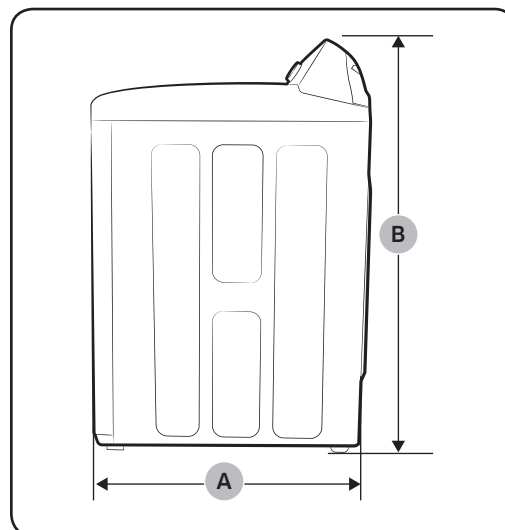

A	29.3 in (74.4 cm)
B	45.1 in (114.5 cm)

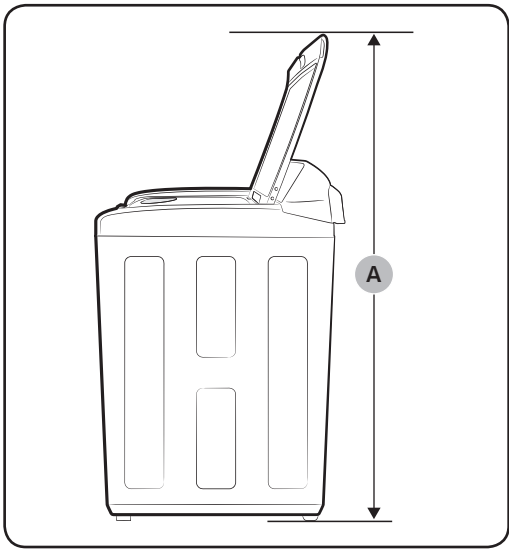

A	59.8 in (152.0 cm)
---	--------------------

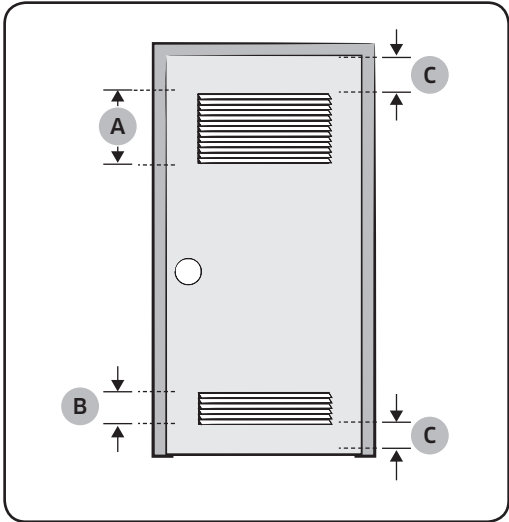

A*	48.0 in ² (310.0 cm ²)
B*	24.0 in ² (155.0 cm ²)
C	3.0 in (7.6 cm)



NOTE


* Required spacing

Installation

Important note to installer

Please read the following instructions carefully before installing your washer.
These instructions should be retained for future reference.
We recommend you hire a professional to install this washer.

Installation flow chart

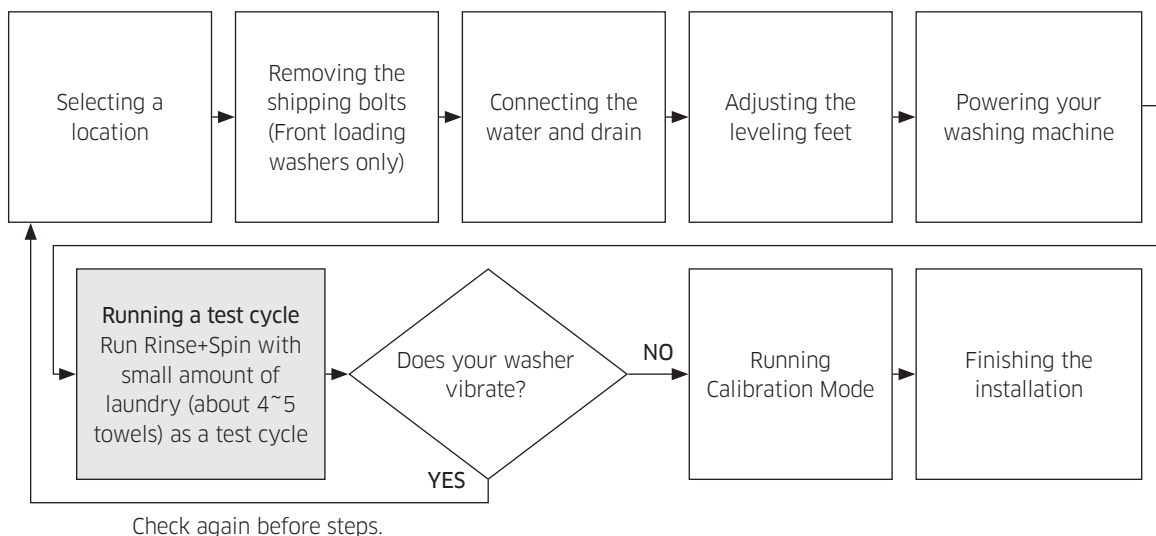

Step-by-step installation


STEP 1 Selecting a location

NOTE

Before you install the washer, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation.
- Is away from direct sunlight.
- Has adequate ventilation.
- Is not exposed to freezing temperatures (temperatures under 32 °F or 0 °C).
- Is away from heat sources such as oil or gas.
- Has enough space so that the washer doesn't rest on its power cord.

STEP 2 Connecting the water supply hose

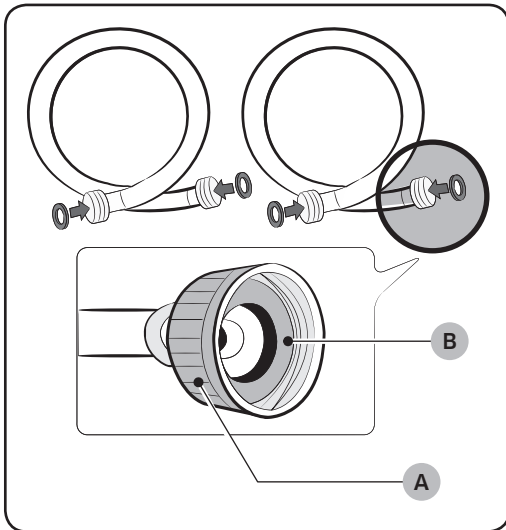

⚠ CAUTION

Before installing the water supply hoses, make sure there are **rubber gaskets (B)** inside the **couplings (A)** at both ends of each new water hose. Installing the water supply hoses without rubber gaskets can cause water leakage.


⚠ CAUTION

When you initially install the washer, be sure to use new hoses. Failing to do so may result in a water leakage or overflow and may damage your property.

⚠ CAUTION

Do not connect multiple water supply hoses together to increase the length of the supply hose. Hoses connected this way can leak and the leakage can cause electrical shock. If a hose is too short, replace the hose with a longer, high pressure hose.

Installation

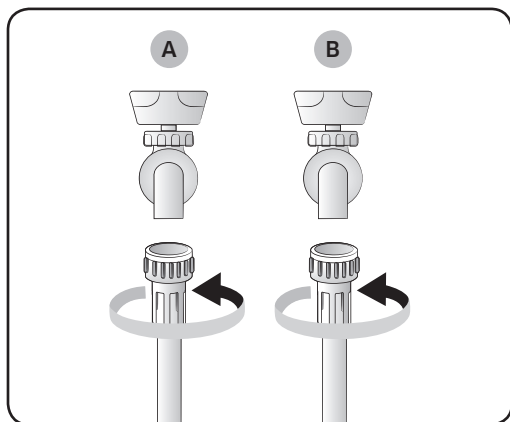


1. Connect the ends of the water supply hoses to the **hot (B)** and **cold (A)** faucets.
2. Tighten the fittings by hand until they are snug, and then tighten them an additional two-thirds of a turn with a wrench.

⚠ CAUTION


When you fasten the fittings, do not fasten them too tightly or apply tape or sealant to the faucets or water supply intakes. This can damage the fittings.

📄 NOTE

After you have connected the water supply hoses to the faucets, ensure that they are connected correctly by pulling the water supply hoses downwards.

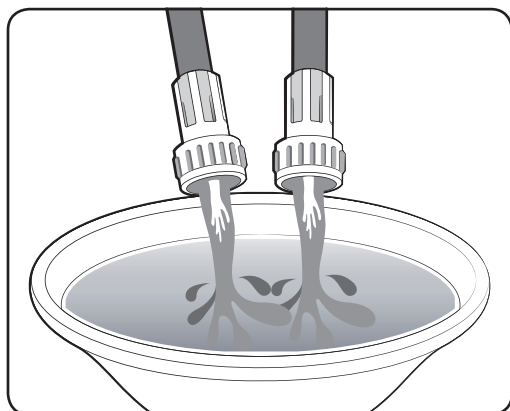


3. Place the unconnected ends of the hoses into a bucket and open the faucets connected to the two water supply hoses for 10 or 15 seconds to remove any foreign substances from the hoses. Close the faucets before continuing.

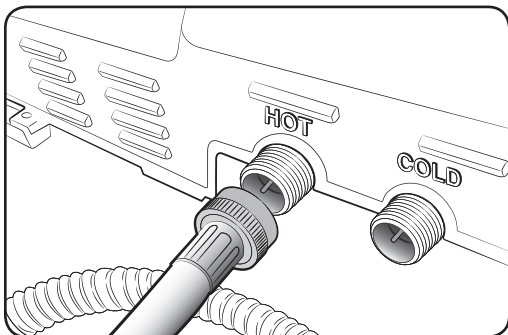

4. Connect the ends of the water supply hoses to the water supply intake connections at the back of the washer.

⚠ CAUTION


The water supply hose connected to the hot faucet must be connected to the hot water supply intake and the water hose connected to the cold faucet must be connected to the cold water supply intake.

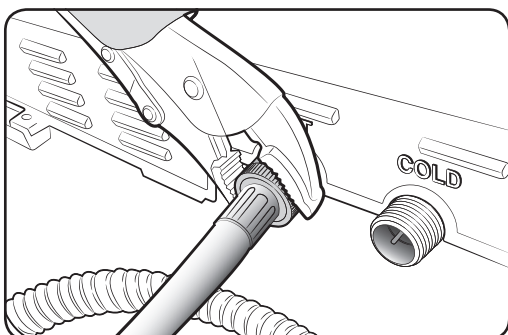

5. Tighten the fittings by hand until they are snug, and then tighten them an additional two-thirds of a turn with a wrench.

📖 NOTE

To ensure the correct water usage, connect both the hot and cold water faucets. If either or both are not connected, an “4C” (no fill) code can be displayed.

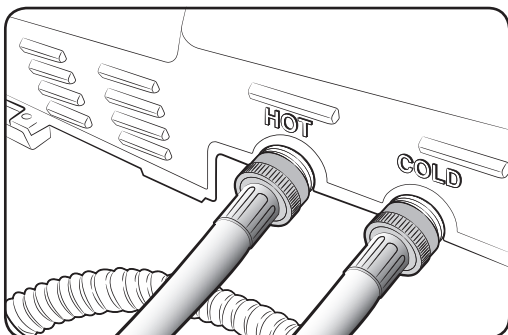

📖 NOTE

If you do not want to use the hot water supply hose, insert the water intake cap into the hot water supply intake hole. In this case, you must select the **Tap Cold** for the water temperature. If you select the **Tap Cold**, all the lamps for the water temperature options are turned off.

⚠ CAUTION


Confirm that the water supply hoses are not twisted or bent. If the hoses are twisted or bent, the hoses can leak and cause electric shock due to the water leakage.

6. Turn on the hot and cold water supplies and check all the water supply intake connections and the faucets for water leaks.

Installation

STEP 3 Connecting the drain hose


Installation

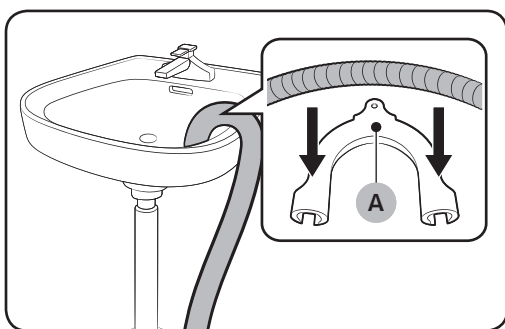

The end of the drain hose can be positioned in three ways:

Over the edge of a wash basin

Secure the **hose guide (A)** to the side of the basin wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

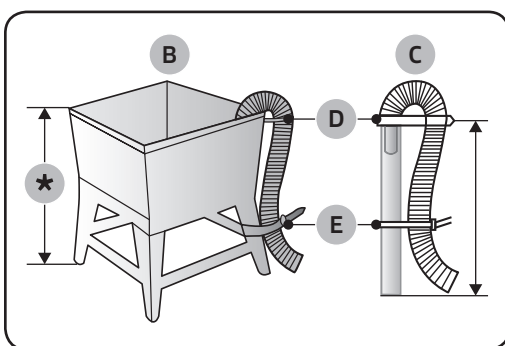


In a standpipe or laundry tub

The **standpipe (B)** and **laundry tub (C)** must be no shorter than 39 in (99 cm)* and no longer than 96 in (245 cm)*.

NOTE

- Make sure that the connection between the drain hose and the standpipe is not airtight.
- **D:** Hose retainer, **E:** Tie strap

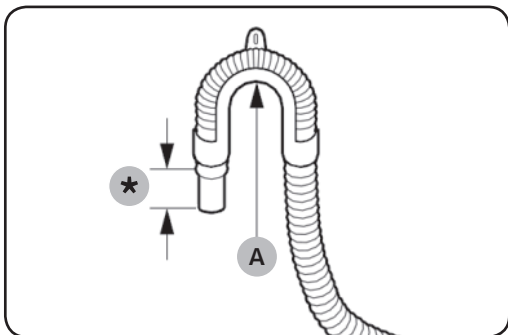

NOTE

Connect the **hose guide (A)** within 4 in (10 cm)* from the end of the drain hose. If the drain hose is extended more than 4 in (10 cm) beyond the end of the hose guide, mold or microorganisms could spread to the inside of the washer.


NOTE

The drain hose can be installed to a 96 in (245 cm) maximum, but the draining capability can be reduced at this height. It can cause the washer to have an odor because of remaining water in the drain system.

NOTE

If the drain hose is installed below 39 in (99 cm), water can be drained in cycles due to a siphon phenomenon. It causes the washer to display "4C".


STEP 4 Leveling your washer

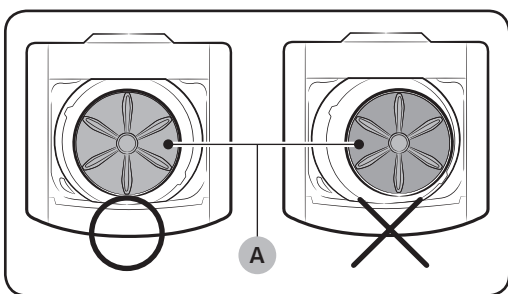

See if the washer is level by checking the position of the tub:

1. Slide the washer into position.
2. Open the lid of the washer, and pour the water into the tub to just below the pulsator level.

Installation

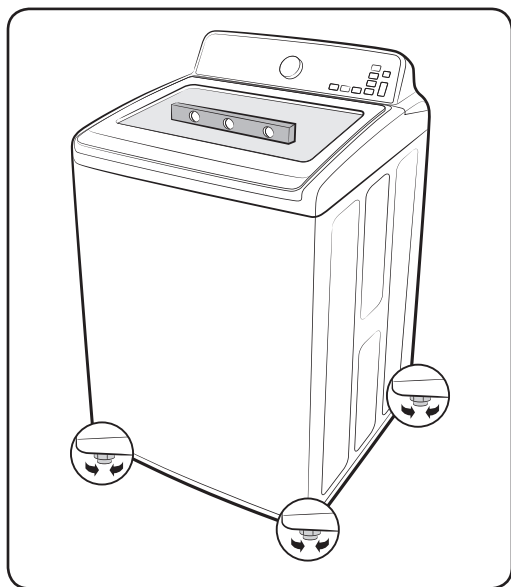


3. If the washer is level, the **pulsator (A)** is positioned at the center of the water as shown in the figure.


If not, level your washer by turning the front leveling feet clockwise or counterclockwise as necessary.

NOTE

Turn the front leveling feet **clockwise (B)** to lower the washer, and **counterclockwise (C)** to raise the washer.

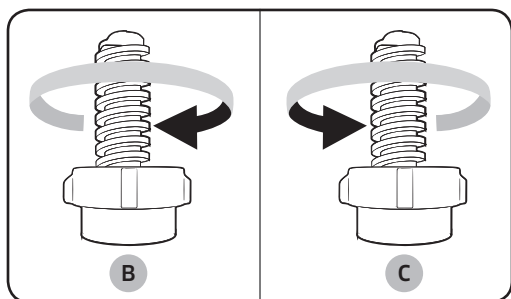

STEP 5 Powering your washer

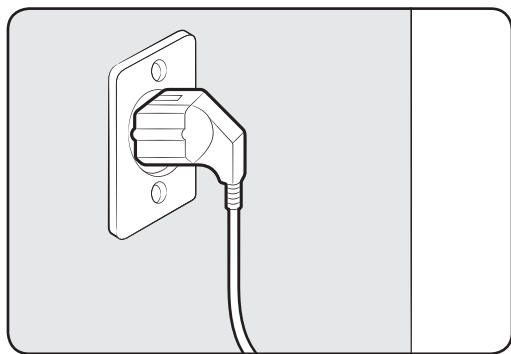

Plug the power cord into a 3-prong, well grounded 220 volt 50 Hz approved electrical outlet protected by a fuse or comparable circuit breaker.

Your washer is grounded through the third prong of the power cord when plugged into a three-prong grounded electrical outlet.

Test run

Make sure that you install your washer correctly by running the **Rinse+Spin** after the installation is complete.

STEP 6 Running a test cycle

Run a test cycle as follows to check if your washer is properly installed.

1. Load about 6 pounds of laundry into the tub.
2. Press **Power** to turn on your washer.
3. Select **Rinse+Spin** by turning the **Cycle Selector**.
4. Press **Start/Pause** to start the test cycle.
5. The washer should not rock or vibrate excessively when water is supplied or when washing or spinning, and should drain well during the spin cycle.



NOTE

If water leaks while water is being supplied or drained, check the water connections. Refer to the “**STEP 2 Connecting the water supply hose**” section on page **19** for instructions.



NOTE

If the washer rocks and vibrates excessively, level your washer again. Refer to the “**STEP 4 Leveling your washer**” section on page **23** for instructions.

STEP 7 Calibration Mode

Your Samsung washer detects the laundry weight automatically.

For more accurate weight detection, please run Calibration Mode after the installation.

To run Calibration Mode, follow these steps:


1. Remove laundry or any contents in the machine.
2. Press and hold **Water Level** and **Delay End** simultaneously for at least 3 seconds when the power is turned on.
3. Press **Start/Pause** to activate Calibration Mode.
4. The pulsator rotates clockwise and counterclockwise approximately 1 minute.
5. When Calibration Mode is finished, “**End**” appears on the display, and the washer automatically turns off. The washer is now ready for use.

Operating instructions

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Loading your washer

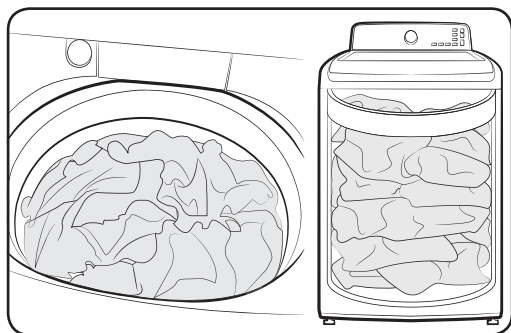

- Fill the tub with dry, unfolded clothes evenly around in order to enhance washing efficiency and prevent excess wear, or wrinkling of the load.
- For optimal washing performance, make sure the laundry is piled up evenly.
- Wash delicate items such as bras, hosiery, and other lingerie in the Delicates cycle with similar lightweight items.
- When washing big bulky items or a few smaller items that don't fill the tub completely – a rug, a pillow, stuffed toys, or one or two sweaters, for example – add a few towels to improve spin performance.
- Do not insert bulky items except for Bedding in this cycle.

NOTE

During the spin cycle, the washer may add additional water to redistribute the clothes and correct an imbalance inside the drum.

- When washing heavily soiled loads, do not overload your washer to ensure good cleaning results.

To add a forgotten item:

1. Press **Start/Pause** to pause the washer.
2. Wait for the door to unlock automatically, and then open the door.
3. Add the item, close the door, and then press **Start/Pause**. The cycle will resume.

Getting started

1. Load your washer.
2. Add liquid (or powder) detergent and additives to the dispenser (see the "**Detergent use**" section on page 37).
3. Select the appropriate cycle and options for the load (see the "**Washing a load of laundry**" section page 28).
4. Close the lid.
5. Press **Start/Pause**.
6. The **Wash** Indicator illuminates.
7. The estimated cycle time will appear in the display.
The time may fluctuate to indicate the time remaining in the cycle.




NOTE

The actual time required for a cycle may differ from the estimated time in the display depending on the water pressure, water temperature, detergent, and laundry.

8. Before your washer starts to fill, it will make a series of clicking noises to check the door lock and do a quick drain.



NOTE


- When the cycle is complete, the  **Door Lock** indicator will go out and "**End**" will appear in the display.
- Pressing **Power** cancels the cycle and stops your washer.
- The **Wash**, **Rinse**, and **Spin** indicators will illuminate during those portions of the cycle.

Washing a load of laundry

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

Control panel

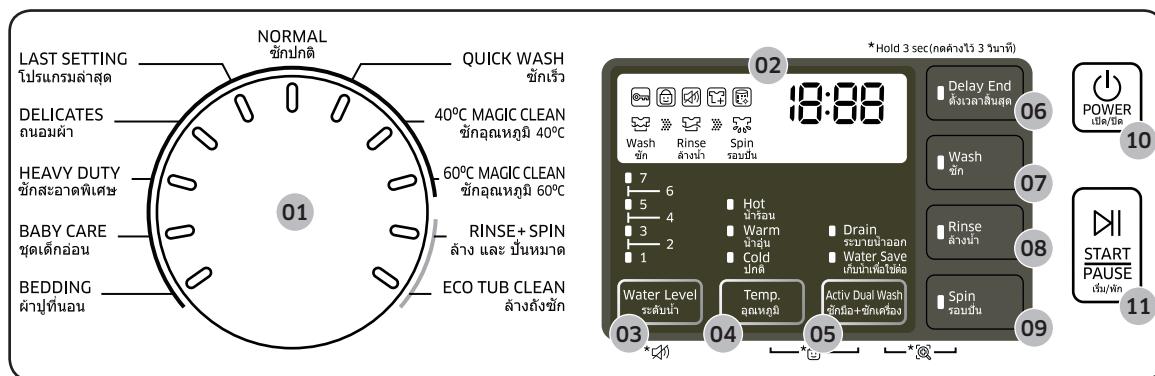

01 Cycle Selector	Turn the Cycle Selector to select the desired cycle. The indicator by the cycle name lights up.
02 Display	Provides instructions and diagnostics while keeping you updated on the cycle status and time remaining.
03 Water Level	The water level is automatically adjusted. However, you can select the water level manually by pressing this button. According to the texture and humidity of clothes, water level and water consumption may differ.
04 Temp.	Press the button repeatedly to cycle through the different water temperature options. <ul style="list-style-type: none"> Hot - Whites and heavily soiled, colorfast items. Warm - Colorfast items. Cold - Brightly colored, very lightly soiled items.
05 Activ Dual Wash	This button provides two options, and is available only when the washing machine is stopped or in Standby state. <ul style="list-style-type: none"> Water Save (default): Reuse water in the tub that remains after using Water Jet. The water will be used for the main cycle. Drain: Select to drain water that remains after using Water Jet. When draining is complete, the washing machine switches to Water Save mode automatically. Then, you can choose a cycle.

06 Delay End	Delay the end of any cycle for up to 19 hours in one-hour increments. Displayed hour indicates the time the wash will be ended.
07 Wash	Press this button to only perform a wash cycle or to adjust the wash time.
08 Rinse	Press this button to only perform a rinse cycle or to adjust the rinse count.
09 Spin	Press this button to perform a spin cycle only or to adjust the spin time. You can set the spin time from between 1 to 9 minutes. When only a spin is selected, the spin time will be different from the total remaining time. This is because the total remaining time includes the actual spin time and the times for water draining and stopping.
10 Power	Press once to turn your washer on. Press again to turn your washer off. If the washer is left on for more than 10 minutes without any buttons being pressed, the power automatically turns off.
11 Start/Pause	Press to pause and restart cycles.

Cycle overview

Cycle	Description
NORMAL	For most fabrics including cottons, linens, and normally soiled garments.
LAST SETTING	Selects this cycle to load the settings for the last cycle. Perform a wash cycle using the last used settings without having to enter them manually again. Your choices are automatically saved when you press the Start/Pause button. To use a memorized cycle, press the Last Setting button and then press the Start/Pause button.
DELICATES	This cycle is for washing delicate clothes that are easily deformed or damaged and woollen sweaters and cardigans with a water wash sign.
HEAVY DUTY	For sturdy, colorfast fabrics and heavily soiled garments.

Washing a load of laundry

Cycle	Description
BABY CARE	This cycle washes frequently washed items such as baby clothes and underwear to prevent damage to the fabric and adds extra rinse cycles to ensure cleanness.
BEDDING	For bulky items such as blankets and sheets. When you are washing comforters, use liquid detergent.
QUICK WASH	For lightly soiled garments needed quickly.
40°C MAGIC CLEAN	This cycle effectively removes dirt using a customized water temperature.
60°C MAGIC CLEAN	This cycle effectively removes dirt using a customized water temperature.
RINSE + SPIN	Use for loads that need rinsing only or to add rinse-added fabric softener to a load.
ECO TUB CLEAN	Use this program to clean the tub. It will keep the tub clean and sanitary.


Options

Child Lock

Child Lock prevents children from playing with your washer.

Activating the Child Lock function

Press and hold **Temp.** and **Activ Dual Wash** simultaneously for approximately 3 seconds.

- When you activate the Child Lock function, the  **Child Lock** indicator blinks.

Using the Child Lock function

If the lid is opened when the Child Lock function is on, “dC” is displayed and an alarm sounds.

- If the water level in the tub is above the safe water level, “dC” is displayed on the LED display and the washer starts to drain water by force after 30 seconds. The Power button is disabled while the washing machine drains water in Child Lock mode.
- If the water level in the tub is above the safe water level and the Child Lock function is turned on while the door is open, “CL” is displayed on the LED display even if the power of the washer is turned off and the washer drains water by force.

- Even if the power of the washer is turned off, if the lid is opened while the water level in the tub is above the Reset water level, “CL” is displayed on the LED display without the alarm sounding and the washer starts to drain water. When the draining operation finishes, the power is automatically turned off again.
- Even if the Child Lock function is activated, every button works until the door opens.
- After the compulsory drain, the “CL” blinks at 1 second intervals and the product enters the “CL” mode. (When the product is in the “CL” mode, only the **Power** button works.)
- To cancel the “CL” mode, you need to turn the power off and then on again.
- To cancel the “dC” mode, deactivate the Child Lock function. To deactivate the Child Lock function, press and hold **Temp.** and **Activ Dual Wash** simultaneously for at least 3 seconds.


NOTE

Adding laundry when Child Lock is on

To add laundry, deactivate the Child Lock function. To deactivate the Child Lock function, press and hold **Temp.** and **Activ Dual Wash** simultaneously for at least 3 seconds. See the “**Pause Option**” section on page 33 for additional details.

Deactivating the Child Lock function

Press and hold both **Temp.** and **Activ Dual Wash** simultaneously for approximately 3 seconds.

- When you deactivate the Child Lock function, the  **Child Lock** indicator is turned off.
- The Child Lock function prevents children or the infirm from accidentally operating the washer and injuring themselves.

WARNING

If a child enters the washer, the child may become trapped and suffocate.

CAUTION

- Once you have activated the Child Lock function, it continues working even if the power is turned off.
- Forcing the lid open can result in injury or damage to the product.

NOTE


To add laundry after you have activated the Child Lock function, you must first deactivate the Child Lock function.

Sound

The Sound Off function can be selected during all cycles.

Washing a load of laundry

Garment Plus

You can add or take out laundry items even after the wash has started, as long as the  **Garment Plus** indicator is on. Pressing **Start/Pause** unlocks the lid. If you open the lid and want to continue the wash cycle, close the lid, and then press **Start/Pause**.

Delay End

You can set the washer to start your wash automatically at a later time, by choosing a delay time.

The hour displayed indicates the time at which the wash will be ended.

1. Set your wash cycle.
2. Press **Delay End** repeatedly until the delay time is set.
3. Press **Start/Pause**. The “Delay End” indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the Power button and then turn the washer on again.

Mist Shower

Mist Shower sprays water from a nozzle that is independent of the main water supply system. It states that is soaks the laundry with water from the beginning of the rinse cycle and ensures an effective wash, but it's not part of the wash cycle, it's part of the rinse cycle, so this needs to state that it ensures an effective rinse.

(The Mist Shower function may not work if there is too large of a load in the machine.)

Smart Check *

This function enables you to check the status of the washer using a smartphone.

1. To enable the Smart Check function, press and hold **Activ Dual Wash** and **Spin** for 3 seconds after turning the power on or when an error occurs.

NOTE

The error code history is deleted after you use this function.

2. The Smart Check indicator is lit on the display.
3. Run the Smart Check app on your smart phone.
 - Android: Galaxy S series, Galaxy Note series. (Other devices may not be normal operation).
Supported OS : Android 2.2 or higher
 - iOS: iPhone series
Supported OS : iOS 4.3 or higher
4. Focus your smart phone's camera on the display panel of the washer.
5. If the smart phone's camera is focused on the display panel of the washer, the panel and error message is automatically recognized and the error type and countermeasures are displayed on the smart phone.
6. If the smartphone fails to recognize the error code more than twice, please enter the error code displayed on the display panel of the washer manually into the Smart Check app.

NOTE

Downloading the Smart Check app

- Download the Samsung Laundry App into your mobile phone from the Android market or Apple App store. (Search word : Samsung Smart Washer/Dryer)

NOTE

Precautions when using Smart Check

- If light from a light bulb, fluorescent bulb, or lamp is reflected on the display panel of the washer, the smartphone may not be able to recognize the panel or error message easily.
- If you hold the smartphone at too large an angle relative to the front of the display panel, it may not be able to recognize the error code. For best results, hold the smartphone so that the front of the panel and the smartphone are parallel or nearly parallel.

Washing clothes using the cycle selector

Your new washer makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Press **Power**.
2. Open the lid.
3. Load the articles of clothing one at a time loosely into the drum, without overfilling it.
4. Add liquid (or powder) detergent, softener, and/or bleach (if necessary) to the appropriate compartments. See the "Detergent use" section on page 37.
5. Close the lid.
6. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: **NORMAL**, **LAST SETTING**, **DELICATES**, **HEAVY DUTY**, **BABY CARE**, **BEDDING**, **QUICK WASH**, **40°C MAGIC CLEAN**, **60°C MAGIC CLEAN**, **RINSE+SPIN** and **ECO TUB CLEAN**. The relevant indicators will illuminate on the control panel.

7. At this time, you can control the wash temperature, the number of rinse cycles, the spinning time, and the delay time by pressing the appropriate option button.
8. Press **Start/Pause** and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

To remove or add laundry items, follow these steps:

1. Press **Start/Pause** to unlock the lid.

NOTE

The lid cannot be opened when the water is too HOT.

2. Remove or add laundry items.
3. Close the lid, and then press **Start/Pause** to restart the wash.

NOTE

If you have Child Lock on, you must deactivate it first. See page 30-31.

Washing a load of laundry

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the lid.
2. Remove laundry.

ATC (Auto Temperature Control)

ATC is the control function that the washer controls water temperature with temperature sensor (thermistor).

NOTE

Because there are numerous water temperatures depending on the customer's environments (cold areas, warm areas, various water temperatures, settings of heater temperature, etc.), ATC function in our washer maintains the certain level of wash temperature to output the best washing performance at each cycle.

NOTE

If you select **NORMAL**, this cycle is the regulation and UL cycle. Since new washers must reduce the amount of energy usage as a first priority, customers will notice more cold water entering the washer. But, this is normal, not a problem.


In those regulation cycles, Hot temperature is similar to acceptable adult bath-water temperature and warm temperature is similar to comfortable swimming-pool water temperature.

NOTE

If customers want to wash clothes in specific water temperatures, customers should choose a different cycle at each temperature (Hot/Warm).

The basics

Prewash (Water Jet & Built-in sink)

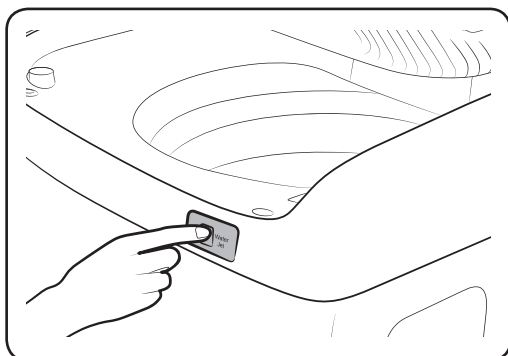

Water Jet and Built-in sink help you handwash before the washing machine starts operation. Water Jet is available only when the door is open with the water level set to less than High. For prewashing, use the Built-in sink that is designed to facilitate the hand-wash.

1. With the door open, lower the Built-in sink . To open only the door, press and release the front right corner of the door. **To close and lock both the door and the Built-in sink, press down the door until you hear a clicking sound.**
2. Put clothes to prewash in it.
3. Press Water Jet to supply water to the Built-in sink, and hand-wash.
4. When done, gently lift up the Built-in sink to drain water into the tub.

NOTE

- If you want to hand-wash while the machine is operating, press Start/Pause to stop operation, and then follow steps 1-4 above.
- If you open both the door and the Built-in sink, lower the Built-in sink manually for prewashing.

[Water Jet stops]

- Water Jet stops operation automatically when the washing machine detects the maximum water level.
- Water Jet stops operation automatically 5 minutes after it begins. To add more water, press Water Jet again to resupply water.

Washing a load of laundry

[Water Jet drains]

- Select a cycle and press Start/Pause. Then the washing machine drains the water to be used during the prewash.
- When the washing machine is turned off before starting the wash cycle, it drains the water to be used during the prewash. However, when it is turned off during the wash cycle, it does not drain the water.

NOTE

- Water Jet extracts the water through the Mist Shower nozzle for 1 second and then through the Water Jet nozzle from then on when it is first activated after the washing machine turns on.

CAUTION

- Do not abuse Water Jet. Excessive use of Water Jet increases water consumption.
- When running water to the tub, do that gently. Otherwise, water may overflow the tub.
- Use caution when removing laundry from the tub. You may bump your head on the Built-in sink.
- Do not block the outlet of Water Jet with hands. Water may leak outside the tub, causing a system failure.
- Put only clothes to prewash in the Built-in sink. Other items such as shoes, food, or animals can not be used for prewash.
- Do not open the Built-in sink in a hurry. Remaining water in the sink may splash on the door or control panel.
- Due to a difference in air pressure, Water Jet may splash water from its outlet when it is first activated.
- This **lid must be closed tightly** to do the laundry.

Detergent use

- The use a good quality top loader detergent is recommended.
- It is also important to:
 - Pre-treat stains before washing.
 - Sort clothes by color.
 - Sort clothes by the amount of soiling.
 - Avoid overloading.

NOTE

- When using powdered detergent it is recommended that the powder be dissolved in warm water to ensure optimum cleaning results.
- The detergent/water mixture can be added to either the tub or to the detergent dispenser tray.
- Reducing the amount of detergent used may reduce the effectiveness of the cleaning action.

Washing a load of laundry

Features

Automatic dispenser

Your washer has separate compartments for dispensing detergent and color-safe bleach and fabric softener. Add all laundry additives to their respective compartments before starting your washer.


The automatic dispenser must always be in place before you start your washer.

DO NOT open the automatic dispenser when your washer is running.

NOTE

- Never exceed the manufacturer's recommendations when adding detergent.
- This compartment holds liquid detergent for the main wash cycle, which is added to the load at the beginning of the cycle.
- When using powdered detergent, remove the liquid detergent compartment from the detergent drawer. The washer will not dispense powdered detergent from the liquid detergent compartment.

To add detergent to the automatic dispenser:

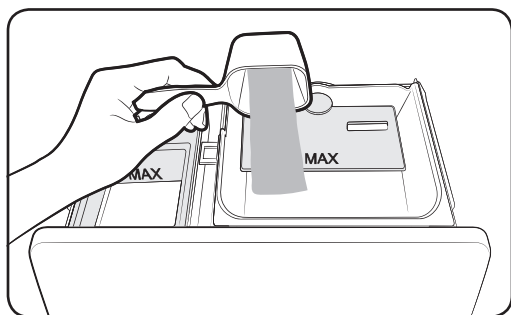

1. Open the dispenser drawer.
2. Load the recommended amount of liquid (or powder) detergent into the detergent compartment before you start your wash.
3. Close the drawer slowly and smoothly to avoid spilling, splashing, or premature dispensing of the contents.


NOTE

It is normal for a small amount of water to remain in the dispenser compartments at the end of the cycle.

NOTE

Do not put chlorine bleach in the dispenser drawer.

Loading the Liquid (or Powder) detergent compartment

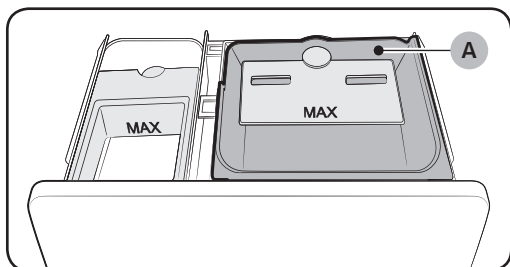

1. Pour the recommended amount of laundry detergent directly into the detergent compartment before starting your washer.
2. If you are using color-safe bleach, add it with the detergent to the detergent compartment.

NOTE


When adding color-safe bleach with detergent, it is best if both laundry products are in the same form – liquid.

NOTE

When using powdered detergent, remove the **liquid detergent compartment (A)** from the detergent drawer. The washer will not dispense powdered detergent from the liquid detergent compartment.

Washing a load of laundry

Loading the fabric softener compartment

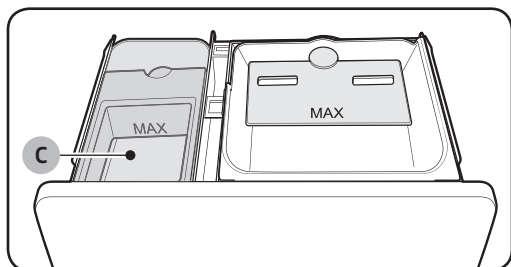

1. Pour the recommended amount of liquid fabric softener into the **softener compartment (C)**. For smaller loads, use less than one capful.
2. Dilute the fabric softener with water until it reaches MAX FILL in the compartment.
3. The dispenser automatically releases liquid fabric softener at the proper time during the rinse cycle.

NOTE

- Use the softener compartment **ONLY** for liquid fabric softeners.
- DO NOT use the Downy Ball* in the fabric softener compartment with this washer. It will not add fabric softener at the appropriate time. Use the detergent compartment.
(* Brand names are trademarks of their respective manufacturers.)
- Do not use liquid fabric softener that is too sticky as it may not mix with the water sufficiently.

Maintaining your washer

Cleaning the exterior

1. Turn off the water faucets after finishing the day's washing.
This will shut off the water supply to your washer and prevent the unlikely possibility of damage from escaping water. Leave the lid open to allow the inside of your washer to dry out.
2. Use a soft cloth to wipe up all detergent, bleach or other spills as they occur.
3. Clean the following as recommended:
Control Panel – Clean with a soft, damp cloth. Do not use abrasive powders or cleaning pads. Do not spray cleaners directly on the panel.

Cleaning the interior

Clean the interior of your washer periodically to remove any dirt, soil, odor, mold, mildew, or bacterial residue that may remain in your washer as a result of washing clothes.

Failure to follow these instructions may result in unpleasant conditions, including odors and/or permanent stains on your washer or laundry.
Hard water deposits may be removed, if needed. Use cleaners labeled "Washer safe".

Storing your washer

Washers can be damaged if water is not removed from hoses and internal components before storage.

Prepare your washer for storage as follows:

1. Select the Quick Wash cycle and add bleach to the automatic dispenser. Run your washer through the cycle without a load.
2. Turn the water faucets off and disconnect the inlet hoses.
3. Unplug your washer from the electrical outlet and leave your washer lid open to let air circulate inside the drum.
If your washer has been stored in below-freezing temperatures, allow time for any leftover water in your washer to thaw out before use.

Maintaining your washer

Preserving the top cover and the front frame

Do not place any heavy or sharp objects or a detergent box on the washer. They can scratch or damage the top cover of the unit.

NOTE

Since the entire washer has a high-gloss finish, the surface can be scratched or damaged.

Avoid scratching or damaging the surface when using the washer.


Cleaning the built-in sink and lint filter

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.


Built-in sink

1. Open the door, and use a cloth or sponge to clean the Built-in sink.
2. Press Water Jet to supply water to the board. Use this water to rinse the board.

Lint filter

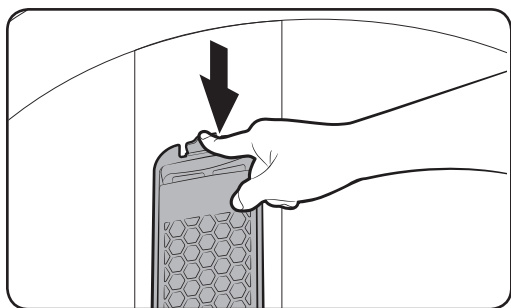


1. Press down the upper area of the filter case to remove.
2. Unlock the cover, and clean the filter with running water and a brush.

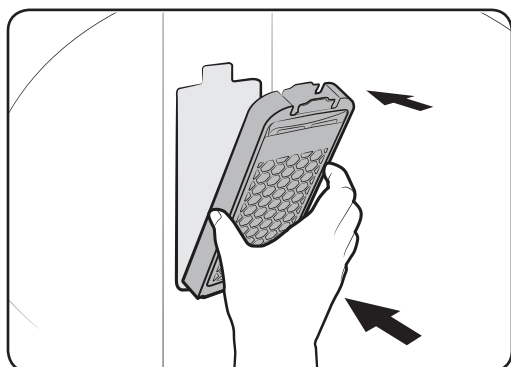


3. When cleaning is complete, close the cover and reinsert the filter case to the original position. You will hear a clicking sound when the filter case fits in.

Cleaning the dispensers

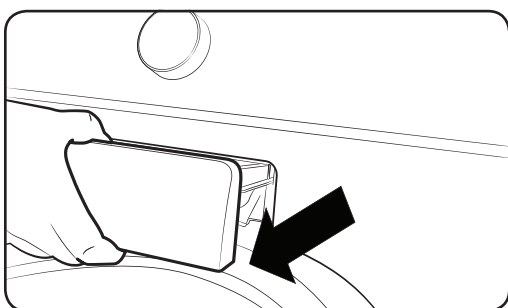


The automatic dispenser may need to be cleaned periodically due to laundry additive buildup.

1. Pull the dispenser drawer straight back until it stops.

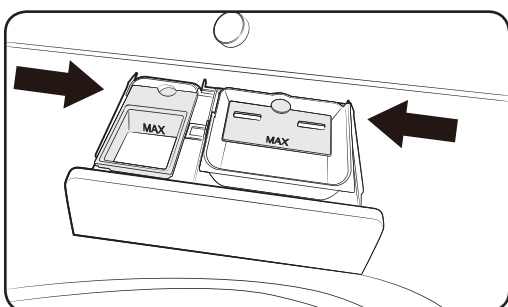


2. Push the ends of each side of the case at the same time.
When you feel the ends push, pull out the dispenser drawer.

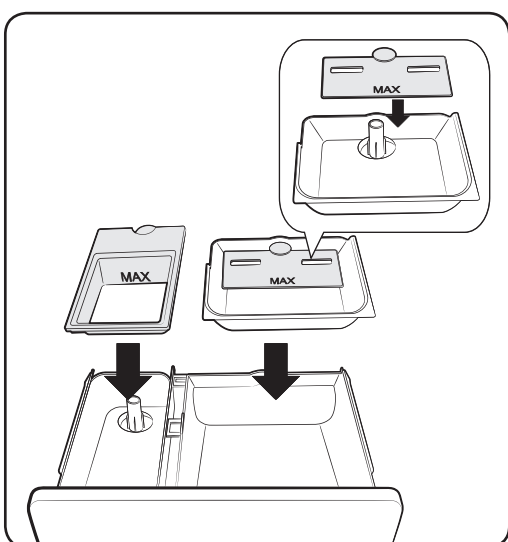


3. Remove the inserts from the 3 compartments. Rinse the inserts and the drawer with warm water to remove traces of accumulated laundry products.

Maintaining your washer

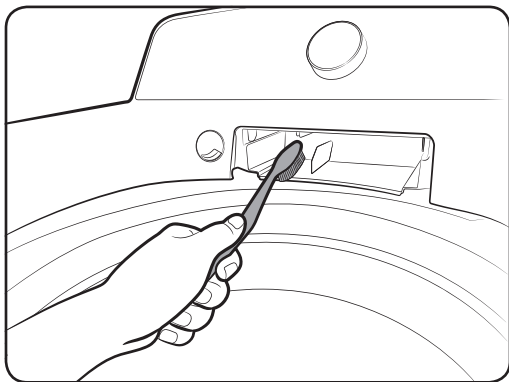


4. To clean the drawer opening, use a small, non-metal brush to clean the recess. Remove all residue from the upper and lower parts of the recess.

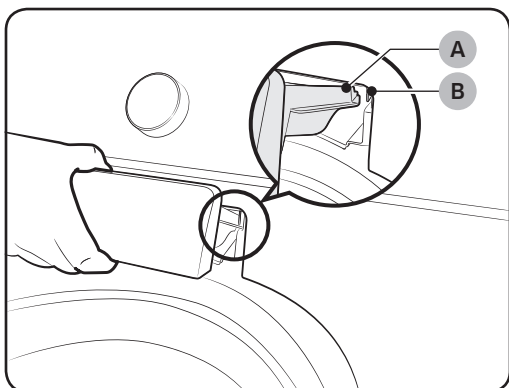

5. Return the inserts to the proper compartments and replace the drawer by placing the **dispenser drawer rail (B)** on top of the **compartment rail (A)** (Tilt the dispenser drawer downward and insert it). Then push the drawer in firmly and slowly.

Eco Tub clean

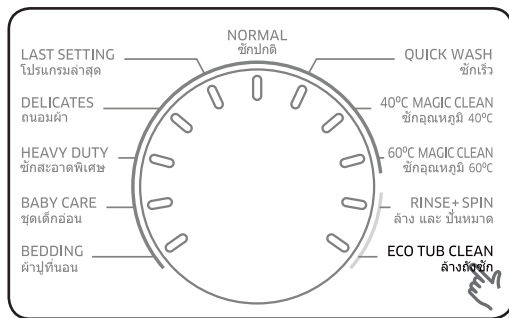


ECO TUB CLEAN is a self-cleaning cycle that removes mold that may occur inside the washer.

1. Press **Power**.
2. Select **ECO TUB CLEAN**.
Once **ECO TUB CLEAN** is selected, the only function that can be set is Delay End.
3. Press **Start/Pause**.
ECO TUB CLEAN begins.

CAUTION

- Using ECO TUB CLEAN, you can clean the drum without using a cleansing agent.
- Never use ECO TUB CLEAN when laundry is in the washer. This may cause damage to the laundry or a problem with the washer.

ECO TUB CLEAN Auto Indicator function

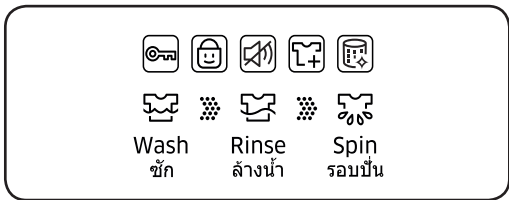

- If the **ECO TUB CLEAN** indicator is lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washer, turn the power on, and clean the drum by running ECO TUB CLEAN.
- If you do not run ECO TUB CLEAN, the **ECO TUB CLEAN** indicator turns off. However, the **ECO TUB CLEAN** indicator will light again after two washes. Not running ECO TUB CLEAN at this point will not cause a problem with the washer.
- Although the **ECO TUB CLEAN** indicator is lit once a month or so, the frequency may differ depending on the number of times the washer is used.

Troubleshooting

Checkpoints

If you encounter a problem with the washer, first check the table below and try the suggestions.

Problem	Action
Does not turn on.	<ul style="list-style-type: none"> • Make sure you use rated power for the product. • Make sure the power cord is completely plugged in. • Check the fuse or reset the circuit breaker.
Does not start.	<ul style="list-style-type: none"> • Make sure the door is closed. • Make sure the water taps are open. • Make sure to press or tap Start/Pause to start the washing machine. • Make sure Child Lock is not activated. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. • Was the door opened during the spinning cycle? Close the door, and press or tap Start/Pause to resume. • The machine enters Standby or is in a soaking cycle. Please wait. • Check the fuse or reset the circuit breaker
Water is not supplied.	<ul style="list-style-type: none"> • Make sure you press or tap Start/Pause after selecting the water supply. • Make sure the water taps are open. • Is the filter net at the water supply hose connector clogged? Clean the filter net by brushing with a toothbrush. • Is the water supply cut off? If the water supply is cut off, close the tap and power off. • Straighten the water supply hoses. • Open and close the door, then press or tap Start/Pause. • If the water pressure is low, it takes longer to start washing. • If the water level is not as high as necessary or lower than expected, use the level selector to adjust the water level.
After a cycle, detergent remains in the automatic dispenser.	<ul style="list-style-type: none"> • Make sure the washing machine is running with sufficient water pressure. • Make sure the detergent drawer is properly inserted. • Remove and clean the detergent drawer, and then try again.

Problem	Action
Vibrates excessively or makes noise.	<ul style="list-style-type: none"> • Make sure the washing machine is set on a level floor. If the floor is not level, use the levelling feet to adjust the washing machine. • Make sure the washing machine is not contacting any other object. • Make sure the laundry load is balanced. • Make sure the laundry is spread evenly in the washing machine. Spread out the laundry evenly and start again. • Make sure the space around the washing machine is free of objects. • Humming is produced normally during operation. • Objects such as coins can cause noise. Remove these objects from the washing machine after washing is complete.
Stops.	<ul style="list-style-type: none"> • Plug the power cord into a live electrical outlet. • Check the fuse or reset the circuit breaker. • Close the door, and press or tap Start/Pause to start the washing machine. For your safety, the washing machine will not spin unless the door is closed. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. • There may be a pause or soak period in the cycle. Wait briefly and the washing machine may start. • Make sure the inlet hose screens at the taps are not clogged. Periodically clean the screens. • This problem occurs temporarily due to low voltages, and will be solved when power recovers.

Troubleshooting

Problem	Action
Fills with the wrong temperature water.	<ul style="list-style-type: none"> Fully open both water taps. Make sure the temperature selection is correct. Make sure the hoses are connected to the correct water taps. Flush water lines. Disconnect the hoses and clean the screens. The hose filter screens may be clogged. While the washing machine fills, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. While the washing machine fills, you may notice just hot and/or just cold water going through the dispenser when cold or warm temperatures are selected. This is a normal function of the automatic temperature control feature as the washing machine determines the water temperature.
Door (Lid) locked or will not open.	<ul style="list-style-type: none"> While the washing machine is operating, press or tap Start/Pause to stop the washing machine. It may take a few moments for the door lock mechanism to disengage.
Does not drain and/or spin.	<ul style="list-style-type: none"> Check the fuse or reset the circuit breaker. Make sure the electrical voltage is normal. Make sure the washing machine is plugged in. Make sure the drain hose is pointed downward. (Natural drain models only) Make sure the drain hose is not clogged. Make sure the drain hose is not kinked. Straighten the drain hose. If there is a drain restriction, call for service. Close the door, and press or tap Start/Pause. For your safety, the washing machine will not spin unless the door is closed.
Load is wet at the end of the cycle.	<ul style="list-style-type: none"> Use the High or Extra High spin speed. (Applicable model only) Use high efficiency (HE) detergent to reduce oversudsing. Load is too small. Small loads (one or two items) may become unbalanced and not spin completely.



Problem	Action
Leaks water.	<ul style="list-style-type: none"> • Make sure all hose connections are tight. • Make sure the water supply hose's rubber packing is in the correct position. Screw tightly again. • Make sure the end of the drain hose is correctly inserted and secured to the drain system. • Avoid overloading. • Use high efficiency (HE) detergent to prevent oversudsing. • Make sure the water supply hose is not kinked. • If the water supply is too strong, water may leak. Close the water tap a little. • Make sure water is not leaking from the water tap. If so, repair the water tap.
Excessive suds.	<ul style="list-style-type: none"> • Use high efficiency (HE) detergent to prevent oversudsing. • Reduce the detergent amount for soft water, small loads, or lightly soiled loads. • Non-HE detergent is not recommended.
The spin basket or drain/supply hose is frozen.	<ul style="list-style-type: none"> • Use warm water to disconnect the water supply hose and drain hose. Soak them in warm water. • Fill the spin basket with warm water, and then wait for about 10 minutes. • Put a hot towel on the drain hose connector. • Reconnect the water supply hose and drain hose, and check if water is supplied properly.
Water drains out immediately.	<ul style="list-style-type: none"> • Make sure the drain hose is not clogged, and is hung over the drain hose hook. Fill the spin basket halfway with water, and try spinning again. • Lift the end of the drain hose to prevent water from draining. Fill the spin basket halfway with water, and then run spinning after releasing the drain hose. • Make sure the drain hose is installed correctly. See the installation section of this user manual and adjust the position of the drain hose as instructed.
Stains on clothes.	<ul style="list-style-type: none"> • Clean the magic filter.
Has odours.	<ul style="list-style-type: none"> • Excessive suds collect in recesses and can cause foul odours. • Run cleansing cycles to sanitize periodically. • Dry the washing machine interior after a cycle has finished.

Troubleshooting

If a problem persists, contact a local Samsung service center.


Information codes

The washer may display information codes to help you understand what is occurring with your washer better.

No	Code	Action
1	1C	<p>The WaterLevel sensor is not working properly.</p> <ul style="list-style-type: none">• Check WaterLevel Sensor wire harness.• If the information code remains, contact a customer service centre. <p> NOTE</p> <p>When the washer displays “1C”, the washer do draining for 3 minutes. During this time, the Power button is inoperative.</p>
2	3C	<p>Check the motor for operation.</p> <ul style="list-style-type: none">• Try restarting the cycle.• If the problem continues, call for service.
3	4C	<p>Water is not supplied.</p> <ul style="list-style-type: none">• Make sure the water taps are open.• Make sure the water hoses are not clogged.• Make sure the water taps are not frozen.• Make sure the washing machine is operating with sufficient water pressure.• Make sure that the cold water tap and the hot water tap are properly connected.• Clean the mesh filter as it may be clogged. <p> NOTE</p> <p>When the washer displays “4C”, the washer do draining for 3 minutes. During this time, the Power button is inoperative.</p>
4	4C2	<ul style="list-style-type: none">• Make sure the cold water supply hose is firmly connected to the cold water tap. <p>If it is connected to the hot water tap, the laundry may be deformed with some cycles.</p>

No	Code	Action
5	5C	<p>Water is not draining.</p> <ul style="list-style-type: none"> • Make sure the drain hose is not frozen or clogged. • Make sure the drain hose is positioned correctly, depending on the connection type. • Clean the debris filter as it may be clogged. • Make sure the drain hose is straightened all the way to the drain system. • If the information code remains, contact a customer service centre.
6	9C1	<p>The electronic control needs to be checked (Over Voltage Error).</p> <ul style="list-style-type: none"> • Check the PCB and wire harness. • Check if power is supplied properly. • If the information code remains, contact a customer service centre.
7	9C2	<p>Low voltage detected</p> <ul style="list-style-type: none"> • Check if the power cord is plugged in. • If the information code remains, contact a customer service centre.
8	AC6	<p>Inverter Communication problem</p> <ul style="list-style-type: none"> • Check the Inverter PCB and wire harness. • If the information code remains, contact a customer service centre.
9	dC	<p>Operating the washer with the door open.</p> <ul style="list-style-type: none"> • Make sure the door is properly closed. • Make sure laundry is not caught in the door.
10	HC	<p>High temperature heating check</p> <ul style="list-style-type: none"> • If the information code remains, contact a customer service centre.

Troubleshooting

No	Code	Action
11	LC	<p>Check the drain hose.</p> <ul style="list-style-type: none"> • Make sure the end of the drain hose is placed on the floor. • Make sure the drain hose is not clogged. • If the information code remains, contact a customer service centre. <p> NOTE</p> <p>When the washer displays “LC”, the washer do draining for 3 minutes. During this time, the Power button is inoperative.</p>
12	OC	<p>Water is overflowed.</p> <ul style="list-style-type: none"> • Restart after spinning. • If the information code remains on the display, contact a local Samsung service centre.
13	PC	<p>When position of the clutch can't be detected.</p> <ul style="list-style-type: none"> • If the information code remains, contact a customer service centre.
14	PC1	<p>After position of the clutch is detected, if the signal of the clutch hall goes wrong.</p> <ul style="list-style-type: none"> • If the information code remains, contact a customer service centre.
15	Ub	<p>Spinning does not work.</p> <ul style="list-style-type: none"> • Make sure laundry is spread out evenly. • Make sure the washing machine is on a flat, stable surface. • Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory, and an “Ub” check message will be shown in the display.





For any codes not listed above, call 0-2689-3232, 1800-29-3232.

Specifications



Fabric care chart

The following symbols provide garment care direction. The clothing care labels include symbols for drying, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to optimize garment life and reduce laundering problems.

Wash cycle

	Normal
	Permanent press/Wrinkle resistant/Wrinkle control
	Gentle/Delicates
	Hand wash

  Water temperature




	Hot
	Warm
	Cold

NOTE


This represents appropriate wash water temperatures for various items. The temperature range for Hot is 105° - 125 °F / 41° - 52 °C, for Warm 85° - 105 °F / 29° - 41 °C and for Cold 60° - 85 °F / 16° - 29 °C. (Wash water temperature must be a minimum of 60 °F / 16 °C for detergent activation and effective cleaning.)

The clothes washer can not ensure these temperatures because the actual temperature of the water entering your washer depends on water heater settings and regional water supply temperatures. For example, cold water entering the home in the northern states during winter may be 40 °F / 4 °C which is too cold for effective cleaning. In this situation, you will need to adjust the water temperature by selecting a warm setting, adding some hot water to the MAX FILL line, or using your Washer's heating option, if available.




Bleach

	Any bleach (when needed)
	Only non-chlorine (color-safe) bleach (when needed)
	Tumble dry

Normal






	Permanent press/Wrinkle resistant/Wrinkle control
	Gentle/Delicates

Special instructions






	Line dry/Hang to dry
	Drip dry
	Dry flat

Specifications




Heat setting

	High
	Medium
	Low
	Any heat
	No heat / Air







Dry-clean

	Dry-clean
	Do not dry-clean
	Line dry / Hang to dry
	Drip dry
	Dry flat

Iron dry or steam temperatures

	High
	Medium
	Low

Warning symbols for laundering


	Do not wash
	Do not wring
	Do not bleach
	Do not tumble dry
	No steam (added to iron)
	Do not iron

Helping the environment

- Your washer is manufactured from recyclable materials. If you decide to dispose of it, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the lid so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

Specifications

Specification sheet

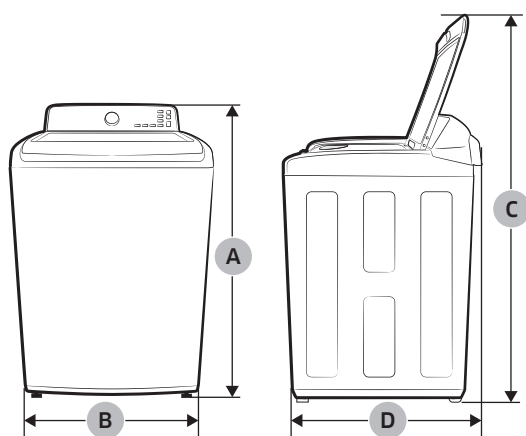

Type		Top loading washer	
Dimensions (inches (cm))	A. Height	45.1 (114.5)	
	B. Width	27.0 (68.6)	
	C. Height with lid open	59.8 (152.0)	
	D. Depth	29.3 (74.4)	
Capacity (kg)		21.0	
Water pressure (psi (kPa))		20 - 116 (137 - 800)	
NET weight (kg)		68	
POWER CONSUMPTION		220 V	1400 W
SPIN REVOLUTION		800 rpm	

Cycle chart

Use this chart to set the best cycle and options for you laundry.

NOTE

Setting	Water Level		Temp.	Activ Dual Wash
●: factory setting	1	5	H: Hot	Drain
●: can be selected	2	6	W: Warm	Water Save
	3	7	C: Cold	
	4			

Cycle	Water Level							Temp.		
	1	2	3	4	5	6	7	H	W	C
NORMAL	●	●	●	●	●	●	●	●	●	●
DELICATES	●	●	●	●	●	●	●		●	●
HEAVY DUTY	●	●	●	●	●	●	●	●	●	●
BABY CARE	●	●	●	●	●	●	●	●	●	●
BEDDING	●	●	●	●	●	●	●	●	●	●
QUICK WASH	●	●	●	●	●	●	●	●	●	●
40°C MAGIC CLEAN	●	●	●	●				●	●	●
60°C MAGIC CLEAN	●	●	●	●				●	●	●
RINSE+SPIN	●	●	●	●	●	●	●	●	●	●
ECO TUB CLEAN					●				●	

Specifications

Cycle	Options						
	Activ Dual Wash		Last Setting	Delay End	Wash	Rinse	Spin
	Water save	Drain					
NORMAL	●	●	●	●	●	●	●
DELICATES	●	●	●	●			
HEAVY DUTY	●	●	●	●	●	●	●
BABY CARE	●	●	●	●	●	●	●
BEDDING	●	●	●	●	●	●	●
QUICK WASH	●	●	●	●	●	●	●
40°C MAGIC CLEAN	●	●	●	●	●	●	●
60°C MAGIC CLEAN	●	●	●	●	●	●	●
RINSE+SPIN	●	●	●	●		●	●
ECO TUB CLEAN	●	●		●			

Memo



QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support



เครื่องซักผ้า

คู่มือผู้ใช้

WA21J7700G*

SSEC SEC

SAMSUNG

สารบัญ

ข้อมูลเกี่ยวกับความปลอดภัย	4
สิ่งที่ต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย	4
สัญลักษณ์สำคัญเพื่อความปลอดภัย	4
ข้อควรระวังเพื่อความปลอดภัยที่สำคัญ	5
การติดตั้ง	11
การนำออกจากบรรจุภัณฑ์	11
ส่วนประกอบต่างๆ	12
ข้อกำหนดในการเลือกสถานที่ติดตั้ง	14
หมายเหตุสำคัญ	18
การติดตั้งแบบที่ละขั้นตอน	18
คำแนะนำในการใช้งาน	26
การใส่ผ้าซั๊ก	26
เริ่มการใช้งาน	27
การซักผ้า	28
แผงควบคุม	28
โปรแกรมซักผ้า	30
ตัวเลือกการทำงาน	31
การซักผ้าโดยใช้โปรแกรมซัก	33
ATC (ระบบควบคุมอุณหภูมิอัตโนมัติ)	34
โปรแกรมพื้นฐาน	35
การใช้ผลิตภัณฑ์ซักผ้า	37
คุณสมบัติ	38
การดูแลรักษาเครื่องซักผ้า	41
การทำความสะอาดภายนอก	41
การทำความสะอาดภายใน	41
การเก็บเครื่องซักผ้า	41
การดูแลรักษาตัวเครื่องส่วนบนและโครงด้านหน้า	42
การทำความสะอาดซิงค์ในตัวและตัวกรองเศษผ้า	42
การทำความสะอาดเครื่องจ่ายอัตโนมัติ	43
โปรแกรมล้างถังซัก	45
การแก้ไขปัญหา	46
จุดตรวจ	46
รหัสข้อมูล	50

ข้อมูลจำเพาะ	53
ผังการดูแลผ้า	53
การปกป้องสิ่งแวดล้อม	55
ข้อมูลจำเพาะ	56
แผนผังโปรแกรมซัก	57

ข้อมูลเกี่ยวกับความปลอดภัย

ขอแสดงความยินดีกับเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ คู่มือนี้มีข้อมูลที่สำคัญเกี่ยวกับการติดตั้ง การใช้งานและการบำรุงรักษาเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ โปรดใช้เวลาเพื่ออ่านคู่มือนี้ เพื่อใช้ประโยชน์สูงสุดจากคุณสมบัติและคุณประโยชน์มากมายของเครื่องซักผ้า

สิ่งที่คุณต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย

โปรดอ่านคู่มือให้ละเอียดเพื่อให้ทราบถึงวิธีใช้อุปกรณ์อย่างปลอดภัยและสามารถใช้งานคุณลักษณะและการทำงานขั้นสูงต่างๆ อย่างมีประสิทธิภาพ โปรดเก็บคู่มือนี้ไว้ในบริเวณที่ปลอดภัยใกล้กับอุปกรณ์ เพื่อการอ้างอิงในอนาคต ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น

คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสถานะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวังและใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานเครื่องซักผ้า

เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเครื่องซักผ้าของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอาจอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com

สัญลักษณ์สำคัญเพื่อความปลอดภัย

ความหมายของสัญลักษณ์และเครื่องหมายในคู่มือผู้ใช้:



คำเตือน

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บรุนแรง การเสียชีวิต หรือทรัพย์สินเสียหาย



ข้อควรระวัง

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บหรือทำให้สิ่งของเสียหาย



หมายเหตุ

แสดงให้เห็นความเสี่ยงของการบาดเจ็บหรือความเสียหายของวัสดุที่มีอยู่

สัญลักษณ์คำเตือนเหล่านี้มีให้เพื่อป้องกันการบาดเจ็บของคุณเองและบุคคลอื่น

โปรดปฏิบัติตามอย่างเคร่งครัด

หลังจากอ่านคู่มือนี้แล้ว โปรดเก็บไว้เพื่อนำมาอ้างอิงในภายหลัง

อ่านคำแนะนำทั้งหมดก่อนที่จะใช้อุปกรณ์

เช่นเดียวกับอุปกรณ์ทุกชนิดที่ใช้ไฟฟ้าและมีชิ้นส่วนที่เคลื่อนไหว อุปกรณ์นี้อาจมีอันตรายได้ ในการใช้อุปกรณ์นี้อย่างปลอดภัย โปรดทำความเข้าใจกับการทำงาน และใช้ความระมัดระวังขณะใช้งาน

ข้อควรระวังเพื่อความปลอดภัยที่สำคัญ



คำเตือน

เพื่อลดความเสี่ยงในการเกิดอัคคีภัย ไฟฟ้าดูด หรือการบาดเจ็บขณะใช้เครื่องซักผ้า โปรดปฏิบัติตามข้อควรระวังทั่วไป และข้อควรระวังต่อไปนี้:

อย่าให้เด็ก (หรือสัตว์เลี้ยง) เล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า ประตูเครื่องซักผ้าที่นั่นไม่สามารถเปิดได้โดยง่ายจากภายใน และเด็กอาจได้รับบาดเจ็บร้ายแรงถ้าติดอยู่ภายใน

อุปกรณ์นี้ไม่เหมาะสำหรับบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล

โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

สำหรับใช้ในยุโรป: อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีผู้ดูแล เพื่อป้องกันหรือหลีกเลี่ยงอันตราย ถ้าสายไฟชำรุดหรือเสียหาย จะต้องได้รับการเปลี่ยนโดยผู้ผลิต หรือตัวแทนที่มีคุณสมบัติใกล้เคียง

เมื่อติดตั้งเครื่องซักผ้า ให้ตรวจสอบว่าปลั๊กไฟ ท่อจ่ายน้ำและท่อระบายน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย

สำหรับเครื่องที่มีการเปิดระบายอากาศที่ฐาน พรอมปูพื้นจะต้องไม่ปิดตัวเปิด

จะต้องใช้ชุดท่อที่ตรงกับเครื่องชุดใหม่ และจะต้องไม่นำชุดท่อเก่ากลับมาใช้ใหม่

ข้อมูลเกี่ยวกับความปลอดภัย



ข้อควรระวัง

ในกรณีที่ต้องการหลีกเลี่ยงอันตรายที่เกิดขึ้นโดยไม่ตั้งใจของการตั้งค่าตัวตัดอุณหภูมิใหม่ อุปกรณ์นี้จะต้องไม่ถูกจ่ายพลังงานผ่านอุปกรณ์สวิตช์ภายนอก เช่น ตัวตั้งเวลาหรือถูกเชื่อมต่อไปยังแผงวงจรไฟฟ้าที่ถูกเปิดและปิด



ข้อควรระวัง

เมื่อใช้น้ำร้อนในการซัก โปรดใช้น้ำร้อนที่มีอุณหภูมิไม่เกิน 50°C

ชิ้นส่วนที่เป็นพลาสติกอาจบิดเบี้ยวหรือเสียหาย และอาจก่อให้เกิดไฟฟ้าช็อตหรือไฟไหม้ได้

คำเตือนสำคัญเกี่ยวกับการติดตั้ง



คำเตือน

การติดตั้งอุปกรณ์นี้ต้องกระทำโดยช่างเทคนิคที่ได้รับการรับรอง หรือบริษัทผู้ให้บริการ

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด ปัญหาเกี่ยวกับผลิตภัณฑ์ หรือการบาดเจ็บ

ต่อสายไฟเข้ากับเต้ารับไฟฟ้า AC 220/50 Hz ขึ้นไป และใช้เต้ารับสำหรับอุปกรณ์นี้เพียงอย่างเดียว ห้ามใช้สายไฟสำหรับต่อ

- การใช้เต้ารับไฟฟ้าที่ผนักร่วมกับอุปกรณ์อื่นโดยผ่านสายไฟสำหรับต่อ หรือแถบปลั๊กไฟ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับข้อมูลจำเพาะของผลิตภัณฑ์ มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนักร่วมอย่างแน่นหนา

นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากช่องของปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง

- ถอดปลั๊กไฟและทำความสะอาดด้วยผ้าแห้ง
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้
- ต่อปลั๊กไฟเข้ากับเต้ารับที่ผนักร่วมเพื่อให้สายไฟพาดไปตามพื้น

ถ้าคุณต่อปลั๊กไฟกับเต้ารับในทางตรงกันข้าม ลวดนำไฟฟ้าภายในสายไฟอาจเสียหายและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

อุปกรณ์ต้องได้รับการลงกราวด์อย่างเหมาะสม

ห้ามลงกราวด์อุปกรณ์กับท่อก๊าซ ท่อน้ำพลาสติก หรือสายโทรศัพท์

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด หรือปัญหาเกี่ยวกับผลิตภัณฑ์
- ห้ามต่อปลั๊กไฟเข้ากับเต้ารับไฟฟ้าที่ไม่ได้ลงกราวด์อย่างถูกต้อง และโปรดตรวจสอบว่าเป็นไปตามข้อกำหนดของท้องถิ่นและของประเทศ

ห้ามติดตั้งอุปกรณ์นี้ใกล้เครื่องทำความร้อน วัสดุที่ติดไฟง่าย

ห้ามติดตั้งอุปกรณ์นี้ในที่ชื้น มีน้ำมัน หรือมีฝุ่นมาก ในตำแหน่งที่ได้รับแสงแดดหรือน้ำ (น้ำฝน) โดยตรง

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่มีอุณหภูมิต่ำ

- น้ำที่แข็งตัวจะทำให้ท่อต่างๆ ระเบิด

ห้ามใช้เครื่องแปลงไฟฟ้า

- อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม

- อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามใช้แรงดึงหรือหักงอสายไฟ

ห้ามบิดหรือผูกปมกับสายไฟ

อย่าแขวนสายไฟไว้กับโลหะ วางของหนักทับสายไฟ เดินสายไฟไว้ระหว่างวัตถุอื่น หรือเดินสายไฟเข้าสู่ช่องว่างด้านหลังอุปกรณ์

- อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ข้อมูลเกี่ยวกับความปลอดภัย

ข้อควรระวังเกี่ยวกับการติดตั้ง



ข้อควรระวัง

อุปกรณ์นี้ควรอยู่ในตำแหน่งที่สามารถเอื้อมถึงปลั๊กไฟได้ง่าย

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้เนื่องจากไฟฟ้าวู

คำเตือนสำคัญเกี่ยวกับการใช้งาน



คำเตือน

ถ้าอุปกรณ์มีน้ำท่วม ให้ตัดไฟฟ้าและการจ่ายน้ำทันที และติดต่อศูนย์บริการใกล้บ้าน

- ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต

ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการ Samsung ใกล้บ้าน

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ ห้ามสัมผัสกับอุปกรณ์หรือสายไฟ

- ห้ามใช้พัดลมไฟฟ้า
- อาจเกิดประกายไฟที่ทำให้ระเบิดหรือเพลิงไหม้

อย่าให้เด็กเล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า นอกจากนี้เมื่อทิ้งอุปกรณ์ให้ถอดฝาปิดออก

- ถ้าติดอยู่ในผลิตภัณฑ์ เด็กอาจหายใจไม่ออกจนกระทั่งเสียชีวิต

ห้ามซักผ้าที่เปื้อนน้ำมันเชื้อเพลิง น้ำมันก๊าด เบนซีน ทินเนอร์ แอลกอฮอล์ หรือสารไวไฟหรือสารระเหยชนิดต่างๆ

- อาจทำให้เกิดไฟฟ้าช็อต ไฟไหม้หรือระเบิดได้

ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก

- อาจทำให้เกิดไฟฟ้าช็อตได้

โปรดอย่าสอดมือหรือโลหะเข้าใต้เครื่องซักผ้าขณะที่เครื่องกำลังทำงาน

- อาจทำให้เกิดการบาดเจ็บได้

โปรดอย่าซ่อมแซม ถอดประกอบ หรือดัดแปลงเครื่องด้วยตนเอง

- ห้ามใช้ฟิวส์ (เช่น สายทองแดง ลวดโลหะ ฯลฯ) นอกเหนือจากฟิวส์มาตรฐาน
- เมื่อต้องซ่อมแซมหรือติดตั้งอุปกรณ์อีกครั้ง โปรดติดต่อศูนย์บริการใกล้บ้านคุณ
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ
- ในกรณีนี้ ผลิตภัณฑ์จะไม่ได้รับความคุ้มครองตามการรับประกันมาตรฐานที่มาจาก Samsung และ Samsung จะไม่มีส่วนรับผิดชอบต่อการดำเนินงานผิดปกติ หรือความเสียหายที่เกิดจากการใช้ผลิตภัณฑ์ประสงค์ดังกล่าว

ถอดปลั๊กไฟเมื่อไม่ได้ใช้อุปกรณ์เป็นเวลานาน หรือระหว่างพายุฝนฟ้าคะนอง

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

อย่าใส่มือลงในถังที่กำลังหมุนระหว่างรอบการปั่นหมาด

- อาจทำให้เกิดการบาดเจ็บได้ ถ้าเครื่องซักผ้าไม่หยุดหมุนภายใน 15 วินาทีหลังจากที่คุณเปิดฝา โปรดติดต่อศูนย์บริการลูกค้า Samsung ทันที

ข้อควรระวังเกี่ยวกับการใช้งาน



ข้อควรระวัง

เมื่อเครื่องซักผ้าเป็นสิ่งที่เปลี่ยนแปลงเช่น สารซักฟอก สิ่งสกปรก เศษอาหาร ฯลฯ ให้ถอดปลั๊กไฟและทำความสะอาดเครื่องด้วยผ้านุ่มชุบน้ำหมาดๆ

- มิฉะนั้นอาจทำให้เกิดกลิ่นเปลี่ยนสี เปลี่ยนรูป เสียหาย หรือเกิดสนิม

ผลิตภัณฑ์ที่คุณซื้อนี้ได้รับการออกแบบมาสำหรับใช้ในครัวเรือนเท่านั้น

การใช้ผลิตภัณฑ์เพื่อธุรกิจจะเป็นการใช้ผิดวัตถุประสงค์ ในกรณีนี้ ผลิตภัณฑ์จะไม่ได้รับความคุ้มครองตามการรับประกันมาตรฐานที่มาจาก Samsung และ Samsung จะไม่มีส่วนรับผิดชอบต่อการดำเนินงานผิดปกติหรือความเสียหายที่เกิดจากการใช้ผิดวัตถุประสงค์ดังกล่าว

อย่ายืนบนอุปกรณ์หรือวางสิ่งของ (เช่น ผ้า เทียนที่จุดไฟแล้ว บุหรี่ที่ติดไฟ จาน สารเคมี วัตถุที่เป็นโลหะ ฯลฯ) บนอุปกรณ์

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือปัญหากับผลิตภัณฑ์

อย่ากดปุ่มต่างๆ ด้วยของแหลม เช่น หมุด มีด เล็บ ฯลฯ

- อาจทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้

ข้อมูลเกี่ยวกับความปลอดภัย

คำเตือนสำคัญเกี่ยวกับการทำความสะอาด



คำเตือน

ห้ามทำความสะอาดอุปกรณ์ด้วยการพ่นน้ำลงบนเครื่องโดยตรง

ห้ามใช้สารทำความสะอาดที่เป็นกรดรุนแรง

ก่อนที่จะทำความสะอาดหรือดูแลรักษาเครื่อง โปรดถอดปลั๊กของเครื่องออกจากแหล่งจ่ายไฟ หรือปิดเครื่องที่ปุ่มเปิด/ปิด

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

การติดตั้ง

โปรดดำเนินการตามคำแนะนำเหล่านี้ด้วยความรอบคอบเพื่อให้แน่ใจว่าสามารถติดตั้งเครื่องซักผ้าได้อย่างถูกต้องและเพื่อป้องกันอุบัติเหตุเมื่อเริ่มซักผ้า


การนำออกจากบรรจุภัณฑ์

นำเครื่องซักผ้าออกจากบรรจุภัณฑ์ และตรวจสอบความเสียหายที่อาจเกิดขึ้นระหว่างขนส่ง ตรวจสอบให้แน่ใจว่าได้รับส่วนประกอบต่างๆ ครบถ้วนทุกชิ้น ตามที่แสดงไว้ด้านล่าง หากเครื่องซักผ้าเสียหายระหว่างการขนส่ง หรือได้ส่วนประกอบไม่ครบ กรุณาติดต่อ 0-2689-3232 หรือ 1800-29-3232 เพื่อป้องกันการบาดเจ็บหรือเปราะเปื้อน กรุณาใส่ถุงมือป้องกันทุกครั้งที่ยกหรือเคลื่อนย้ายเครื่องซักผ้า



คำเตือน

วัสดุบรรจุภัณฑ์อาจเป็นอันตรายกับเด็ก โปรดทิ้งวัสดุบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม เป็นต้น) ให้พ้นมือเด็ก

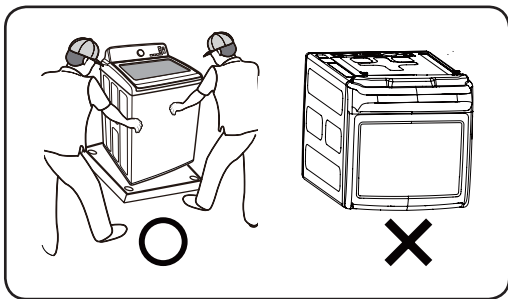


ข้อควรระวัง

ในการนำเครื่องออกจากบรรจุภัณฑ์ ควรช่วยกัน 2 คน ห้ามถอดโฟมกันกระแทกด้วยการคว่ำเครื่องซักผ้าโดยเด็ดขาด

การติดตั้ง


ส่วนประกอบต่าง ๆ

ตรวจสอบให้แน่ใจว่าได้รับชิ้นส่วนทั้งหมดครบถ้วน หากเครื่องซักผ้าหรือชิ้นส่วนมีปัญหา โปรดติดต่อศูนย์บริการลูกค้าของ Samsung ในพื้นที่หรือผู้ขายปลีก

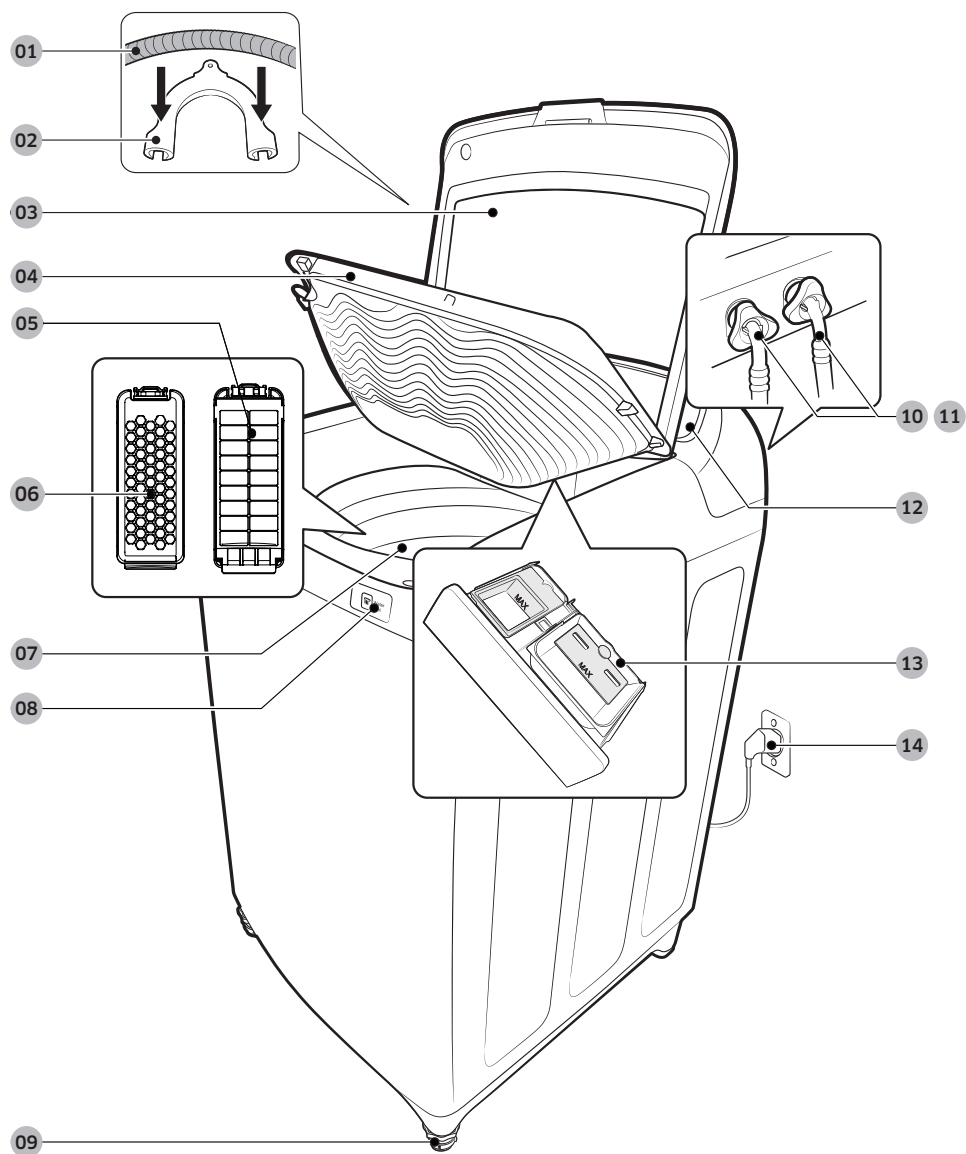


01 ท่อน้ำทิ้ง	02 ตัวน้ำท่อ	03 ฝา
04 ชิงค์ในตัว	05 ตัวกรอง (ด้านหลัง)	06 ตัวกรอง (ด้านหน้า)
07 ถังซัก	08 เครื่องฉีดน้ำ	09 ขาตั้งปรับระดับ
10 ท่อน้ำ (เย็น)	11 ท่อน้ำ (ร้อน)	12 แผงควบคุม
13 ช่องใส่ผลิตภัณฑ์ซักผ้า	14 สายไฟ	


ชิ้นส่วนที่นำมา

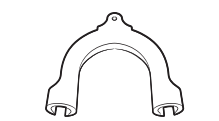


ตัวน้ำท่อ

 


คู่มือผู้ใช้

 


สายรัดพลาสติก

 

ฝาปิดหัวรับน้ำ

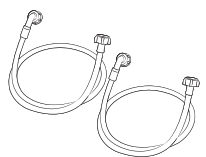

ท่อจ่ายน้ำ

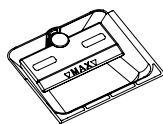

ที่แบ่งสารซักฟอกชนิดน้ำ

 
เครื่องมือสำหรับติดตั้ง



ประแจ



ไขควงปากแบน



ที่ปรับระดับ



หมายเหตุ

- หากต้องการซื้อชิ้นส่วนหรืออุปกรณ์เสริมที่สูญหาย โปรดติดต่อศูนย์บริการของ Samsung ที่เบอร์ 0-2689-3232 หรือ 1800-29-3232
- รูปทรงการออกแบบชิ้นส่วนและอุปกรณ์เสริมอาจแตกต่างกันไปจากภาพที่เห็นด้านบน
- การออกแบบผลิตภัณฑ์อาจมีการเปลี่ยนแปลง โดยมีจำเป็นต้องแจ้งให้ทราบล่วงหน้า
- อย่านำท่อน้ำเก่ากลับมาใช้ซ้ำ ใช้ท่อจ่ายน้ำใหม่ติดตั้งเครื่องซักผ้าเท่านั้น ท่อจ่ายน้ำเก่าอาจรั่วหรือแตกได้ เป็นเหตุให้น้ำท่วมและสร้างความเสียหายแก่ทรัพย์สิน
- ตรวจสอบให้แน่ใจว่ามีแผ่นยางอยู่ในรอยของท่อจ่ายน้ำ

การติดตั้ง

ข้อกำหนดในการเลือกสถานที่ติดตั้ง

ไฟฟ้า

- พิวส์หรือเบรกเกอร์ AC 220V 50 Hz
- วงจรสาขาแยกสำหรับเครื่องซักผ้าโดยเฉพาะ
- เครื่องซักผ้านี้มาพร้อมกับสายไฟ



ข้อควรระวัง

ห้ามใช้สายไฟสำหรับต่อ

การต่อสายดิน

จะต้องติดตั้งสายดินสำหรับเครื่องซักผ้านี้

เครื่องซักผ้านี้จำเป็นต้องต่อสายดิน ในกรณีที่เครื่องทำงานผิดปกติหรือหยุดทำงาน ระบบสายดินจะช่วยลดความเสี่ยงในการถูกไฟฟ้าดูดได้ โดยจะนำทางไฟฟ้าไหลไปยังจุดศักดิ์ต่ำกว่า

เครื่องซักผ้านี้มาพร้อมกับสายไฟที่มีหัวปลั๊กต่อสายดินแบบ 3 ขา สำหรับใช้กับเต้ารับไฟฟ้าที่ติดตั้งและต่อสายดินอย่างถูกต้อง

จะต้องเสียบปลั๊กไฟกับเต้ารับไฟฟ้าที่ติดตั้งและต่อสายดินอย่างถูกต้องตามมาตรฐานและกฎการติดตั้งงานไฟฟ้า



คำเตือน

หากต่อสายดินกับเครื่องซักผ้าไม่ถูกต้อง อาจเพิ่มความเสี่ยงในการถูกไฟฟ้าดูดได้ โปรดติดต่อช่างไฟฟ้าหรือช่างซ่อมบำรุงที่มีความชำนาญ หากไม่แน่ใจว่าต่อสายดินถูกต้องหรือไม่ ห้ามดัดแปลงปลั๊กไฟของเครื่องซักผ้า หากใช้กับเต้ารับไม่ได้ โปรดให้ช่างที่มีความชำนาญติดตั้งเต้ารับที่เหมาะสมให้

ข้อควรระวังเพื่อความปลอดภัยที่สำคัญ

เพื่อป้องกันการเกิดเพลิงไหม้ ไฟฟ้าช็อต หรือการบาดเจ็บโดยไม่จำเป็น การเดินสายและสายกราวด์ทั้งหมดจะต้องกระทำตามข้อกำหนด National Electrical Code ANSI/FNPA, No. 70 ฉบับล่าสุด และรหัสและข้อบังคับในพื้นที่ เจ้าของอุปกรณ์มีหน้าที่จัดหาบริการด้านไฟฟ้าที่เพียงพอสำหรับอุปกรณ์นี้



ข้อควรระวัง

ห้ามต่อสายกราวด์เข้ากับท่อพลาสติก ท่อก๊าซ หรือท่อน้ำร้อน

น้ำ

เพื่อให้เครื่องซักผ้าเติมน้ำได้ในระยะเวลาที่เหมาะสม แรงดันน้ำจะต้องอยู่ที่ 20-116 psi (137-800 kPa)

แรงดันน้ำที่ต่ำกว่า 20 psi อาจทำให้วาล์วน้ำเสียหรือปิดได้ไม่สนิท หรืออาจใช้เวลาเติมน้ำนานกว่าขีดกำหนดของเครื่องซักผ้า เป็นเหตุให้เครื่องซักผ้าปิดระบบทำงาน ฟังก์ชันควบคุมเวลานี้มีเพื่อป้องกันไม่ให้น้ำท่วมบ้าน ในกรณีที่ท่อน้ำเกิดหลวม

ก๊อกน้ำจะต้องอยู่ห่างจากด้านหลังเครื่องซักผ้าไม่เกิน 4 ฟุต (122 ซม.) เพื่อให้ต่อกับท่อรับน้ำของเครื่องซักผ้าได้



หมายเหตุ

ท่อรับน้ำมีอยู่หลายขนาด ขนาดยาวสุดคือ 10 ฟุต (275 ซม.) ใช้สำหรับก๊อกน้ำที่อยู่ไกลจากเครื่องซักผ้า

ข้อควรปฏิบัติในการหลีกเลี่ยงความเสียหายจากน้ำ:

- ติดตั้งให้ก๊อมน้ำอยู่ในระยะที่ต่อถึงง่าย
- ปิดก๊อกเมื่อไม่ได้ใช้งานเครื่องซักผ้า
- หมั่นตรวจสอบรอยรั่วซึมที่ข้อต่อของท่อรับน้ำ



คำเตือน

ตรวจสอบการตอกก๊อและวาล์วน้ำเพื่อหารอยรั่วซึม

อุปกรณ์ระบายน้ำ

ควรวางท่อตั้งที่มีความสูง 39 นิ้ว (99 ซม.) จะต้องต่อเข้ากับท่อตั้งผ่านห้วงยึดท่อน้ำทั้ง ขนาดของท่อตั้งจะต้องใหญ่พอที่ท่อน้ำทั้งจะเสียบเข้าได้ เครื่องซักผ้านี้มีท่อน้ำทั้งต่อมาจากโรงงาน

พื้น

เพื่อให้ได้ประสิทธิภาพสูงสุด โปรดติดตั้งเครื่องซักผ้าบนพื้นที่แข็งแรงมั่นคง พื้นไม้อาจต้องได้รับการเสริมแรงเพื่อลดการสั่นสะเทือน และ/หรือการรับน้ำหนักที่ขาดสมดุล พื้นผิวที่ปูพรมและวัสดุอ่อนนุ่มอาจทำให้เกิดการสั่นสะเทือน และอาจทำให้เครื่องซักผ้าเคลื่อนตัวเล็กน้อยระหว่างรอบการปั่นหมาด ห้ามติดตั้งเครื่องซักผ้าบนที่ยกพื้นหรือโครงสร้างที่ไม่แข็งแรง

ข้อคำนึงในการเลือกที่ติดตั้ง

ห้ามติดตั้งเครื่องซักผ้าในบริเวณที่น้ำอาจเย็นจนแข็งตัวได้ เนื่องจากเครื่องซักผ้าจะมีน้ำค้างอยู่ในวาล์ว บีม และท่อตลอดเวลา น้ำที่แข็งตัวอาจทำให้สายพาน บีม ท่อน้ำ และส่วนประกอบอื่นๆ ของเครื่องซักผ้าเสียหายได้


การติดตั้งในช่องหรือตู้

ระยะห่างต่ำสุดสำหรับการติดตั้งในช่องหรือตู้:

ด้านข้าง	1 นิ้ว/25 มม.	ด้านหน้า	2 นิ้ว/51 มม.
ด้านหลัง	6 นิ้ว/152 มม.	ด้านบน	21 นิ้ว/533 มม.

ถ้าติดตั้งเครื่องซักผ้าและเครื่องอบผ้าไว้ด้วยกัน ด้านหน้าจะต้องมีช่องลมใส่ขนาดอย่างน้อย 72 ตร. นิ้ว (465 ตร. ซม.) ในกรณีที่มีเครื่องซักผ้าเท่านั้น ไม่จำเป็นต้องมีช่องลม


ระยะเว้น

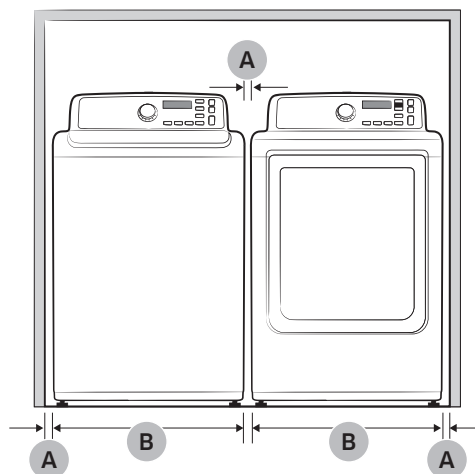

A	1 นิ้ว (2.5 ซม.)
B	27.0 นิ้ว (68.6 ซม.)


การติดตั้ง

มุมมองด้านข้าง - ตู้หรือพื้นที่จำกัด

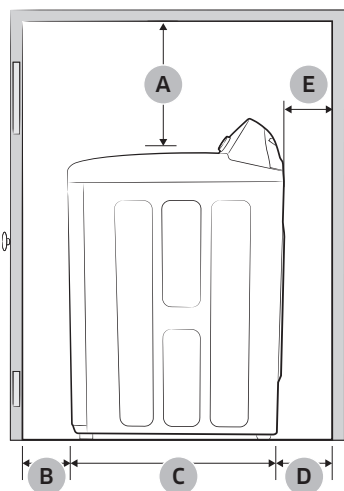


A	21 นิ้ว (53.3 ซม.)
B	2 นิ้ว (5.1 ซม.)
C	29.3 นิ้ว (74.4 ซม.)
D	6 นิ้ว (15.2 ซม.)
E	ระยะห่างระหว่างปลายวาล์วกับกำแพง <ul style="list-style-type: none"> กรณีที่ 1 ประกอบท่อหลังการติดตั้ง: มากกว่า 3.9 นิ้ว (10 ซม.) กรณีที่ 2 ประกอบท่อนก่อนการติดตั้ง: มากกว่า 2.8 นิ้ว (7 ซม.)


ขนาดพื้นที่ที่ต้องใช้

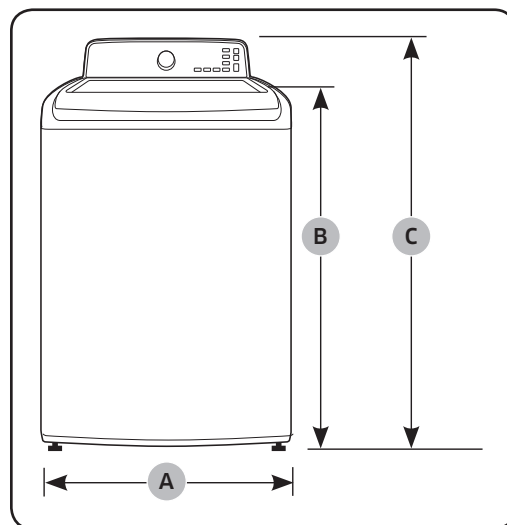


A	27.0 นิ้ว (68.6 ซม.)
B	39.2 นิ้ว (99.5 ซม.)
C	45.1 นิ้ว (114.5 ซม.)

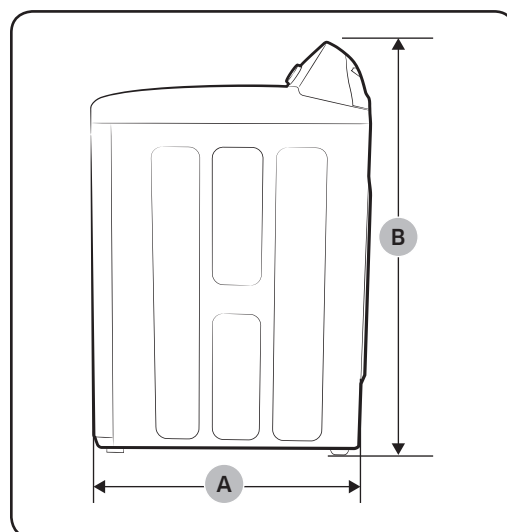

A	29.3 นิ้ว (74.4 ซม.)
B	45.1 นิ้ว (114.5 ซม.)

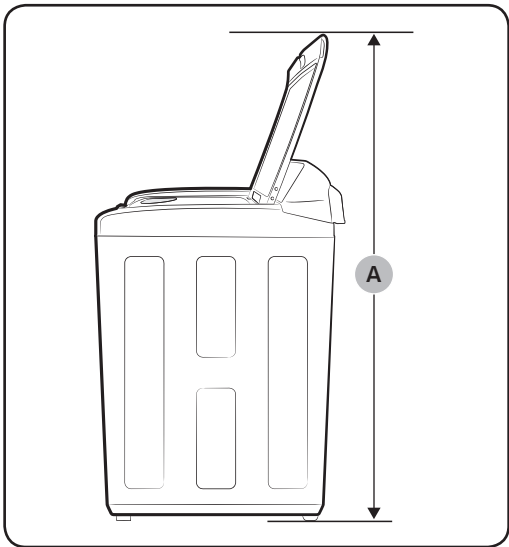

A	59.8 นิ้ว (152.0 ซม.)
---	-----------------------

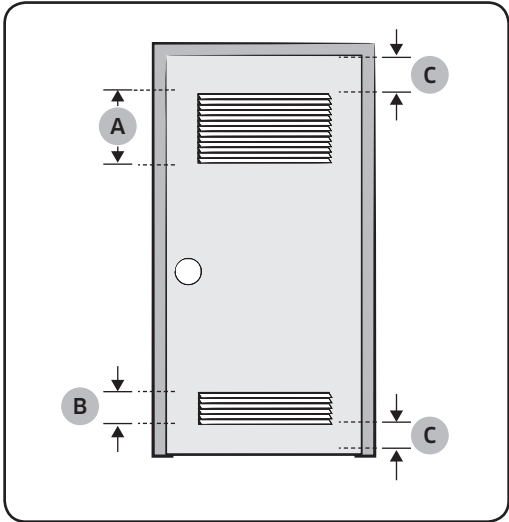

A*	48.0 ตร. นิ้ว (310.0 ตร. ซม.)
B*	24.0 ตร. นิ้ว (155.0 ตร. ซม.)
C	3.0 นิ้ว (7.6 ซม.)

 หมายเหตุ


* พื้นที่ส่วนที่ต้องมี

การติดตั้ง

หมายเหตุสำคัญ

ก่อนติดตั้งเครื่องซักผ้า กรุณาย่านคำแนะนำการติดตั้งต่อไปนี้อย่างละเอียด
โปรดเก็บคู่มือนี้ไว้เพื่อใช้อ้างอิงในภายหลัง
เราขอแนะนำให้คุณจ้างช่างมืออาชีพติดตั้งเครื่องซักผ้านี้

แผนผังการติดตั้ง

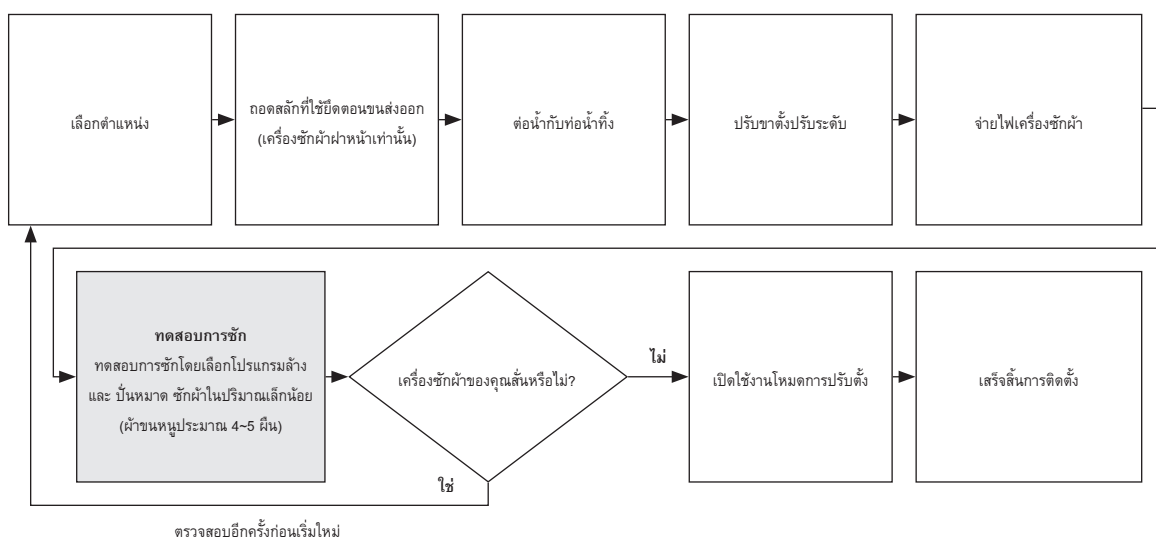

การติดตั้งแบบทีละขั้นตอน

ขั้นตอนที่ 1 เลือกตำแหน่ง




หมายเหตุ

ก่อนที่จะติดตั้งเครื่องซักผ้า โปรดตรวจสอบว่าสถานที่ตั้ง:

- มีพื้นผิวแข็ง ใต้ระดับ โดยไม่มีพรมหรือวัสดุปูพื้นที่อาจปิดกั้นการระบายอากาศ
- พ้นจากแสงแดดโดยตรง
- มีการระบายอากาศที่เพียงพอ
- ไม่ควรติดตั้งในบริเวณที่มีอุณหภูมิหนาวจัด (อุณหภูมิต่ำกว่า 32 °F หรือ 0 °C)
- ห่างจากแหล่งความร้อน เช่น น้ำมันหรือก๊าซ
- มีพื้นที่ว่างเพียงพอที่ไม่ทำให้เครื่องซักผ้าหับสายไฟ

ขั้นตอนที่ 2 ต่อท่อจ่ายน้ำ

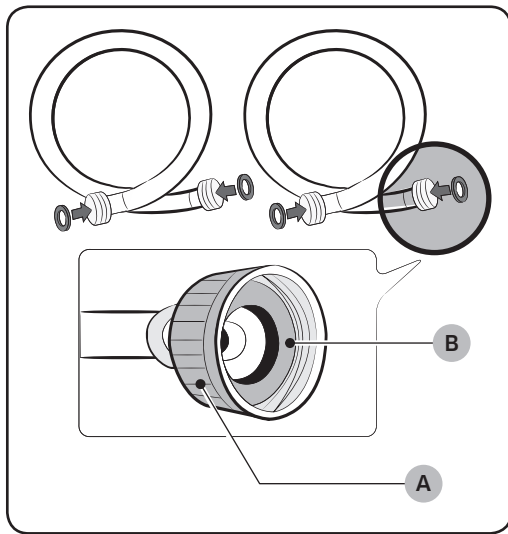

⚠ ข้อควรระวัง

ก่อนติดตั้งท่อจ่ายน้ำ โปรดตรวจสอบให้แน่ใจว่ามีปะเก็นยาง (B) อยู่ใน ยอย (A) ที่ปลายทั้งสองด้านของท่อใหม่ทุกท่อ หากใช้ท่อจ่ายน้ำที่ไม่มีปะเก็นยางติดตั้ง อาจเกิดน้ำรั่วซึมได้


⚠ ข้อควรระวัง

ควรใช้ท่อใหม่ในการติดตั้งเครื่องซักผ้า มิฉะนั้นอาจเกิดปัญหาน้ำรั่วซึมหรือเอ่อล้น และทำให้ทรัพย์สินของคุณเสียหายได้

⚠ ข้อควรระวัง

อย่านำท่อน้ำมาต่อกันเพื่อเพิ่มความยาว ท่อที่ต่อกันในลักษณะนี้อาจรั่วและทำให้เกิดไฟลุคได้ หากท่อน้ำสั้นเกินไป โปรดเปลี่ยนเป็นท่อแรงดันสูงที่ยาวขึ้น

การติดตั้ง

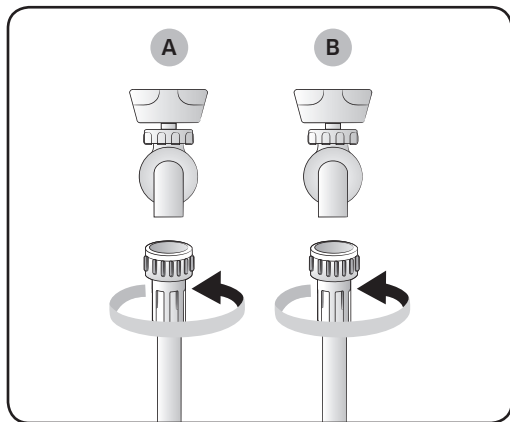

1. ต่อปลายท่อเข้ากับก๊อกน้ำร้อน (B) และ น้ำเย็น (A)
2. ขันข้อต่อด้วยมือจนเกือบสุด แล้วใช้ประแจขันต่ออีกสองในสามของรอบขึ้น




ข้อควรระวัง

อย่าขันข้อต่อแน่นเกินไป และอย่าพันเทปหรือใส่สารกันรั่วในก๊อกน้ำหรือหัวรับน้ำ เพราะอาจทำให้ข้อต่อพังได้




หมายเหตุ

หลังจากต่อท่อจ่ายน้ำกับก๊อกน้ำแล้ว ลองดึงท่อจ่ายน้ำลงดูเพื่อทดสอบว่าต่อแน่นดีหรือไม่

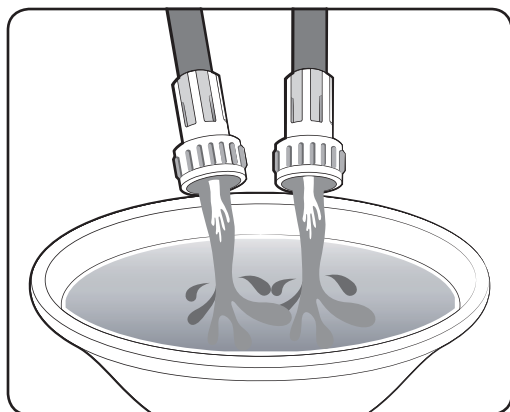

3. วางปลายท่ออีกด้านลงในถังน้ำ แล้วเปิดก๊อกน้ำประมาณ 10-15 วินาที เพื่อไล่สิ่งแปลกปลอมออกจากท่อ น้ำ ปิดก๊อกน้ำ


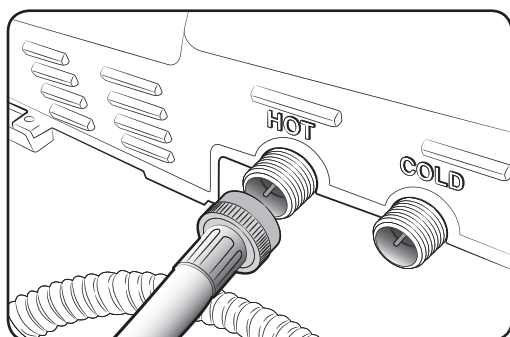


4. ต่อปลายท่อจ่ายน้ำเข้ากับหัวรับน้ำที่อยู่ด้านหลังของเครื่องซักผ้า



ข้อควรระวัง

จะต้องต่อท่อจ่ายน้ำร้อนกับหัวรับน้ำร้อน และท่อจ่ายน้ำเย็นกับหัวรับน้ำเย็นเท่านั้น

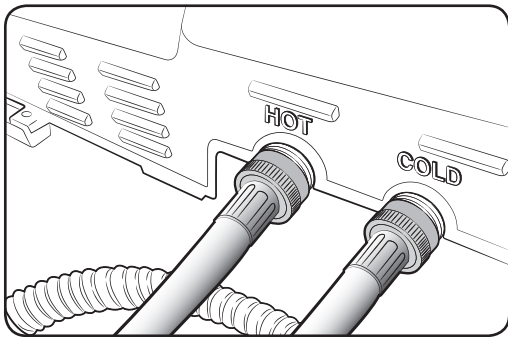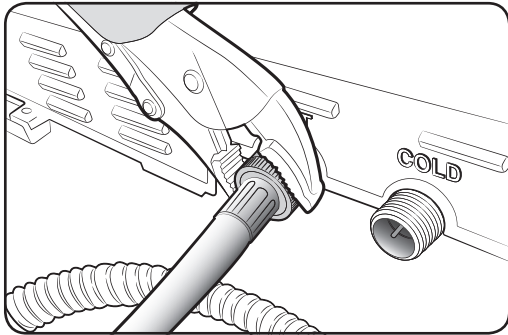

5. ขันข้อต่อด้วยมือจนเกือบสุด แล้วใช้ประแจขันต่ออีกสองในสามของรอบขัน



หมายเหตุ

ควรต่อกับก๊อกน้ำทั้งแบบร้อนและแบบเย็น เพื่อให้เครื่องชักน้ำใช้น้ำได้อย่างเหมาะสม หากไม่ได้ต่อแบบใดแบบหนึ่ง หรือทั้งสองแบบ เครื่องอาจแสดงรหัส "4C" (ไม่ได้เติม) ขึ้น



หมายเหตุ

หากไม่ต้องการใช้ท่อจ่ายน้ำร้อน ให้ปิดฝาท่อน้ำร้อน ในกรณีนี้ คุณจะต้องเลือกน้ำก๊อกเป็นอุณหภูมิเย็น ถ้าคุณเลือกน้ำก๊อก ไฟของตัวเลือกอุณหภูมิเย็นทั้งหมดจะดับลง




ข้อควรระวัง

ตรวจสอบให้แน่ใจว่าท่อจ่ายน้ำไม่บิดงอ หากท่อบิดงอ ท่ออาจรั่วซึมและเป็นเหตุให้เกิดไฟดูดได้

6. เปิดจ่ายน้ำร้อนและน้ำเย็น แล้วตรวจสอบว่าหัวรับน้ำและก๊อกน้ำมีน้ำรั่วซึมหรือไม่

การติดตั้ง


ขั้นตอนที่ 3 - ต่อท่อน้ำทิ้ง

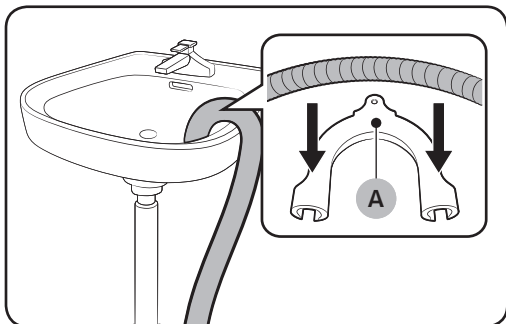

วางตำแหน่งปลายท่อน้ำทิ้งได้ 3 จุด:

บนขอบอ่างชักล้าง

ยึดตัวน้ำท่อ (A) เข้ากับด้านข้างของผนังอ่างด้วยขดลวดเกี่ยว หรือยึดไว้กับก๊อกอ่างด้วยเชือก เพื่อไม่ให้ท่อน้ำทิ้งเขยื้อน

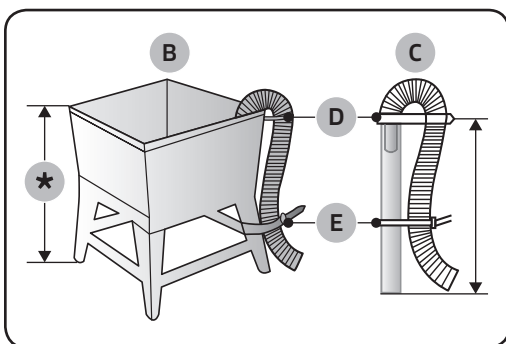


ในท่อตั้งหรืออ่างชักผ้า

ท่อตั้ง (B) และอ่างชักผ้า (C) จะต้องไม่สั้นกว่า 39 นิ้ว (99 ซม.)* และไม่ยาวกว่า 96 นิ้ว (245 ซม.)*

หมายเหตุ

- ตรวจสอบว่าไม่ได้ต่อท่อน้ำทิ้งกับท่อตั้งแน่นเกินไป
- D: ตัวยึดท่อ E: สายรัด

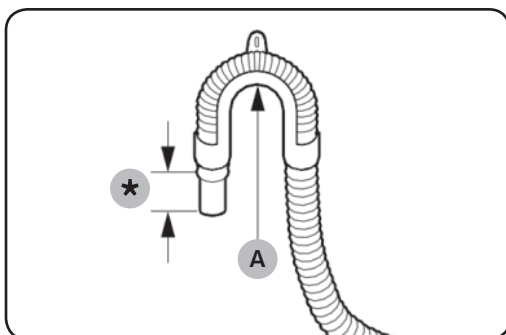

หมายเหตุ

ต่อตัวน้ำท่อ (A) ให้อยู่ภายใน 4 นิ้ว (10 ซม.)* จากปลายท่อน้ำทิ้ง หากท่อน้ำทิ้งอยู่เกินจากปลายของตัวน้ำท่อมกกว่า 4 นิ้ว (10 ซม.) เชื้อราหรือจุลินทรีย์อาจแพร่กระจายเข้าไปในเครื่องชักผ้าได้




หมายเหตุ

สามารถติดตั้งท่อน้ำทิ้งได้สูงที่สุดที่ 96 นิ้ว (245 ซม.) แต่ความสามารถในการระบายน้ำจะลดลงที่ความสูงระดับนี้ ซึ่งอาจทำให้เครื่องชักผ้ามีกลิ่นเหม็นได้เนื่องจากมีน้ำค้างอยู่ในระบบระบายน้ำ

หมายเหตุ

ถ้าติดตั้งท่อน้ำทิ้งต่ำกว่า 39 นิ้ว (99 ซม.) น้ำจะถ่ายเทแบบหมุนวน ซึ่งเป็นตามปรากฏการณ์กาลักน้ำ และเครื่องชักผ้าจะแสดงรหัส "4C" ขึ้น

ขั้นตอนที่ 4 ปรับระดับเครื่องซักผ้า

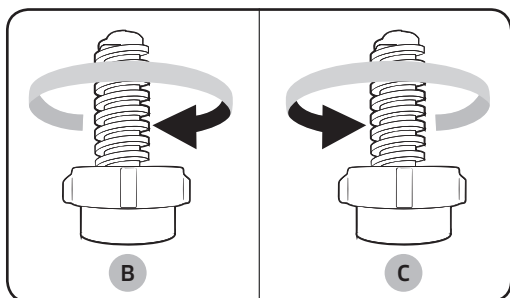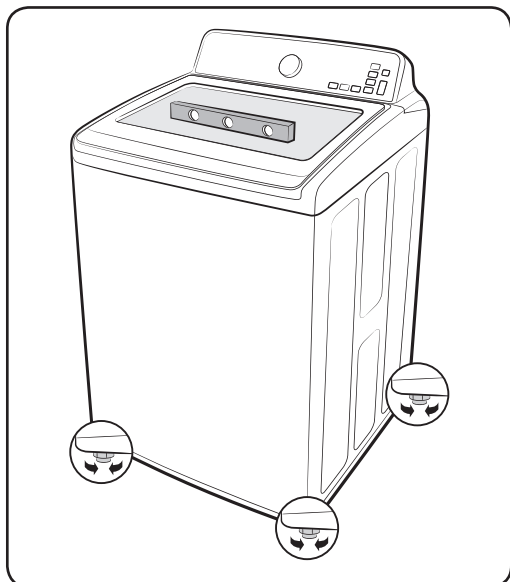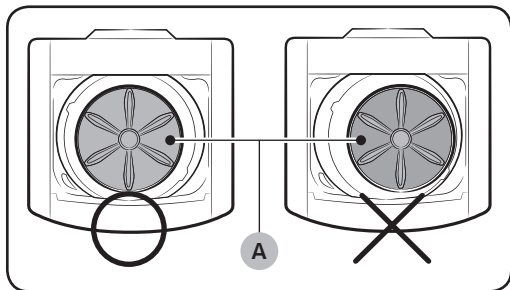

ตรวจสอบว่าเครื่องซักผ้าติดตั้งตรงหรือไม่ โดยดูจากตำแหน่งของถังซัก

1. เลื่อนเครื่องซักผ้าไปยังตำแหน่งที่ต้องการ
2. เปิดฝาเครื่องซักผ้า เทน้ำลงไปให้อยู่ในระดับต่ำกว่าจานซักเล็กน้อย


3. ถ้าเครื่องติดตั้ง **จานซัก (A)** จะอยู่ตรงกลางน้ำ ดังแสดงในรูป หากไม่อยู่ตรงกลาง ให้ปรับระดับเครื่องซักผ้า โดยหมุนขาตั้งตัวหน้าตามเข็มนาฬิกาหรือทวนเข็มนาฬิกา ทั้งนี้ขึ้นกับความเอียง

 **หมายเหตุ**

หมุนขาตั้งตัวหน้าตามเข็มนาฬิกา **(B)** เพื่อปรับระดับลง และหมุนทวนเข็มนาฬิกา **(C)** เพื่อปรับระดับขึ้น

การติดตั้ง

ขั้นตอนที่ 5 จ่ายไฟเครื่องซักผ้า

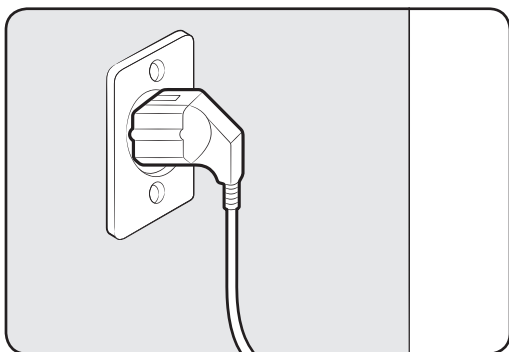

ต่อสายไฟเข้ากับเต้ารับไฟฟ้าแบบ 3 ช่อง แรงดัน 220 V ความถี่ 50 Hz ที่ผ่านการรับรองและมีการป้องกันด้วยฟิวส์หรือเบรกเกอร์วงจร เมื่อเสียบปลั๊กไฟกับเต้ารับแบบ 3 ช่องที่มีระบบสายดิน เครื่องซักผ้าจะต่อสายดินผ่านขาปลั๊กที่สาม

การใช้งานทดสอบ

โปรดตรวจสอบว่าคุณติดตั้งเครื่องซักผ้าอย่างถูกต้อง โดยทดลองใช้โปรแกรมล้าง และ บั่นหมาด หลังจากติดตั้งเสร็จ

ขั้นตอนที่ 6 ทดสอบการซัก

ตรวจสอบว่าเครื่องซักผ้าติดตั้งถูกต้องหรือไม่ โดยทดสอบการซักตามขั้นตอนต่อไปนี้

1. ใส่เสื้อผ้าหนักประมาณ 6 ปอนด์ ลงในถัง
2. กดปุ่มเปิด/ปิดเพื่อเปิดเครื่องซักผ้า
3. หมุนโปรแกรมซักเป็นล้าง และ ปั่นหมาด
4. กดปุ่มเริ่ม/พักเพิ่มเริ่มทดสอบ
5. เครื่องซักผ้าไม่ควรรโยกหรือสั่นรุนแรง ในขณะที่จ่ายน้ำเข้าเครื่อง หรือในขณะที่ซักหรือปั่น และน้ำควรระบายได้ดีในรอบการปั่นหมาด



หมายเหตุ

หากมีน้ำรั่วซึมขณะจ่ายหรือระบายน้ำ ให้ตรวจสอบจุดเชื่อมต่อต่างๆ ดู "ขั้นตอนที่ 2 ต่อท่อจ่ายน้ำ" ในหน้า 19



หมายเหตุ

หากเครื่องซักผ้าโยกหรือสั่นรุนแรง ให้ปรับระดับเครื่องซักผ้าอีกครั้ง ดู "ขั้นตอนที่ 4 ปรับระดับเครื่องซักผ้า" ในหน้า 23

ขั้นตอนที่ 7 โหมดการปรับตั้ง

เครื่องซักผ้า Samsung จะตรวจจับน้ำหนักผ้าโดยอัตโนมัติ

เพื่อให้มีการตรวจจับน้ำหนักได้แม่นยำ โปรดเรียกใช้โหมดการปรับตั้งหลังจากติดตั้งอุปกรณ์

วิธีเรียกใช้โหมดการปรับตั้ง ให้ทำตามขั้นตอนต่อไปนี้:

1. นำผ้าและสิ่งต่างๆ ในเครื่องออก
2. กดปุ่มระดับน้ำและตั้งเวลาสิ้นสุดค้างไว้พร้อมกันอย่างน้อย 3 วินาที เมื่อเครื่องเปิดทำงาน
3. กดปุ่มเริ่ม/พักเพื่อเปิดใช้งานโหมดการปรับตั้ง
4. จานซักจะหมุนตามเข็มนาฬิกาและทวนเข็มนาฬิกาเป็นเวลาประมาณ 1 นาที
5. เมื่อ "โหมดการปรับตั้ง" สิ้นสุดลง ข้อความ "End" (สิ้นสุด) จะปรากฏในหน้าจอแสดงผล และเครื่องจะปิดโดยอัตโนมัติ ขณะนี้เครื่องซักผ้าพร้อมใช้งานแล้ว


คำแนะนำในการใช้งาน



คำเตือน

เพื่อลดความเสี่ยงในการเกิดอัคคีภัย ไฟฟ้าดูด หรือการบาดเจ็บขณะใช้เครื่องซักผ้า โปรดปฏิบัติตามข้อควรระวังทั่วไป และข้อควรระวังต่อไปนี้:

การใส่ผ้าซัก

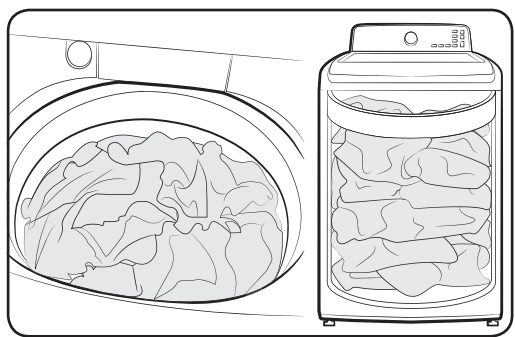

- ใส่ผ้าแห้งที่คลี่แล้วให้ทั่วถึงซักเพื่อเพิ่มประสิทธิภาพในการซักและป้องกันไม่ให้เครื่องทำงานผิดปกติหรือทำให้ผ้ายับย่น
- เพื่อให้ได้ประสิทธิภาพสูงสุด ตรวจสอบว่าผ้าซักถูกกระจายออกเท่าๆ กัน
- ควรซักผ้าเนื้ออบบางเช่น เสื้อยกทรง ถุงน่อง และชุดชั้นในอื่นๆ ด้วยโปรแกรมถนอมผ้าพร้อมกับผ้าเนื้อเบาเหมือนกัน
- ในกรณีซักผ้าไม่เต็มถึง เช่น ซักผ้าชิ้นใหญ่ หรือซักผ้าชิ้นเล็กเพียงไม่กี่ชิ้น อย่างเช่น พรหม หมอน ตุ๊กตา หรือเสื้อเวดเดอร์เพียง 1 หรือ 2 ตัว ให้ใส่ผ้าขนหนูเพิ่มไปสัก 2-3 ตัว เพื่อเพิ่มประสิทธิภาพในการปั่นหมาด
- อย่าใส่ผ้าชิ้นหนาใหญ่ยกเว้นผ้าปูที่นอนเมื่อใช้โปรแกรมถนอมผ้า



หมายเหตุ

ระหว่างรอบปั่น เครื่องซักผ้าอาจเติมน้ำเพิ่มเพื่อกระจายผ้าให้ทั่ว และปรับสมดุลภายในถึงซัก

- เมื่อซักผ้าที่เปียกมาก อย่าใส่ผ้าเกินปริมาณ ผ้าอาจไม่สะอาด

วิธีเพิ่มผ้าที่ลืมนใส่:

- กดปุ่มเริ่ม/พักเพื่อหยุดเครื่องซักผ้าชั่วคราว
- รอให้ผ้าเครื่องปลดล็อกโดยอัตโนมัติ แล้วเปิดฝาดูออก
- ใส่ผ้าเพิ่ม ปิดฝา แล้วกดปุ่มเริ่ม/พัก เครื่องจะทำงานต่อจากเดิม

เริ่มการใช้งาน

1. ใส่ผ้า
2. ใส่น้ำยาซักผ้าหรือผงซักฟอกลงในเครื่องจ่ายอัตโนมัติ (ดู"การใช้ผลิตภัณฑ์ซักผ้า" ในหน้า 37)
3. เลือกโปรแกรมซักและตัวเลือกการทำงานที่เหมาะสม (ดู"การซักผ้า" ในหน้า 28)
4. ปิดฝา
5. กดปุ่มเริ่ม/พัก
6. ไฟบอกสถานะซักจะสว่างขึ้น
7. เวลาในการซักโดยประมาณจะปรากฏขึ้นบนจอแสดงผล
เวลาที่แสดงจะเปลี่ยนไปตามเวลาที่เหลือในการซัก




หมายเหตุ

เวลาที่ใช้ซักจริงอาจต่างไปจากเวลาที่ปรากฏในจอแสดงผล ทั้งนี้ขึ้นอยู่กับแรงดันน้ำ อุณหภูมิ น้ำ ผลิตภัณฑ์ซักผ้า และผ้าที่ซัก

8. ก่อนที่เครื่องซักผ้าจะเริ่มเติมน้ำ จะได้ยินเสียงเครื่องดังคลิกๆ เสียงนี้แสดงว่าเครื่องกำลังตรวจสอบว่าฝาเครื่องล็อกอยู่หรือไม่ พร้อมระบายน้ำออกแบบรวดเร็ว



หมายเหตุ

- เมื่อซักเสร็จ ไฟบอกสถานะ  ฝาเครื่องล็อก จะดับลง และไฟ "End" (สิ้นสุด) จะปรากฏขึ้น
- การกดปุ่มเปิด/ปิดจะเป็นการยกเลิกการซักและสั่งให้เครื่องหยุดทำงาน
- ไฟบอกสถานะซัก ล้างน้ำ และรอบปั่นจะสว่างขึ้นตามรอบการทำงาน


การซักผ้า



คำเตือน

เพื่อลดความเสี่ยงในการเกิดอัคคีภัย ไฟฟ้าดูด หรือการบาดเจ็บ โปรดอ่านคำแนะนำเพื่อความปลอดภัยก่อนใช้งาน

แผงควบคุม

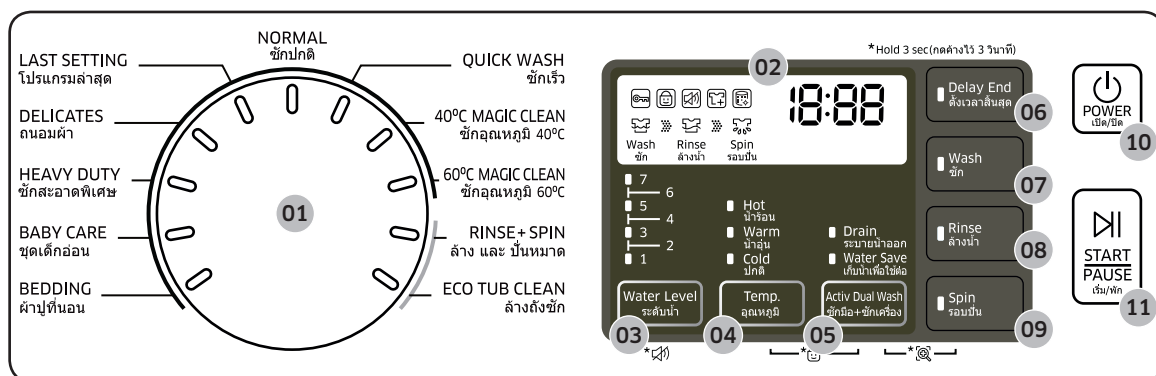

01 โปรแกรมซัก	หมุนโปรแกรมซักเพื่อเลือกโปรแกรมที่ต้องการ ไฟบอกสถานะโปรแกรมที่เลือกจะสว่างขึ้น
02 จอแสดงผล	แสดงคำแนะนำและสิ่งผิดปกติ รวมทั้งบอกสถานะการทำงานและเวลาที่เหลือ
03 ระดับน้ำ	เครื่องจะปรับระดับน้ำโดยอัตโนมัติ แต่คุณสามารถใช้ปุ่มนี้เลือกระดับน้ำเองได้ ระดับน้ำและปริมาณการใช้น้ำอาจแตกต่างกันไป ขึ้นอยู่กับเนื้อผ้าและความชื้นของผ้า
04 อุณหภูมิ	กดปุ่มนี้ซ้ำๆ เพื่อเลือกระดับอุณหภูมิที่ต้องการ <ul style="list-style-type: none"> น้ำร้อน - ผ้าขาวและเบื่อนมาก สีไม่ตก น้ำอุ่น - สีไม่ตก ปกติ - สีสด เบื่อนเล็กน้อย
05 ซักมือ+ซักเครื่อง	ปุ่มนี้เลือกการทำงานได้ 2 แบบ จะใช้ได้เมื่อเครื่องซักผ้าหยุดทำงานหรืออยู่ในโหมดการทำงาน <ul style="list-style-type: none"> เก็บน้ำเพื่อใช้ต่อ (ค่าเริ่มต้น): น้ำน้ำที่เหลือในถังหลังจากใช้ฟังก์ชันฉีดน้ำไปใช้ต่อ เครื่องจะนำน้ำไปใช้ในรอบการซักหลัก ระบายน้ำออก: เลือกฟังก์ชันฉีดน้ำเพื่อระบายน้ำที่เหลือออก เมื่อระบายน้ำเสร็จ เครื่องซักผ้าจะเปลี่ยนเป็นโหมดเก็บน้ำเพื่อใช้ต่อโดยอัตโนมัติ จากนั้นให้เลือกโปรแกรมซัก
06 ตั้งเวลาสิ้นสุด	ตั้งเวลาสิ้นสุดได้สูงสุด 19 ชั่วโมง โดยเพิ่มได้ทีละ 1 ชั่วโมง เวลาที่ปรากฏคือเวลาที่การซักผ้าจะสิ้นสุด
07 ซัก	กดปุ่มนี้เฉพาะในกรณีที่ต้องการซักหรือปรับเวลาในการซัก
08 ล้างน้ำ	กดปุ่มนี้เฉพาะในกรณีที่ต้องการล้างน้ำหรือปรับจำนวนครั้งในการล้าง

09 รอบปั่น	กดปุ่มนี้เฉพาะในกรณีที่ต้องการปั่นหมาดหรือปรับเวลาในการปั่นหมาด คุณสามารถตั้งค่าเวลาปั่นหมาดได้ตั้งแต่ 1 ถึง 9 นาที เมื่อเลือกเฉพาะการปั่นหมาด เวลาในการปั่นจะไม่เท่ากับเวลาที่เหลือทั้งหมด เนื่องจากเวลาที่เหลือทั้งหมดมีทั้งเวลาที่ปั่นจริง เวลาระบายน้ำ และเวลาหยุดทำงาน
10 เปิด/ปิด	กด 1 ครั้งเพื่อเปิดเครื่อง กดอีกครั้งเพื่อปิดเครื่อง ถ้าเปิดเครื่องทิ้งไว้เกิน 10 นาที โดยไม่กดปุ่มใดๆ เลย เครื่องจะปิดทำงานโดยอัตโนมัติ
11 เริ่ม/พัก	กดเพื่อพักและเริ่มทำงานใหม่

การซักผ้า

โปรแกรมซักผ้า

โปรแกรมซักผ้า	คำอธิบาย
ซักปกติ	เหมาะกับผ้าเกือบทุกประเภท ทั้งผ้าฝ้าย ลินิน และผ้าที่เปื้อนปานกลาง
โปรแกรมล่าสุด	เลือกโปรแกรมนี้นี้เมื่อต้องการใช้การตั้งค่าของโปรแกรมล่าสุด เครื่องจะทำงานโดยใช้การตั้งค่าล่าสุด ไม่ต้องตั้งค่าเองใหม่ เมื่อกดปุ่มเริ่ม/พัก ระบบจะบันทึกการตั้งค่าที่เลือกไว้ โดยอัตโนมัติ เมื่อจะใช้โปรแกรมที่ระบบบันทึกไว้ ให้กดปุ่มโปรแกรมล่าสุด แล้วกดปุ่มเริ่ม/พัก
ถนอมผ้า	เหมาะสำหรับซักผ้าเนื้อบางที่เสียรูปทรงหรือเสียหายง่าย รวมทั้งเสื้อสเวตเตอร์ขนสัตว์และเสื้อคลุมที่มีป้าย แนะนำให้ซักแบบถนอมผ้า
ซักสะอาดพิเศษ	เหมาะสำหรับผ้าเนื้อหนา สีไม่ตก และเปื้อนมาก
ชุดเด็กอ่อน	เหมาะสำหรับผ้าที่ต้องซักบ่อยๆ เช่น เสื้อผ้าเด็กและชุดชั้นใน เพื่อรักษาเนื้อผ้าไม่ให้เสียหาย ในโหมดนี้ จะมีการ เพิ่มรอบการล้างน้ำเพื่อให้ผ้าสะอาดหมดจด
ผ้าปูที่นอน	เหมาะสำหรับซักผ้าชิ้นใหญ่ เช่น ผ้าห่มและผ้าปูที่นอน ควรใช้น้ำยาซักผ้า เมื่อซักผ้าคลุมเตียง
ซักเร็ว	เหมาะสำหรับซักผ้าที่เปื้อนเล็กน้อย ซึ่งต้องการซักแบบรวดเร็ว
ซักอุณหภูมิ 40°C	จัดการบาป้อนได้อย่างมีประสิทธิภาพ ด้วยฟังก์ชันกำหนดอุณหภูมิน้ำ
ซักอุณหภูมิ 60°C	จัดการบาป้อนได้อย่างมีประสิทธิภาพ ด้วยฟังก์ชันกำหนดอุณหภูมิน้ำ
ล้าง และ ปั่นหมาด	ใช้สำหรับผ้าที่ต้องการล้างน้ำเท่านั้น หรือใช้เมื่อต้องการใส่น้ำยาปรับผ้านุ่ม
ล้างถึงซัก	ใช้โปรแกรมนี้นี้เมื่อต้องการทำความสะอาดถังซัก ช่วยให้ถังซักสะอาด ถูกสุขอนามัย

ตัวเลือกการทำงาน

ระบบล๊อคป้องกันเด็ก

ฟังก์ชันนี้จะป้องกันไม่ให้เด็กเล่นเครื่องซักผ้า

วิธีเปิดใช้งานฟังก์ชันล๊อคป้องกันเด็ก

กดปุ่มอุณหภูมิและซักมือ+ซักเครื่องค้างไว้พร้อมกันประมาณ 3 วินาที

- เมื่อเปิดใช้งานฟังก์ชันล๊อคป้องกันเด็ก ไฟสัญลักษณ์  ล๊อคป้องกันเด็กจะกระพริบ

การใช้ฟังก์ชันล๊อคป้องกันเด็ก

ถ้าเปิดฝาเครื่อง ขณะอยู่ในโหมดล๊อคป้องกันเด็ก รหัส “dC” จะปรากฏขึ้น และสัญญาณเตือนจะดัง

- ถ้าระดับน้ำในถังอยู่สูงกว่าระดับลอดภัย รหัส “dC” จะปรากฏขึ้นบนจอแสดงผล LED หลังจากนั้น 30 วินาที เครื่องซักผ้าจะบังคับให้น้ำระบายออก ปุ่มเปิด/ปิดจะไม่ทำงาน ขณะที่เครื่องระบายน้ำออก เมื่ออยู่ในโหมดล๊อคป้องกันเด็ก
- ถ้าฝาเครื่องเปิด ในขณะที่ระดับน้ำในถังอยู่สูงกว่าระดับลอดภัย และเครื่องอยู่ในโหมดล๊อคป้องกันเด็ก รหัส “CL” จะปรากฏขึ้นบนจอแสดงผล LED ถึงแม้ว่าเครื่องจะปิดทำงานอยู่ก็ตาม และเครื่องจะบังคับให้น้ำระบายออก
- ถึงแม้เครื่องซักผ้าจะปิดทำงานอยู่ แต่ถ้าฝาเปิดในขณะที่ระดับน้ำอยู่ในสูงเกินระดับน้ำรีเซต รหัส “CL” จะปรากฏขึ้นบนจอแสดงผล LED โดยไม่มีสัญญาณเตือน แล้วเครื่องจะเริ่มระบายน้ำออก เมื่อระบายน้ำเสร็จ เครื่องจะปิดทำงานเองโดยอัตโนมัติ
- ถึงแม้จะอยู่ในโหมดล๊อคป้องกันเด็ก แต่ก็สามารถใช้งานได้ทุกปุ่ม เว้นแต่เมื่อเปิดฝาเครื่องเท่านั้น
- หลังจากบังคับระบายน้ำออกแล้ว รหัส “CL” จะกระพริบติดดับสลับกัน ช่วงละ 1 วินาที แล้วเครื่องซักผ้าจะเข้าสู่โหมด “CL” (เมื่ออยู่ในโหมด “CL” มีแต่ปุ่มเปิด/ปิดเท่านั้นที่ใช้ได้)
- หากต้องการยกเลิกโหมด “CL” ต้องปิดเครื่องแล้วเปิดใหม่
- หากต้องการยกเลิกโหมด “dC” ให้ปิดการใช้งานฟังก์ชันล๊อคป้องกันเด็ก วิธีปิดการใช้งานฟังก์ชันล๊อคป้องกันเด็ก ให้กดปุ่มอุณหภูมิและซักมือ+ซักเครื่องค้างไว้พร้อมกันอย่างน้อย 3 วินาที

หมายเหตุ

การเพิ่มผ้าซักเมื่อเครื่องอยู่ในโหมดล๊อคป้องกันเด็ก

หากต้องการเพิ่มผ้าซัก ให้ปิดการใช้งานฟังก์ชันล๊อคป้องกันเด็ก วิธีปิดการใช้งานฟังก์ชันล๊อคป้องกันเด็ก ให้กดปุ่มอุณหภูมิและซักมือ+ซักเครื่องค้างไว้พร้อมกันอย่างน้อย 3 วินาที ดู “การพักเครื่อง” ในหน้า 33

วิธีปิดการใช้งานฟังก์ชันล๊อคป้องกันเด็ก

กดปุ่มอุณหภูมิและซักมือ+ซักเครื่อง ค้างไว้พร้อมกันประมาณ 3 วินาที

- จากนั้น ไฟสัญลักษณ์  ล๊อคป้องกันเด็กจะดับลง
- ฟังก์ชันนี้จะช่วยป้องกันไม่ให้เด็กหรือผู้ทุพพลภาพใช้งานเครื่องโดยไม่ตั้งใจ และได้รับบาดเจ็บ

คำเตือน

ถ้าเด็กปีนเข้าไปในเครื่องซักผ้า เด็กอาจติดอยู่ในเครื่องและหายใจไม่ออก

ข้อควรระวัง

- เมื่อเปิดใช้งานฟังก์ชันล๊อคป้องกันเด็กแล้ว ฟังก์ชันนี้จะทำงานตลอดเวลา แม้ในขณะที่เครื่องปิด
- การพยายามเปิดฝาเครื่องอาจทำให้บาดเจ็บหรือเครื่องอาจเสียหายได้

หมายเหตุ


หลังจากที่เปิดใช้งานฟังก์ชันล๊อคป้องกันเด็กแล้ว หากต้องการเพิ่มผ้าซัก คุณจะต้องปิดฟังก์ชันนี้ก่อน

เสียง

เลือกฟังก์ชันบดเสียงได้ทุกโปรแกรมซักผ้า

เพิ่มผ้า

คุณสามารถเพิ่มหรือเอาผ้าออกได้ ถึงแม้จะเริ่มซักไปแล้ว ถ้าไฟสัญลักษณ์

 เพิ่มผ้ายังปรากฏอยู่ กดปุ่มเริ่ม/พักเพื่อปลดล๊อคฝาเครื่อง หากเปิดฝาเครื่องแล้วต้องการซักผ้าต่อ ให้ปิดฝาแล้วกดปุ่มเริ่ม/พัก

การซักผ้า

ตั้งเวลาสิ้นสุด

คุณสามารถตั้งให้เครื่องซักผ้าทำงานโดยอัตโนมัติภายหลังได้ โดยเลือกตั้งเวลาสิ้นสุด

เวลาที่ปรากฏคือเวลาที่การซักผ้าจะสิ้นสุด

1. ตั้งโปรแกรมการซัก
2. กดปุ่มตั้งเวลาสิ้นสุดซ้ำๆ จนกว่าจะได้เวลาที่ต้องการ
3. กดปุ่มเริ่ม/พัก ไปบอกสถานะ "ตั้งเวลาสิ้นสุด" จะสว่างขึ้น แล้วนาฬิกาจะเริ่มนับถอยหลังจนกว่าจะถึงเวลาที่ตั้งไว้
4. หากต้องการยกเลิกฟังก์ชันตั้งเวลาสิ้นสุด ให้ปิดแล้วเปิดเครื่องซักผ้าใหม่

ระบบกระจายละอองน้ำ

ฟังก์ชันนี้จะทำงานโดยพ่นน้ำจากหัวฉีด ซึ่งแยกจากระบบจ่ายน้ำหลัก โดยพ่นน้ำล้างผงซักฟอกตั้งแต่เริ่มรอบการล้างน้ำ ช่วยให้ซักผ้าได้อย่างมีประสิทธิภาพ อย่างไรก็ตาม ฟังก์ชันนี้ไม่ได้ใช้กับรอบการซัก แต่จะใช้กับรอบการล้างน้ำ ดังนั้นถ้าจะพุดให้ถูกคือ ฟังก์ชันนี้จะช่วยให้ล้างผงซักฟอกได้สะอาดหมดจดขึ้น (ฟังก์ชันกระจายละอองน้ำอาจไม่ทำงาน หากใส่ผ้าปริมาณมากเกินไป)

Smart Check (ระบบตรวจสอบอัจฉริยะ)

ฟังก์ชันนี้ช่วยให้คุณตรวจสอบสถานะการทำงานของเครื่องซักผ้าได้โดยใช้สมาร์ทโฟน

1. วิธีเปิดใช้ฟังก์ชันระบบตรวจสอบอัจฉริยะ ให้กดปุ่ม**ซักรีดมือ+ซักเครื่อง** และรอบปั่นค้างไว้ 3 วินาที หลังจากนั้นเปิดเครื่องหรือเมื่อเกิดข้อผิดพลาดขึ้น

หมายเหตุ

หลังจากใช้ฟังก์ชันนี้ ระบบจะลบประวัติข้อมูลรหัสข้อผิดพลาดทิ้ง

2. ไปบอกสถานะระบบตรวจสอบอัจฉริยะจะสว่างขึ้น
3. เปิดใช้แอประบบตรวจสอบอัจฉริยะในสมาร์ทโฟน
 - Android: ตระกูล Galaxy S และ Galaxy Note (รุ่นอื่นอาจทำงานไม่ปกติ)
ระบบปฏิบัติการที่รองรับ: Android 2.2 หรือสูงกว่า
 - iOS: iPhone
ระบบปฏิบัติการที่รองรับ: iOS 4.3 หรือสูงกว่า
4. ใช้กล้องสมาร์ทโฟนจับภาพแผงควบคุมเครื่องซักผ้า
5. ถ้ากล้องของสมาร์ทโฟนโฟกัสที่แผงของเครื่องซักผ้าแล้ว แผงและข้อความผิดพลาดจะถูกจำโดยอัตโนมัติและประเภทของข้อความผิดพลาดและวิธีการแก้ไขจะถูกแสดงบนสมาร์ทโฟน
6. หากสมาร์ทโฟนไม่รู้จักรหัสแสดงข้อความผิดพลาดมากกว่าสองครั้ง โปรดกรอกรหัสแสดงข้อความผิดพลาดที่ถูกแสดงบนแผงของเครื่องซักผ้าด้วยตนเองลงไปในแอป Smart Check

หมายเหตุ

การดาวน์โหลดแอป Smart Check

- ดาวน์โหลดแอป Samsung Laundry เข้าไปในมือถือของท่านจาก Android มาร์เก็ต หรือ Apple App สโตร์ (ค้นหาคำว่า : Samsung Smart Washer/Dryer)

หมายเหตุ

ข้อควรระวังเมื่อใช้ Smart Check

- ถ้าไฟจากหลอดไฟ, หลอดฟลูออเรสเซนต์, หรือโคมไฟสว่างขึ้นบนแผงของเครื่องซักผ้า สมาร์ทโฟนอาจจะไม่สามารถจดจำข้อความแสดงข้อความผิดพลาดที่แสดงบนแผงได้ง่ายๆ
- หากท่านถือสมาร์ทโฟนให้ทำมุมด้านหน้าของแผงแสดงกว้างและสูงจนเกินไป อาจจะทำให้ไม่สามารถจำรหัสความผิดพลาด เพื่อผลลัพธ์ที่ดีที่สุด ถือสมาร์ทโฟนเอาไว้ด้านหน้าของแผงและขนานหรือเกือบจะเป็นแนวนานกับแผง

การซักผ้าโดยใช้โปรแกรมซัก

เครื่องซักผ้าของคุณทำให้งานซักกลายเป็นเรื่องง่าย ด้วยระบบควบคุมอัตโนมัติ "พีชชีคอนโทรล" ของ Samsung เมื่อคุณเลือกโปรแกรมซัก เครื่องจะกำหนดอุณหภูมิ เวลาซัก และความเร็วในการซักให้

1. กดปุ่มเปิด/ปิด
2. เปิดฝาเครื่อง
3. ใส่ผ้าลงไปทีละชั้น อย่าให้ล้น
4. ใส่น้ำยาซักผ้า (หรือผงซักฟอก) น้ำยาปรับผ้านุ่ม และ/หรือสารฟอกขาว (ถ้าจำเป็น) ลงในช่องเฉพาะของผลิตภัณฑ์แต่ละประเภท ดู "การใช้ผลิตภัณฑ์ซักผ้า" ในหน้า 37
5. ปิดฝา
6. ใช้โปรแกรมซักเพื่อเลือกโปรแกรมที่เหมาะสมกับประเภทของผ้า: ซักปกติ โปรแกรมล่าสุด ถนอมผ้า ซักสะอาดพิเศษ ชุดเด็กอ่อน ผ้าปูที่นอน ซักเร็ว ซักอุณหภูมิ 40°C ซักอุณหภูมิ 60°C ล้าง และปั่นหมาด และล้างถึงซักไฟบอกสถานะของโปรแกรมที่เลือกจะสว่างขึ้นบนแผงควบคุม
7. คุณสามารถควบคุมอุณหภูมิ น้ำ จำนวนรอบการล้างน้ำ เวลาปั่นหมาด และเวลาสิ้นสุดได้ในตอนนี้ โดยกดที่ปุ่มตัวเลือก
8. กดเริ่ม/พัก เครื่องจะเริ่มทำงาน ไฟบอกสถานะการทำงานจะสว่างขึ้น และเวลาที่เหลือจะปรากฏบนจอแสดงผล

การพักเครื่อง

หากต้องการเพิ่มหรือเอาผ้าออกขณะซัก โปรดปฏิบัติตามขั้นตอนต่อไปนี้:

1. กดปุ่มเริ่ม/พัก เพื่อปลดล็อกฝาเครื่อง



หมายเหตุ

หากน้ำร้อนเกินไป จะไม่สามารถเปิดฝาเครื่องได้

2. เพิ่มหรือเอาผ้าออก
3. ปิดฝา แล้วกดปุ่มเริ่ม/พักเพื่อเริ่มซักใหม่



หมายเหตุ

หากใช้ฟังก์ชันล็อกป้องกันเด็กอยู่ จะต้องปิดฟังก์ชันนี้ก่อน ดูหน้า 31

เมื่อโปรแกรมซักสิ้นสุด:

หลังจากที่โปรแกรมซักสิ้นสุด เครื่องจะปิดทำงานโดยอัตโนมัติ

1. เปิดฝาเครื่อง
2. เอาผ้าออก

การซักผ้า

ATC (ระบบควบคุมอุณหภูมิอัตโนมัติ)

ATC คือฟังก์ชันควบคุมอุณหภูมิน้ำด้วยระบบเซ็นเซอร์วัดอุณหภูมิ (เทอร์มิสเตอร์)

หมายเหตุ

เนื่องจากน้ำมีอุณหภูมิหลายระดับ ขึ้นอยู่กับปัจจัยต่างๆ (พื้นที่เย็น พื้นที่อบอุ่น อุณหภูมิ น้ำ การตั้งค่าอุณหภูมิเครื่องทำร้อน เป็นต้น) ดังนั้นฟังก์ชัน ATC จึงทำหน้าที่รักษาระดับอุณหภูมิน้ำให้คงที่ เพื่อให้ซักผ้าได้อย่างเต็มประสิทธิภาพ

หมายเหตุ



หากเลือกโปรแกรมซักปกติ โปรแกรมซักนี้จะเป็นโปรแกรมแบบ UL ตามกฎข้อบังคับ เนื่องจากเครื่องซักผ้ารุ่นใหม่มุ่งเน้นที่จะลดปริมาณการใช้พลังงานเป็นสำคัญ ดังนั้นจะสังเกตได้ว่าจะมีปริมาณน้ำเย็นจ่ายเข้าเครื่องซักผ้ามากกว่า ซึ่งถือเป็นเรื่องปกติ ไม่ใช่ปัญหาแต่อย่างใด
ในการทำงานด้วยโปรแกรมนี้อุณหภูมิร้อนจะใกล้เคียงกับอุณหภูมิที่ผู้ใหญ่อาบ ส่วนอุณหภูมิอุ่นจะใกล้เคียงกับอุณหภูมิในสระว่ายน้ำ

หมายเหตุ

หากต้องการซักผ้าในอุณหภูมิเฉพาะ ควรเลือกโปรแกรมซักสำหรับแต่ละอุณหภูมิ (ร้อน/อุ่น)

โปรแกรมพื้นฐาน

โปรแกรมก่อนซัก (เครื่องฉีดน้ำและซิงค์ในตัว)

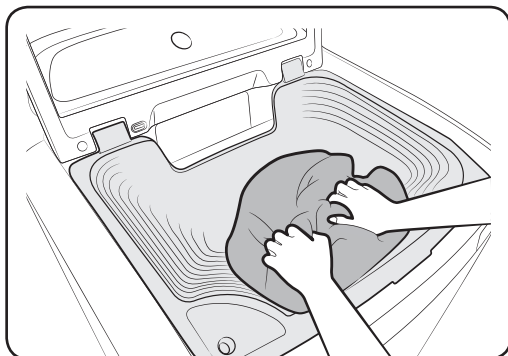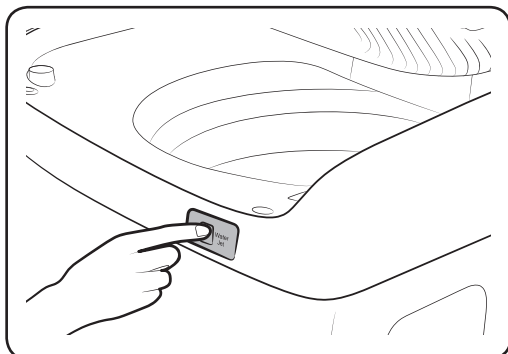

เครื่องฉีดน้ำและซิงค์ในตัวเป็นอุปกรณ์ช่วยการซักด้วยมือ ก่อนที่เครื่องจะทำงาน เครื่องฉีดน้ำจะทำงานเมื่อฝาเครื่องเปิด และระดับน้ำตั้งไว้ต่ำกว่าระดับสูงเท่านั้น เมื่อต้องการใช้โปรแกรมก่อนซัก โปรดใช้ซิงค์ในตัวซึ่งออกแบบมาเพื่อช่วยให้คุณซักมือได้สะดวกยิ่งขึ้น

1. เปิดฝาเครื่องแล้วเลื่อนซิงค์ลง วิธีเปิดเฉพาะฝาเครื่อง ให้กดตรงมุมขวาล่างของฝาเครื่อง แล้วปล่อยมือ วิธีปิดและล็อกทั้งฝาและซิงค์ ให้กดฝาเครื่องจนกว่าจะได้ยินเสียงดังคลิก
2. ใส่ผ้าลงไป
3. กดเครื่องฉีดน้ำเพื่อจ่ายน้ำเข้าซิงค์ แล้วซักมือ
4. เมื่อซักเสร็จ ยกซิงค์ขึ้นเพื่อระบายน้ำลงในถัง



หมายเหตุ

- หากต้องการซักมือขณะที่เครื่องกำลังทำงาน ให้กดปุ่มเริ่ม/พักเพื่อหยุดเครื่อง แล้วทำตามขั้นตอนที่ 1-4 ด้านบน
- ถ้าคุณเปิดทั้งฝาเครื่องและซิงค์ในตัว จะต้องเลื่อนซิงค์ลงเอง

[เครื่องฉีดน้ำหยุดทำงาน]

- เครื่องฉีดน้ำจะหยุดทำงานโดยอัตโนมัติ เมื่อเครื่องซักผ้าตรวจพบว่าน้ำในถังอยู่ที่ระดับสูงสุด
- เครื่องฉีดน้ำจะหยุดทำงานโดยอัตโนมัติ หลังจากทำงานไป 5 นาที หากต้องการเพิ่มน้ำ ให้กดที่เครื่องฉีดน้ำอีกครั้ง

การซักผ้า

[การระบายน้ำ]

- เลือกโปรแกรมซัก แล้วกดปุ่มเริ่ม/พัก เครื่องซักผ้าจะระบายน้ำที่ใช้ในรอบก่อนซัก
- ในกรณีที่ปิดเครื่องก่อนเริ่มซัก เครื่องจะระบายน้ำที่ใช้ในรอบก่อนซักออก แต่ถ้าปิดเครื่องระหว่างซัก จะไม่มีการระบายน้ำออก



หมายเหตุ

- เมื่อเปิดใช้งานระบบนี้ครั้งแรก หลังเปิดเครื่องซักผ้า เครื่องฉีดน้ำจะพ่นน้ำผ่านหัวฉีดของระบบกระจายละอองน้ำอยู่ 1 วินาที จากนั้นจะพ่นผ่านหัวฉีดของระบบฉีดน้ำ



ข้อควรระวัง

- อย่าใช้เครื่องฉีดน้ำพ่น้ำเพื่อ การใช้เครื่องฉีดน้ำบ่อยครั้งเกินไปจะทำให้เปลืองน้ำเพิ่มขึ้น
- เปิดน้ำใส่ถังเบาๆ มิฉะนั้น น้ำอาจล้นถังได้
- น้ำที่ออกจากถังซักอย่างระมัดระวัง ระวังอาจจะกระแทกซึ่งก็ได้
- อย่าใช้มือปิดรูฉีดน้ำ น้ำอาจไหลออกจากถังทำให้ระบบเสียหายได้
- ใส่เฉพาะผ้าที่ต้องการซักก่อนซักลงในถัง ห้ามใช้โปรแกรมก่อนซักกับรองเท้า อาหาร หรือสัตว์
- อย่ารีบเปิดถัง น้ำที่เหลือน้ำในถังอาจจะกระจายโดนผ้าเครื่องหรือแผงควบคุมได้
- เนื่องจากความแตกต่างของแรงดันอากาศ อาจมีน้ำพ่นออกจากรูฉีดน้ำเมื่อเปิดใช้งานครั้งแรก
- จะต้องปิดฝาให้แน่นก่อนซักผ้า

การใช้ผลิตภัณฑ์ซักผ้า

- ขอแนะนำให้ใช้ผลิตภัณฑ์ซักผ้าสำหรับผ้าขนที่มีคุณภาพดี
- ข้อควรปฏิบัติอื่นๆ:
 - ขจัดคราบก่อนซัก
 - แยกผ้าสี
 - แยกผ้าตามระดับความเปื้อน
 - หลีกเลี่ยงการซักผ้าเกินปริมาณที่กำหนด



หมายเหตุ

- ในกรณีที่ใช้ผงซักฟอก ควรละลายผงซักฟอกในน้ำอุ่นเพื่อให้ซักผ้าได้สะอาดหมดจด
- ใส่ผงซักฟอกละลายน้ำได้ทั้งในถังซักและถาดใส่ผลิตภัณฑ์ซักผ้า
- การลดปริมาณผลิตภัณฑ์ซักผ้า อาจทำให้ประสิทธิภาพในการทำทำความสะอาดสิ่งสกปรกลดลงได้

การชักผ้า

คุณสมบัติ

เครื่องจ่ายอัตโนมัติ


เครื่องชักผ้าไม่มีช่องแยกสำหรับใส่ผลิตภัณฑ์ชักผ้า สารฟอกขาวสำหรับผ้าสี และ น้ำยาปรับผ้านุ่ม ใส่ผลิตภัณฑ์ทั้งหมดลงในช่องตามประเภทผลิตภัณฑ์ ก่อนเริ่มชักผ้า ก่อนเดินเครื่องชักผ้า เครื่องจ่ายอัตโนมัติจะต้องอยู่ในตำแหน่งที่ถูกต้อง ห้ามเปิดเครื่องจ่ายอัตโนมัติ ในขณะที่เครื่องชักผ้ากำลังทำงาน



หมายเหตุ

- ห้ามใส่ผลิตภัณฑ์ชักผ้าเกินปริมาณที่แนะนำ
- ช่องนี้จะเก็บน้ำยาชักผ้าไว้สำหรับชักในรอบหลัก โดยจะปล่อยน้ำยาใส่ในผ้าเมื่อเครื่องเริ่มชัก
- ในกรณีที่ใช้ผงซักฟอก ให้เอาช่องใส่น้ำยาชักผ้าออกจากถาด เครื่องชักผ้าจะไม่จ่ายผงซักฟอกจากช่องใส่น้ำยาชักผ้า

วิธีใส่ผลิตภัณฑ์ซักผ้า:

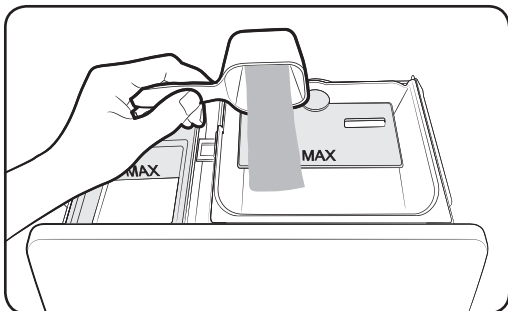

1. เปิดฝาด
2. ใส่น้ำยาซักผ้า (หรือผงซักฟอก) ในปริมาณที่แนะนำลงในช่อง ก่อนเริ่มซักผ้า
3. ค่อยๆ ปิดฝาดๆ เพื่อไม่ให้น้ำยาซักผ้า (หรือผงซักฟอก) หก กระจาย หรือเสียน้ำยาก่อนซัก


หมายเหตุ

ถือเป็นเรื่องปกติที่จะมีน้ำเหลือค้างอยู่ในช่องใส่ผลิตภัณฑ์ซักผ้าหลังซัก

หมายเหตุ

อย่าใส่สารฟอกขาวคลอรีนลงในช่องใส่ผลิตภัณฑ์ซักผ้า

การใส่น้ำยาซักผ้า (หรือผงซักฟอก)

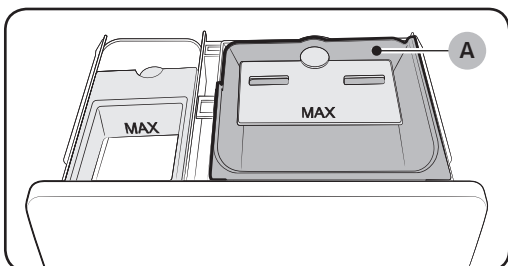

1. เทน้ำยาซักผ้าในปริมาณที่แนะนำลงในช่องใส่ผลิตภัณฑ์ซักผ้า ก่อนเดินเครื่องซักผ้า
2. ถ้าใช้สารฟอกขาวสำหรับผ้าสี ให้ใส่พร้อมกับน้ำยาซักผ้า

หมายเหตุ


เมื่อใส่สารฟอกขาวสำหรับผ้าสีพร้อมกับผลิตภัณฑ์ซักผ้า ควรใช้ผลิตภัณฑ์ทั้งสองในรูปแบบน้ำ เพื่อให้ผลดีที่สุด

หมายเหตุ

ในกรณีที่ใช้ผงซักฟอก ให้เอาช่องใส่น้ำยาซักผ้า (A) ออกจากฝาดใส่ผลิตภัณฑ์ซักผ้า เครื่องซักผ้าจะไม่จ่ายผงซักฟอกจากช่องใส่น้ำยาซักผ้า

การซักผ้า

การใส่น้ำยาปรับผ้านุ่ม

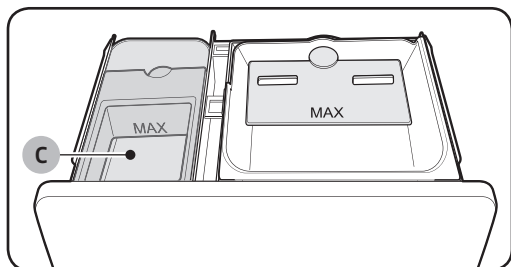

1. เทน้ำยาปรับผ้านุ่มในปริมาณที่แนะนำลงในช่องใส่ผลิตภัณฑ์ปรับผ้า
นุ่ม (C)
ในกรณีที่ซักผ้าปริมาณน้อย ให้ใช้น้อยกว่า 1 ฝา
2. ผสมน้ำให้เจือจาง ใส่น้ำจนถึงระดับสูงสุด
3. เครื่องจ่ายจะปล่อยน้ำยาปรับผ้านุ่มโดยอัตโนมัติเมื่อถึงรอบการล้างน้ำ



หมายเหตุ

- ช่องใส่ผลิตภัณฑ์ปรับผ้านุ่มนี้ใช้สำหรับใส่น้ำยาปรับผ้านุ่มเท่านั้น
- ห้ามใช้ใส่ลูกบอลดาวนี่ (Downy Ball*) ลูกบอลจะปล่อยน้ำยาปรับผ้า
นุ่มไม่ตรงกับรอบการล้างน้ำ
ให้ใส่ลูกบอลในช่องใส่ผลิตภัณฑ์ซักผ้า
(* ชื่อตราสินค้าคือเครื่องหมายการค้าของผู้ผลิตผลิตภัณฑ์นั้นๆ)
- ห้ามใส่น้ำยาปรับผ้านุ่มที่ข้นเกินไป เพราะน้ำยาอาจจะผสมกับน้ำได้ไม่ดี

การดูแลรักษาเครื่องซักผ้า

การทำความสะอาดภายนอก

1. ปิดก๊อกน้ำหลังจากซักผ้าเสร็จ
เพื่อไม่ให้ระบบจ่ายน้ำไปยังเครื่องซักผ้า และป้องกันความเสียหายที่อาจเกิดขึ้นจากน้ำที่ล้นล้นเข้าเครื่อง แม้มีโอกาสเกิดขึ้นยากก็ตาม เปิดฝาเครื่องทิ้งไว้ เพื่อให้ตัวเครื่องด้านในแห้ง
2. ใช้ผ้านุ่มเช็ดคราบผลิตภัณฑ์ซักผ้า สารฟอกขาว หรือคราบเปรอะเปื้อนอื่นๆ ออก
3. โปรดทำความสะอาดตามคำแนะนำ:
แผงควบคุม – ทำความสะอาดด้วยผ้านุ่มชุบน้ำหมาดๆ ห้ามใช้ผงขัดหรือแผ่นใยขัด ห้ามฉีดน้ำยาทำความสะอาดที่แผงควบคุมโดยตรง

การทำความสะอาดภายใน

หมั่นทำความสะอาดภายในเครื่องเป็นประจำ เพื่อขจัดสิ่งสกปรก ดิน กลิ่นเหม็น เชื้อรา เชื้อแบคทีเรียที่อาจอยู่ในเครื่องซักผ้าหลังซักผ้าได้ หากไม่ทำความสะอาดตามที่แนะนำ อาจทำให้เสื้อผ้าที่ซักหรือเครื่องซักผ้ามีกลิ่นเหม็นอับ และ/หรือมีคราบถาวรได้

หากต้องการกำจัดคราบตะกอนน้ำ ให้ใช้น้ำยาทำความสะอาดที่ระบุว่า “ใช้กับเครื่องซักผ้าได้”

การเก็บเครื่องซักผ้า

เครื่องซักผ้าอาจเสียหายได้ ถ้าไม่ระบายน้ำออกจากท่อน้ำและส่วนประกอบภายในก่อนจัดเก็บ
โปรดเตรียมเครื่องซักผ้าก่อนจัดเก็บ ตามขั้นตอนต่อไปนี้:

1. เลือกโปรแกรมหักเร็ว แล้วใส่สารฟอกขาวลงในเครื่องจ่ายอัตโนมัติ เดินเครื่องซักผ้าโดยไม่ต้องใส่ผ้าลงไป
2. ปิดก๊อกน้ำ แล้วถอดท่อน้ำออก
3. ถอดปลั๊กเครื่องซักผ้า และเปิดฝาเครื่องทิ้งไว้เพื่อให้อากาศหมุนเวียนภายในถึงซัก
หากเก็บเครื่องซักผ้าไว้ในบริเวณที่มีอุณหภูมิต่ำกว่าจุดเยือกแข็ง ให้นำน้ำที่เหลืค้างอยู่ในเครื่องละลายจนหมดก่อน จึงจะนำมาใช้งานได้

การดูแลรักษาเครื่องซักผ้า

การดูแลรักษาตัวเครื่องส่วนบนและโครงด้านหน้า

อย่าวางของหนัก ของมีคม หรือกล่องผงซักฟอกบนเครื่องซักผ้า อาจทำให้ส่วนบนของเครื่องเป็นรอยหรือเสียหายได้



หมายเหตุ

ตัวเครื่องเคลือบเงาพิเศษทั้งหมด ดังนั้นอาจเกิดรอยขีดข่วนหรือเกิดความเสียหายได้

โปรดระวังไม่ให้พื้นผิวเป็นรอยถลอกขีดข่วน ขณะใช้งาน


การทำความสะอาดซิงค์ในตัวและตัวกรองเศษด้าย

โปรดรักษาเครื่องซักผ้าให้สะอาดอยู่เสมอ เพื่อคงประสิทธิภาพการทำงานและให้มีอายุการใช้งานที่ยาวนาน


ซิงค์ในตัว

1. เปิดฝาแล้วใช้ผ้าหรือฟองน้ำทำความสะอาด
2. กดปุ่มฉีดน้ำเพื่อจ่ายน้ำลงบนกระดาน ใช้น้ำล้างทำความสะอาดกระดาน

ตัวกรองเศษด้าย

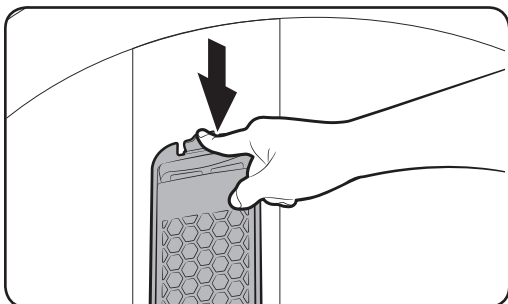


1. กดที่ครอบตัวกรองลงเพื่อถอดออก
2. ถอดฝาครอบ เปิดน้ำให้ไหลผ่านตัวกรองและใช้แปรงขัดทำความสะอาด

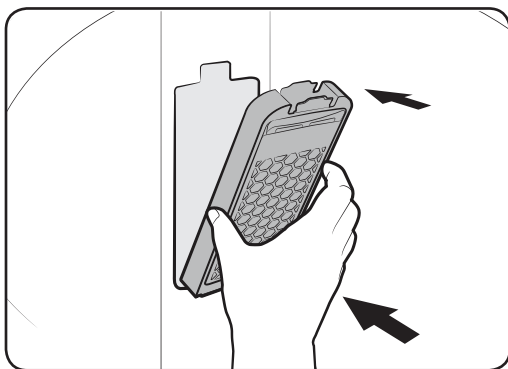


3. เมื่อทำความสะอาดเสร็จ ให้ปิดฝาและใส่ที่ครอบตัวกรองกลับเข้าที่เดิม หากใส่เข้า จะได้ยินเสียงดังคลิก

การทำความสะอาดเครื่องจ่ายอัตโนมัติ

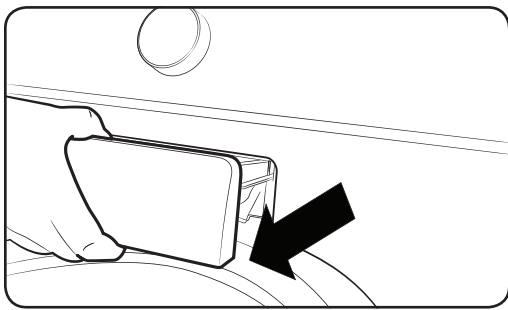


ควรทำความสะอาดเครื่องจ่ายอัตโนมัติเป็นประจำ เนื่องจากจะเกิดคราบสะสม
หลังการซักผ้าแต่ละครั้ง

1. ดึงถาดออกจนสุด

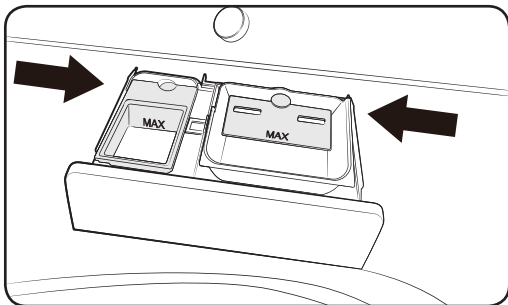


2. กดปลายถาดด้านข้างทั้งสองฝั่งพร้อมกัน
เมื่อรู้สึกว่ปลายถาดถูกกดเข้าไปแล้ว ให้ดึงถาดออก

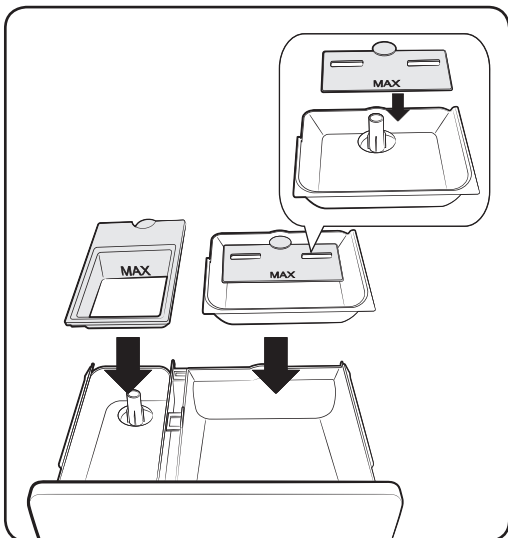


3. ถอดชิ้นส่วนด้านในออกจากช่องทั้งสาม ล้างชิ้นส่วนและถาดด้วยน้ำอุ่น
เพื่อขจัดคราบสะสม

รุ่นนี้ยังไม่แนะนำให้ใช้แบบ

การดูแลรักษาเครื่องซักผ้า

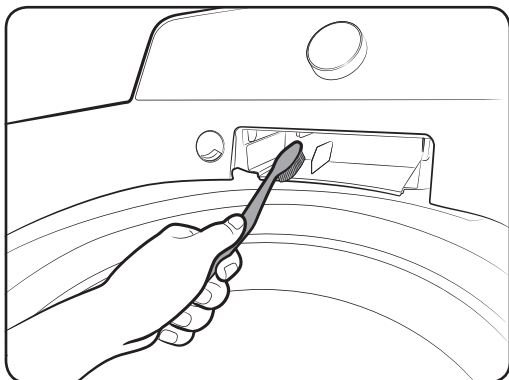


4. ใช้แปรงขนาดเล็กที่ไม่ได้ทำจากโลหะขัดตามซอกหลืบของช่องใส่ถาด ขจัดคราบต่างๆ ทั้งด้านบนและด้านล่างออกให้หมด

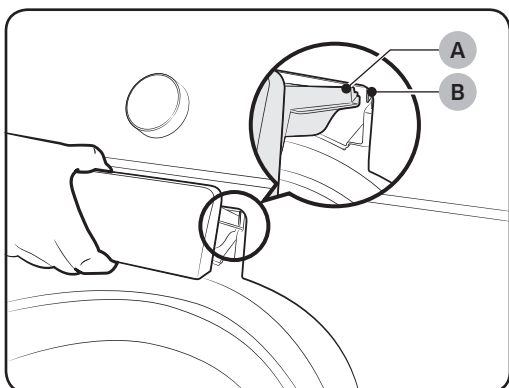

5. เก็บชิ้นส่วนทั้งหมดเข้าที่เดิมแล้วใส่ถาดกลับเข้าที่ โดยให้รางถาด (B) อยู่บนรางของช่องใส่ถาด (A) (เอียงถาดลงแล้วเสียบเข้าไป) ค่อยๆ ดันถาดกลับเข้าไป

โปรแกรมล้างถังซัก

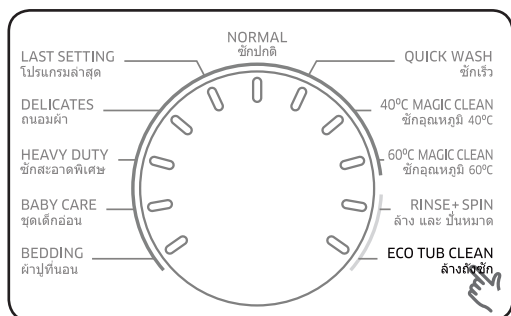

โปรแกรมล้างถังซักเป็นโปรแกรมล้างทำความสะอาดตัวเอง เพื่อขจัดเชื้อราที่อาจอยู่ในเครื่องซักผ้า

1. กดปุ่มเปิด/ปิด
2. เลือกโปรแกรมล้างถังซัก
เมื่อเลือกโปรแกรมล้างถังซักแล้ว จะสามารถใช้ฟังก์ชันตั้งเวลาสิ้นสุดได้เท่านั้น
3. กดปุ่มเริ่ม/พัก
โปรแกรมล้างถังซักจะเริ่มทำงาน

⚠ ข้อควรระวัง

- เมื่อใช้โปรแกรมล้างถังซัก คุณสามารถล้างถังซักได้โดยไม่ต้องใช้น้ำยาทำความสะอาด
- ห้ามใช้โปรแกรมล้างถังซัก เมื่อมีผ้าอยู่ในเครื่อง เพราะอาจทำให้ผ้าเสียหายหรือเครื่องเกิดปัญหาได้

ฟังก์ชันเตือนการล้างถังซักแบบอัตโนมัติ



- ถ้าสัญลักษณ์ ล้างถังซักสว่างขึ้นหลังซักผ้าเสร็จ แสดงว่าถึงเวลาทำความสะอาดถังซักผ้าแล้ว ให้เอาเสื้อผ้าออกจากเครื่อง เปิดเครื่องแล้วทำความสะอาดถังซักโดยเปิดโปรแกรมล้างถังซัก
- ถ้าไม่เปิดใช้โปรแกรมล้างถังซัก สัญลักษณ์ ล้างถังซักจะดับไปเอง แต่สัญลักษณ์ ล้างถังซักจะสว่างขึ้นอีก ถ้ามีการซักอีก 2 ครั้ง เครื่องจะไม่มีปัญหาใดๆ ถึงแม้ยังไม่เปิดใช้โปรแกรมล้างถังซักในตอนนี้
- แต่สัญลักษณ์ ล้างถังซักจะสว่างขึ้นประมาณเดือนละครั้ง ทั้งนี้ขึ้นอยู่กับจำนวนครั้งที่ใช้เครื่องซักผ้า

การแก้ไขปัญหา

จุดตรวจ

ถ้าคุณพบว่าเกิดปัญหากับเครื่องซักผ้า โปรดตรวจสอบที่ตารางด้านล่างนี้ก่อนและลองดำเนินการตามคำแนะนำ

ปัญหา	การดำเนินการ
เครื่องไม่เปิดทำงาน	<ul style="list-style-type: none"> ตรวจสอบว่ามีการจ่ายพลังงานตามฟิวส์ที่ถูกต้องสำหรับผลิตภัณฑ์ ตรวจสอบว่าเสียบปลั๊กเรียบร้อยแล้ว ตรวจสอบฟิวส์หรือเบรกเกอร์วงจร
เครื่องไม่เริ่มทำงาน	<ul style="list-style-type: none"> ตรวจสอบว่าประตูปิดอยู่ ตรวจสอบว่าก๊อกน้ำเปิดอยู่ ตรวจสอบให้แน่ใจว่าได้กดหรือแตะปุ่ม เริ่ม/พัก เพื่อเปิดใช้เครื่องซักผ้า ตรวจสอบให้แน่ใจว่าการ ล็อคป้องกันเด็ก ไม่ได้เปิดใช้งานอยู่ ก่อนที่เครื่องซักผ้าจะเริ่มเติมน้ำ จะได้ยินเสียงเครื่องดังคลิกๆ เสียงนี้แสดงว่าเครื่องกำลังตรวจสอบว่าฝาเครื่อง ล็อคอยู่หรือไม่ พร้อมระบายน้ำออกแบบรวดเร็ว ประตูเปิดอยู่ระหว่างรอบการปั่นหมาดหรือไม่ ปิดประตู จากนั้นกดปุ่ม เริ่ม/พัก เพื่อให้เครื่องทำงานต่อ เครื่องเข้าสู่โหมดสแตนด์บายหรืออยู่ในโปรแกรมแช่ผ้า โปรดรอสักครู่ ตรวจสอบฟิวส์หรือเบรกเกอร์วงจร
เครื่องไม่จ่ายน้ำ	<ul style="list-style-type: none"> โปรดกดหรือแตะ เริ่ม/พัก หลังจากเลือกการจ่ายน้ำ ตรวจสอบว่าก๊อกน้ำเปิดอยู่ ตะแกรงตัวกรองที่เชื่อมต่อท่อจ่ายน้ำมีสิ่งสกปรกอุดตันหรือไม่ ทำความสะอาดตัวกรอง โดยใช้แปรงสีฟันขัด น้ำไม่ไหลหรือไม่ ถ้าน้ำไม่ไหล ให้ปิดก๊อกน้ำและปิดเครื่อง จับให้ท่อจ่ายน้ำตรง เปิดและปิดประตู จากนั้นกดหรือแตะที่ปุ่ม เริ่ม/พัก หากแรงดันน้ำต่ำ เครื่องซักผ้าจะรอเป็นเวลานานขึ้น ก่อนที่จะเริ่มทำงาน ถ้าระดับน้ำไม่สูงพอที่ต้องการ หรือต่ำกว่าที่คาดหมาย ให้ใช้ตัวเลือกระดับน้ำเพื่อปรับระดับน้ำ
หลังจากจบรอบการทำงาน มีผงซักฟอกหลงเหลือในช่องจ่าย	<ul style="list-style-type: none"> ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ ตรวจสอบว่าใส่ช่องใส่ผงซักฟอกอย่างถูกต้องแล้ว นำช่องใส่ผงซักฟอกออกมาทำความสะอาด จากนั้นลองอีกครั้ง

ปัญหา	การดำเนินการ
มีการสั่นสะเทือนหรือเสียงมากผิดปกติ	<ul style="list-style-type: none"> ตรวจสอบว่าเครื่องตั้งอยู่บนพื้นที่ซึ่งราบเสมอกัน ถ้าพื้นที่ไม่เรียบเสมอกัน ให้ใช้ขาตั้งปรับระดับเพื่อปรับระดับ ตรวจสอบว่าเครื่องชักผ้าไม่ได้สัมผัสกับวัตถุอื่น ตรวจสอบว่าปริมาณผ้าอยู่ในถังอย่างสมดุล ตรวจสอบว่าผ้ากระจายอยู่ในถังอย่างสมดุล จัดให้ผ้ากระจายออก และเริ่มต้นใหม่ ตรวจสอบว่าพื้นที่รอบๆ เครื่องชักผ้าไม่มีสิ่งขวางอยู่ ระหว่างการทำงานจะมีเสียงซึ่งเป็นปกติ มีสิ่งของ เช่น เหรียญ ทำให้เกิดเสียง นำสิ่งของออกจากเครื่องชักผ้าหลังจากการชักเสร็จสิ้น
หยุดทำงาน	<ul style="list-style-type: none"> เสียบปลั๊กเข้ากับปลั๊กไฟที่มีไฟฟ้า ตรวจสอบฟิวส์หรือเบรกเกอร์วงจร ปิดประตู และกดหรือแตะที่ เริ่ม/พัก เพื่อเริ่มเครื่องชักผ้า เพื่อความปลอดภัย เครื่องชักผ้าจะไม่บันทึกค่าประตูไม่ปิดสนิท ก่อนที่เครื่องชักผ้าจะเริ่มเติมน้ำ จะได้ยินเสียงเครื่องดังคลิกๆ เสียงนี้แสดงว่าเครื่องกำลังตรวจสอบว่าผ้าเครื่องลือคอยู่หรือไม่ พร้อมระบายน้ำออกแบบรวดเร็ว อาจจะมีการหยุดการทำงานชั่วคราวหรือช่วงการแช่ผ้าในโปรแกรมการซัก รอสักครู่ และเครื่องชักผ้าอาจจะเริ่มทำงาน ตรวจสอบว่าตะแกรงตัวกรองของท่อน้ำไม่อุดตัน ทำความสะอาดตะแกรงนี้เป็นประจำ ปัญหานี้เกิดขึ้นชั่วคราวเนื่องจากแรงดันไฟฟ้าต่ำและจะหายไปเมื่อพลังงานไฟฟ้ากลับมาเป็นปกติ
ใช้คุณสมบัติของน้ำไม่ถูกต้อง	<ul style="list-style-type: none"> เปิดก๊อกน้ำทั้งสองก๊อกอย่างเต็มที่ ตรวจสอบว่ามีการเลือกอุณหภูมิถูกต้อง ตรวจสอบว่าท่อเชื่อมต่อกับก๊อกน้ำอย่างถูกต้อง ล้างแนวท่อน้ำ ถอดสายและทำความสะอาดตัวกรอง ตัวกรองท่อน้ำอาจอุดตัน ในขณะที่เครื่องชักผ้าทำงาน อุณหภูมิของน้ำอาจมีการเปลี่ยนแปลงขณะที่ส่วนควบคุมอุณหภูมิอัตโนมัติตรวจสอบอุณหภูมิของน้ำที่ไหลเข้ามา นี่เป็นเรื่องปกติ ในขณะที่เครื่องชักผ้าทำงาน คุณอาจสังเกตเห็นร้อนและ/หรือน้ำเย็นเล็กน้อยไหลผ่านตัวจ่ายเมื่อเลือกอุณหภูมิเย็นหรืออุ่น <p>นี่เป็นฟังก์ชันปกติของคุณสมบัติการควบคุมอุณหภูมิอัตโนมัติในขณะที่เครื่องชักผ้ากำหนดอุณหภูมิของน้ำ</p>

การแก้ไขปัญหา

ปัญหา	การดำเนินการ
ประตู(ฝาปิด)ล็อกและไม่สามารถเปิดได้	<ul style="list-style-type: none"> ขณะที่เครื่องกำลังทำงาน ให้กดหรือแตะ เริ่ม/พัก เพื่อหยุดการทำงานของเครื่อง อาจต้องใช้เวลาลักครู่เพื่อให้กลไกล็อกประตูปลดล็อก
ไม่ปล่อยน้ำทิ้งและ/หรือปั่น	<ul style="list-style-type: none"> ตรวจสอบฟิวส์หรือเบรกเกอร์วงจร ตรวจสอบว่าระดับแรงดันไฟฟ้าเป็นปกติ ตรวจสอบว่าเสียบปลั๊กเรียบร้อยแล้ว ตรวจสอบว่าท่อระบายน้ำทิ้งซีล (เฉพาะรุ่นที่ระบายน้ำด้วยวิธีปกติ) ตรวจสอบว่าท่อระบายน้ำไม่จับตัวเป็นน้ำแข็งหรืออุดตัน ตรวจสอบว่าท่อระบายน้ำทิ้งไม่หักงอ ทำให้ท่อน้ำทิ้งตรง ถ้าไม่สามารถระบายน้ำตามปกติ โปรดติดต่อขอรับบริการ ปิดประตู จากนั้นกดหรือแตะที่ปุ่ม เริ่ม/พัก เพื่อความปลอดภัย เครื่องซักผ้าจะไม่ปั่นหมาดถ้าประตูไม่ปิดสนิท
ผ้าที่ซักยังเปียกอยู่ในตอนสิ้นสุดโปรแกรมการซัก	<ul style="list-style-type: none"> ใช้ความเร็วในการปั่นแบบความเร็วสูงหรือความเร็วสูงพิเศษ (เฉพาะรุ่นที่ใช้ได้เท่านั้น) ใช้ผงซักฟอกชนิดประสิทธิภาพสูง (HE) เพื่อลดการมีฟองมากเกินไป ปริมาณผ้าซักมีน้อยเกินไป ปริมาณผ้าซักมีน้อย (หนึ่งหรือสองชิ้น) อาจทำให้เกิดความไม่สมดุลและการปั่นไม่สมบูรณ์
น้ำรั่ว	<ul style="list-style-type: none"> ตรวจสอบว่าการต่อท่อทั้งหมดแน่นหนาดี ตรวจสอบว่าวัสดุยางของท่อจ่ายน้ำอยู่ในตำแหน่งที่ถูกต้อง หมุนให้แน่นอีกครั้ง ตรวจสอบว่าท่อน้ำทิ้งใส่กันอย่างถูกต้องและระบบท่อระบายน้ำมีความแน่นหนา หลีกเลี่ยงการใส่ผ้ามากเกินไป ใช้ผงซักฟอกชนิดประสิทธิภาพสูง (HE) เพื่อป้องกันการมีฟองมากเกินไป ตรวจสอบว่าท่อจ่ายน้ำไม่บิดงอ ถ้าแรงดันน้ำมากเกินไป น้ำอาจรั่วได้ ปิดก๊อกน้ำลงเล็กน้อย ตรวจสอบว่าน้ำไม่ได้รั่วไหลจากก๊อกน้ำ ถ้ามีการรั่วไหล ให้ซ่อมก๊อกน้ำ
ฟองผงซักฟอกมากเกินไป	<ul style="list-style-type: none"> ใช้ผงซักฟอกชนิดประสิทธิภาพสูง (HE) เพื่อป้องกันการมีฟองมากเกินไป ลดปริมาณผงซักฟอกสำหรับน้ำอ่อน ปริมาณผ้าซักน้อยหรือผ้าที่ซักสกปรกไม่มาก ไม่แนะนำให้ใช้ผงซักฟอกชนิดไม่มีประสิทธิภาพสูง (Non-HE detergent)



ปัญหา	การดำเนินการ
ถังปั่นหมาดหรือท่อระบายน้ำ/จ่ายน้ำ เกาะตัวเป็นน้ำแข็ง	<ul style="list-style-type: none"> ใช้น้ำอุ่นหรือถอดท่อจ่ายน้ำและท่อระบายน้ำออก นำไปแช่ในน้ำอุ่น เติมน้ำอุ่นในถังปั่นหมาด จากนั้นรอประมาณ 10 นาที วางผ้าชุบน้ำร้อนบนข้อต่อของท่อระบายน้ำทั้ง ต่อท่อจ่ายน้ำและท่อระบายน้ำกลับเข้าที่ จากนั้นตรวจสอบว่ามีการจ่ายน้ำอย่างถูกต้องแล้วหรือไม่
น้ำไหลออกจากถังทันที	<ul style="list-style-type: none"> ตรวจสอบว่าท่อระบายน้ำไม่อุดตัน และแขวนไว้ด้วยตะขอเกี่ยวท่อระบายน้ำ ใส่น้ำในถังปั่นประมาณครึ่งถัง และลองปั่นอีกครั้ง ยกปลายท่อน้ำทั้งขึ้น เพื่อป้องกันไม่ให้น้ำไหลออก เติมน้ำในถังปั่นประมาณครึ่งถัง จากนั้นเปิดใช้การปั่นหมาดหลังจากปล่อยท่อระบายน้ำกลับที่เดิม ตรวจสอบว่าได้ติดตั้งท่อระบายน้ำทั้งอย่างถูกต้อง ดูหัวข้อการติดตั้งของคู่มือผู้ใช้นี้ และปรับตำแหน่งของท่อระบายน้ำตามคำแนะนำ
มีรอยเปื้อนที่ผ้า	<ul style="list-style-type: none"> ทำความสะอาดตัวกรองเมจิ
มีกลิ่นไม่พึงประสงค์	<ul style="list-style-type: none"> ฟองที่มากเกินไปอาจฝังตัวในซอกและทำให้เกิดกลิ่นไม่พึงประสงค์ ทำความสะอาดเครื่องเป็นระยะเพื่อฆ่าเชื้อ เช็ดภายในเครื่องซักผ้าให้แห้ง หลังจากรอบทำความสะอาดเสร็จสิ้น

ถ้าปัญหายังคงอยู่ โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่

การแก้ไขปัญหา

รหัสข้อมูล

เครื่องซักผ้าอาจแสดงรหัสหรือสัญลักษณ์เพื่อช่วยให้คุณเข้าใจการทำงานหรือปัญหาที่เกิดขึ้นได้ดียิ่งขึ้น

หมายเลข	รหัส	การดำเนินการ
1	1C	<p>เซ็นเซอร์ระดับน้ำไม่ทำงานอย่างถูกต้อง</p> <ul style="list-style-type: none"> ตรวจสอบสายเซ็นเซอร์ระดับน้ำ หากรหัสข้อมูลยังคงปรากฏ ให้ติดต่อศูนย์บริการลูกค้า <p> หมายเหตุ</p> <p>เมื่อเครื่องซักผ้าแสดงรหัส "1C" เครื่องซักผ้าจะระบายน้ำทิ้งเป็นเวลา 3 นาที ในช่วงเวลานี้ ปุ่มเปิดปิดจะใช้งานไม่ได้</p>
2	3C	<p>ตรวจสอบมอเตอร์สำหรับการทำงาน</p> <ul style="list-style-type: none"> ลองรีเซ็ตโปรแกรมการซักใหม่ หากยังคงมีปัญหาอยู่ ให้ติดต่อฝ่ายบริการ
3	4C	<p>น้ำไม่เข้าเครื่อง</p> <ul style="list-style-type: none"> ตรวจสอบว่าก๊อกน้ำเปิดอยู่ ตรวจสอบว่าท่อน้ำไม่อุดตัน ตรวจสอบว่าท่อน้ำจะไม่แข็งตัวเป็นน้ำแข็ง ตรวจสอบว่าเครื่องซักผ้ามีการทำงานด้วยแรงดันน้ำเพียงพอ ตรวจสอบว่าก๊อกน้ำเย็นและน้ำร้อนการเชื่อมต่ออย่างถูกต้อง ทำความสะอาดตาข่ายกรองที่อาจอุดตัน <p> หมายเหตุ</p> <p>เมื่อเครื่องซักผ้าแสดงรหัส "4C" เครื่องซักผ้าจะระบายน้ำทิ้งเป็นเวลา 3 นาที ในช่วงเวลานี้ ปุ่มเปิดปิดจะใช้งานไม่ได้</p>
4	4C2	<ul style="list-style-type: none"> ตรวจสอบว่าท่อน้ำเย็นท่อน้ำร้อนมีการเชื่อมต่อที่แน่นหนาต่อกับก๊อกน้ำเย็น หากมีการเชื่อมต่อกับก๊อกน้ำร้อน ผ้าซักอาจมีการเสียรูปทรงในบางโปรแกรมการซัก
5	5C	<p>ไม่ระบายน้ำทิ้ง</p> <ul style="list-style-type: none"> ตรวจสอบว่าท่อระบายน้ำไม่จับตัวเป็นน้ำแข็งหรืออุดตัน ตรวจสอบว่าท่อระบายน้ำอยู่ในตำแหน่งที่ถูกต้อง ทั้งนี้ขึ้นอยู่กับประเภทการเชื่อมต่อ ทำความสะอาดตะแกรงที่อาจอุดตัน ตรวจสอบว่าท่อระบายน้ำทอดตรงไปตลอดทางจนถึงท่อระบายน้ำ หากรหัสข้อมูลยังคงปรากฏ ให้ติดต่อศูนย์บริการลูกค้า

หมายเลข	รหัส	การดำเนินการ
6	9C1	<p>ต้องมีการตรวจสอบระบบควบคุมอิเล็กทรอนิกส์ (ข้อผิดพลาดจากแรงดันไฟฟ้าเกิน)</p> <ul style="list-style-type: none"> ตรวจสอบ PCB และการเดินสาย ตรวจสอบว่าไฟฟ้ามีการจ่ายไฟตามปกติ หากรหัสข้อมูลยังคงปรากฏ ให้ติดต่อศูนย์บริการลูกค้า
7	9C2	<p>ตรวจพบแรงดันกระแสไฟฟ้าต่ำ</p> <ul style="list-style-type: none"> ตรวจสอบว่ามีการเสียบปลั๊กสายไฟ หากรหัสข้อมูลยังคงปรากฏ ให้ติดต่อศูนย์บริการลูกค้า
8	AC6	<p>ปัญหาการสื่อสารของอินเวอร์เตอร์</p> <ul style="list-style-type: none"> ตรวจสอบ PCB อินเวอร์เตอร์และการยึดโยงสาย หากรหัสข้อมูลยังคงปรากฏ ให้ติดต่อศูนย์บริการลูกค้า
9	dC	<p>เครื่องซักผ้าทำงานขณะประตูเปิด</p> <ul style="list-style-type: none"> ตรวจสอบว่าประตูถูกปิดอย่างถูกต้อง ตรวจสอบว่าผ้าไม่ติดกับประตู
10	HC	<p>ตรวจสอบอุณหภูมิความร้อนสูง</p> <ul style="list-style-type: none"> หากรหัสข้อมูลยังคงปรากฏ ให้ติดต่อศูนย์บริการลูกค้า
11	LC	<p>ตรวจสอบท่อระบายน้ำ</p> <ul style="list-style-type: none"> ตรวจสอบว่าปลายท่อระบายน้ำที่วางอยู่บนพื้น ตรวจสอบว่าท่อระบายน้ำไม่จับตัวเป็นน้ำแข็งหรืออุดตัน หากรหัสข้อมูลยังคงปรากฏ ให้ติดต่อศูนย์บริการลูกค้า <p> หมายเหตุ</p> <p>เมื่อเครื่องซักผ้าแสดงรหัส "LC" เครื่องซักผ้าจะระบายน้ำทิ้งเป็นเวลา 3 นาที ในช่วงเวลานี้ ปุ่มเปิดปิดจะใช้งานไม่ได้</p>
12	OC	<p>ระดับน้ำสูงเกิน</p> <ul style="list-style-type: none"> รีเซ็ตหลังจากการปั่น หากรหัสข้อมูลยังคงปรากฏบนจอแสดงผล ให้ติดต่อศูนย์บริการลูกค้าของซัมซุงในท้องถิ่น
13	PC	<p>เมื่อไม่สามารถตรวจหาตำแหน่งของคลัตช์</p> <ul style="list-style-type: none"> หากรหัสข้อมูลยังคงปรากฏ ให้ติดต่อศูนย์บริการลูกค้า
14	PC1	<p>หลังจากตรวจพบตำแหน่งของคลัตช์ ถ้าสัญญาณของห้องคลัตช์ผิดพลาด</p> <ul style="list-style-type: none"> หากรหัสข้อมูลยังคงปรากฏ ให้ติดต่อศูนย์บริการลูกค้า

การแก้ไขปัญหา

หมายเลข	รหัส	การดำเนินการ
15	Ub	<p>การปั่นไม่ทำงาน</p> <ul style="list-style-type: none">• ตรวจสอบว่าผ้าซักรูถูกกระจายออกเท่าๆ กัน• ตรวจสอบว่าเครื่องซักผ้าตั้งอยู่บนพื้นผิวที่เรียบ มั่นคง• กระจายผ้าซักรูใหม่ หากต้องการซักผ้าเพียงชิ้นเดียว เช่น เสื้อคลุมอาบน้ำหรือกางเกงยีนส์ การปั่นครั้งสุดท้ายอาจให้ผลไม่เป็นที่น่าพอใจและข้อความ "Ub" จะปรากฏที่จอแสดงผล

สำหรับรหัสหรือสัญลักษณ์ที่ไม่ได้แสดงไว้ด้านบน โปรดสอบถามได้ที่ 0-2689-3232 หรือ 1800-29-3232

ข้อมูลจำเพาะ

ฟังก์ชันการดูแลผ้า

สัญลักษณ์ต่อไปนี้เป็นการดูแลผ้า จลาการดูแลผ้าประกอบด้วย สัญลักษณ์อย่างตามลำดับ: การซัก การฟอกขาว การอบแห้ง และการรีด (ตลอดจนการซักแห้ง ถ้าจำเป็น) การใช้สัญลักษณ์ช่วยให้มีความสม่ำเสมอระหว่างผู้ผลิตเสื้อผ้าแต่ละรายทั้งสำหรับผ้าในประเทศและผ้าที่นำเข้า โปรดปฏิบัติตามจลาการดูแลเพื่อยืดอายุการใช้งานของผ้าและลดปัญหาในการซัก

โปรแกรมซัก

	ซักปกติ
	ไม่ต้องรีด/ยับยาก
	บอบบาง/ถนอมผ้า
	ซักมือ

อุณหภูมิน้ำ

...	น้ำร้อน
..	น้ำอุ่น
.	ปกติ

หมายเหตุ

อุณหภูมินี้เป็นอุณหภูมิที่เหมาะสมกับการซักผ้าแบบต่างๆ ระดับอุณหภูมิ น้ำร้อนคือ 105 - 125 °F / 41 - 52 °C น้ำอุ่น 85 - 105 °F / 29 - 41 °C และน้ำเย็น 60 - 85 °F / 16 - 29 °C (อุณหภูมิที่ต่ำสุดจะต้องอยู่ที่ 60 °F / 16 °C เพื่อให้ผงซักฟอกทำงาน และทำความสะอาดได้เต็มประสิทธิภาพ) เครื่องซักผ้าอาจปรับให้น้ำมีอุณหภูมิตามนี้ไม่ได้ เนื่องจากอุณหภูมิจริงของน้ำที่จ่ายเข้ามาในเครื่องนั้นขึ้นอยู่กับที่ตั้งค่าเครื่องทำน้ำร้อน และอุณหภูมิของน้ำในเขตพื้นที่นั้น เช่น น้ำเย็นที่จ่ายเข้าบ้านเรือนในรัฐทางตอนเหนือในช่วงฤดูหนาวอาจมีอุณหภูมิ 40 °F / 4 °C ซึ่งเย็นเกินกว่าที่จะซักผ้าได้สะอาดหมดจด ในกรณีนี้ คุณจะต้องปรับอุณหภูมิโดยเลือกการตั้งค่าน้ำอุ่น เติมน้ำร้อนลงไปจนถึงเส้นสูงสุด หรือเลือกใช้ระบบทำความร้อนของเครื่องซักผ้า หากมี

สารฟอกขาว

	สารฟอกขาวประเภทไหนก็ได้ (เมื่อจำเป็นต้องใช้)
	เฉพาะสารฟอกขาวสำหรับผ้าสี ที่ไม่ผสมคลอรีนเท่านั้น (เมื่อจำเป็นต้องใช้)
	ใช้เครื่องอบผ้า

ปกติ

	ไม่ต้องรีด/ยับยาก
	บอบบาง/ถนอมผ้า

คำแนะนำพิเศษ




	ตากบนราว/แขวนตาก
	ตากโดยไม่บิด
	ตากราบ

การตั้งค่าความร้อน



	สูง
	กลาง
	ต่ำ
	ความร้อนระดับใดก็ได้
	ไม่ใช้ความร้อนอากาศ

ข้อมูลจำเพาะ






อุณหภูมิในการรีดหรือรีดด้วยไอน้ำ

	สูง
	กลาง
	ต่ำ

สัญลักษณ์การดูแลเสื้อผ้า

	ห้ามซัก
	ห้ามบดผ้า
	ห้ามใช้สารฟอกขาว
	ห้ามใช้เครื่องอบ
	ห้ามใช้ไอน้ำ (กับเตารีด)
	ห้ามรีด

ซักแห้ง


	ซักแห้ง
	ห้ามซักแห้ง
	ตากบนราว/แขวนตาก
	ตากโดยไม่บิด
	ตากราบ

การปกป้องสิ่งแวดล้อม

- อุปกรณ์นี้ได้รับการผลิตจากวัสดุรีไซเคิล หากต้องการทิ้งอุปกรณ์นี้ โปรดปฏิบัติตามระเบียบการทิ้งขยะของพื้นที่ ตัดสายไฟ เพื่อป้องกันไม่ให้เกิดการต่อสายไฟกับเครื่องใช้ไฟฟ้าอื่นอีก ถอดประตูดอก เพื่อป้องกันไม่ให้สัตว์หรือเด็กติดอยู่ภายใน
- อย่าใช้ผงซักฟอกเกินปริมาณที่แนะนำโดยผู้ผลิตผงซักฟอก
- ใช้สารขจัดคราบและสารฟอกขาวก่อนการซักเฉพาะเมื่อจำเป็นเท่านั้น
- ประหยัดน้ำและไฟฟ้าโดยซักเต็มถัง (ปริมาณผ้าขึ้นอยู่กับโปรแกรมที่ใช้)

ข้อมูลจำเพาะ

ข้อมูลจำเพาะ

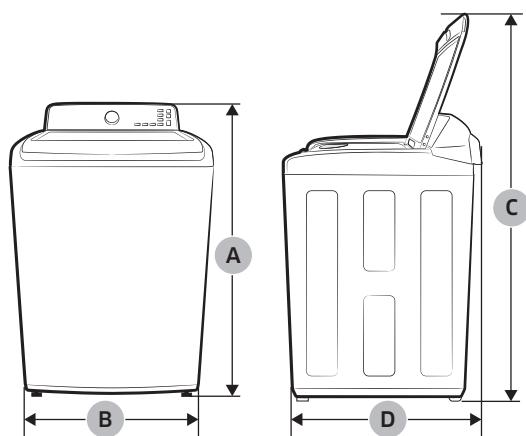

ประเภท		เครื่องซักผ้าฝาบน	
ขนาด (นิ้ว (ซม.))	A. ความสูง	45.1 (114.5)	
	B. ความกว้าง	27.0 (68.6)	
	C. ความสูงเมื่อเปิดฝา	59.8 (152.0)	
	D. ความลึก	29.3 (74.4)	
ความจุ (กก.)		21.0	
แรงดันน้ำ (psi (kPa))		20 - 116 (137 - 800)	
น้ำหนักสุทธิ (กก.)		68	
การใช้พลังงานไฟฟ้า		220 โวลต์	1400 วัตต์
อัตราการหมุนปั่น		800 รอบต่อนาที	

แผนผังโปรแกรมซัก

ใช้แผนผังนี้ในการตั้งค่าโปรแกรมและตัวเลือกที่เหมาะสมที่สุดในการซักผ้าของคุณ

 **หมายเหตุ**

การตั้งค่า	ระดับน้ำ		อุณหภูมิ	ซักมือ+ซักเครื่อง
●: การตั้งค่าจากโรงงาน	1	5	H: น้ำร้อน	ระบายน้ำออก
●: สามารถเลือกได้	2	6	W: น้ำอุ่น	เก็บน้ำเพื่อใช้ต่อ
	3	7	C: ปกติ	
	4			

โปรแกรมซักผ้า	ระดับน้ำ							อุณหภูมิ		
	1	2	3	4	5	6	7	H	W	C
ซักปกติ	●	●	●	●	●	●	●	●	●	●
ถนอมผ้า	●	●	●	●	●	●	●		●	●
ซักสะอาดพิเศษ	●	●	●	●	●	●	●	●	●	●
ชุดเด็กอ่อน	●	●	●	●	●	●	●	●	●	●
ผ้าปูที่นอน	●	●	●	●	●	●	●	●	●	●
ซักเร็ว	●	●	●	●	●	●	●	●	●	●
ซักอุณหภูมิ 40°C	●	●	●	●				●	●	●
ซักอุณหภูมิ 60°C	●	●	●	●				●	●	●
ล้าง และ ปั่นหมาด	●	●	●	●	●	●	●	●	●	●
ล้างถังซัก					●				●	

ข้อมูลจำเพาะ

โปรแกรมซักผ้า	ตัวเลือกการทำงาน						
	ซักมือ+ซักเครื่อง		โปรแกรมล่าสุด	ตั้งเวลาสิ้นสุด	ซัก	ล้างน้ำ	รอบปั่น
	เก็บน้ำเพื่อใช้ต่อ	ระบายน้ำออก					
ซักปกติ	●	●	●	●	●	●	●
ถนอมผ้า	●	●	●	●			
ซักสะอาดพิเศษ	●	●	●	●	●	●	●
ชุดเด็กอ่อน	●	●	●	●	●	●	●
ผ้าปูที่นอน	●	●	●	●	●	●	●
ซักเร็ว	●	●	●	●	●	●	●
ซักอุณหภูมิ 40°C	●	●	●	●	●	●	●
ซักอุณหภูมิ 60°C	●	●	●	●	●	●	●
ล้าง และ ปั่นหมาด	●	●	●	●		●	●
ล้างถังซัก	●	●		●			

บันทึก



ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support

